

JVC



SERVICE MANUAL

AUDIO/VIDEO CONTROL RECEIVER

RX-5022VSL

Area suffix

US ----- Singapore

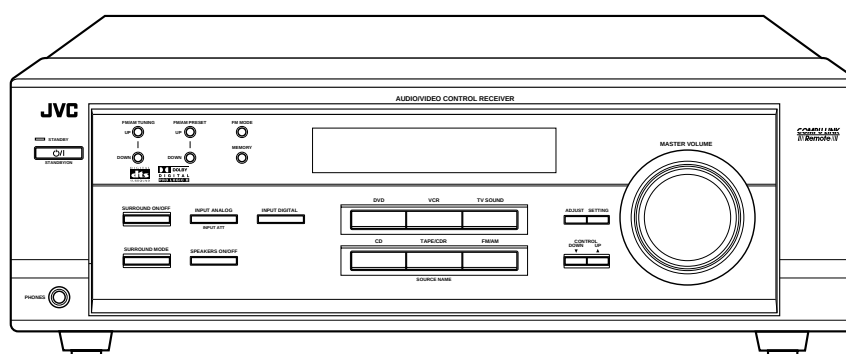

COMPU LINK
Remote

DIGITAL
ds
SURROUND

DOLBY
DIGITAL
PRO LOGIC II

Contents

Safety precautions	1-2
Disassembly method	1-3
Adjustment method	1-8
Description of major ICs	1-10~23

Safety Precautions

1. This design of this product contains special hardware and many circuits and components specially for safety purposes. For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Services should be performed by qualified personnel only.
2. Alterations of the design or circuitry of the product should not be made. Any design alterations of the product should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacture of responsibility for personal injury or property damage resulting therefrom.
3. Many electrical and mechanical parts in the products have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the Parts List of Service Manual. Electrical components having such features are identified by shading on the schematics and by (Δ) on the Parts List in the Service Manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement parts shown in the Parts List of Service Manual may create shock, fire, or other hazards.
4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard. When service is required, the original lead routing and dress should be observed, and it should be confirmed that they have been returned to normal, after re-assembling.
5. Leakage current check (Electrical shock hazard testing)

After re-assembling the product, always perform an isolation check on the exposed metal parts of the product (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.


Do not use a line isolation transformer during this check.

- Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal parts of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5mA AC (r.m.s.).

- Alternate check method

Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having, 1,000 ohms per volt or more sensitivity in the following manner. Connect a 1,500 Ω 10W resistor paralleled by a 0.15 μ F AC-type capacitor between an exposed metal part and a known good earth ground. Measure the AC voltage across the resistor with the AC voltmeter.

Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Voltage measured any must not exceed 0.75 V AC (r.m.s.). This corresponds to 0.5 mA AC (r.m.s.).

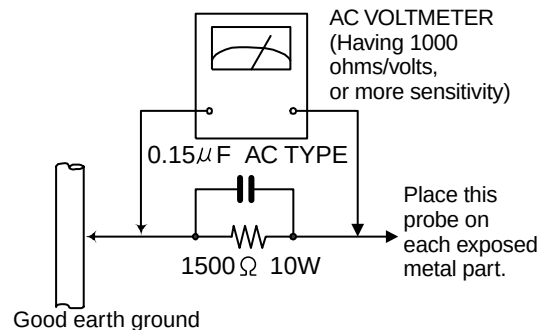

Warning

1. This equipment has been designed and manufactured to meet international safety standards.
2. It is the legal responsibility of the repairer to ensure that these safety standards are maintained.
3. Repairs must be made in accordance with the relevant safety standards.
4. It is essential that safety critical components are replaced by approved parts.
5. If mains voltage selector is provided, check setting for local voltage.

CAUTION

Burrs formed during molding may be left over on some parts of the chassis. Therefore, pay attention to such burrs in the case of preforming repair of this system.


In regard with component parts appearing on the silk-screen printed side (parts side) of the PWB diagrams, the parts that are printed over with black such as the resistor (■), diode (▣) and ICP (●) or identified by the " Δ " mark nearby are critical for safety.

(This regulation does not correspond to J and C version.)

Disassembly method


■ Removing the top cover (See Fig.1)

1. Remove the four screws A attaching the top cover on both sides of the body.
2. Remove the three screws B on the back of the body.
3. Remove the top cover from behind in the direction of the arrow while pulling both sides outward.

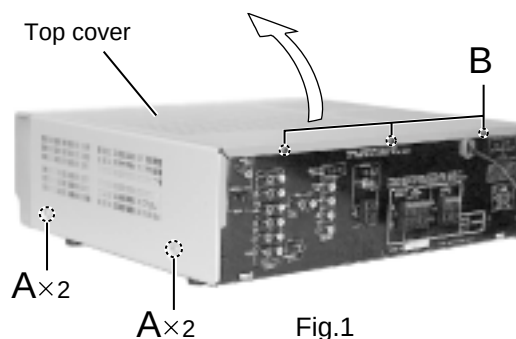



■ Removing the front panel assembly (See Fig.2 and 3)

- Prior to performing the following procedure, remove the top cover.
1. Disconnect the card wire from connector CN402 on the audio board and CN201 on the power supply board in the front panel assembly.
 2. Cut off the tie band fixing the harness.
 3. Remove the three screws C attaching the front panel assembly.
 4. Remove the four screws D attaching the front panel assembly on the bottom of the body. Detach the front panel assembly toward the front.

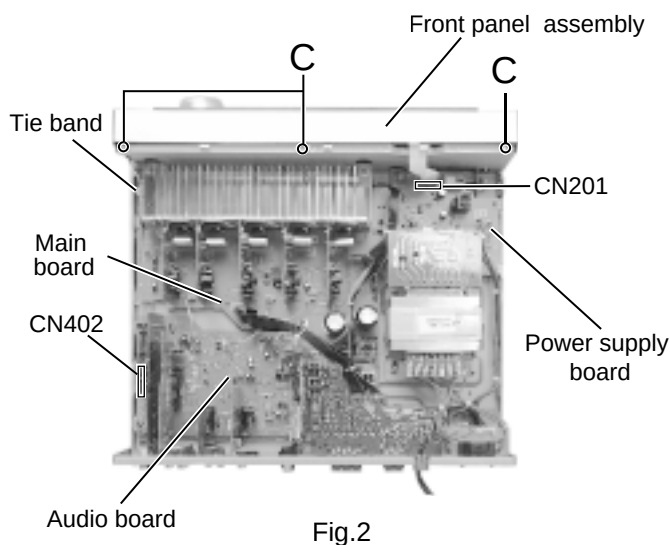

■ Removing the rear panel (See Fig.4)

- Prior to performing the following procedure, remove the top cover.
1. Remove the power cord stopper from the rear panel by moving it in the direction of the arrow.
 2. Remove the nineteen screws E attaching the audio input board, DVD board, video board and tuner board to the rear panel on the back of the body.
 3. Remove the four screws F attaching the rear panel on the back of the body.

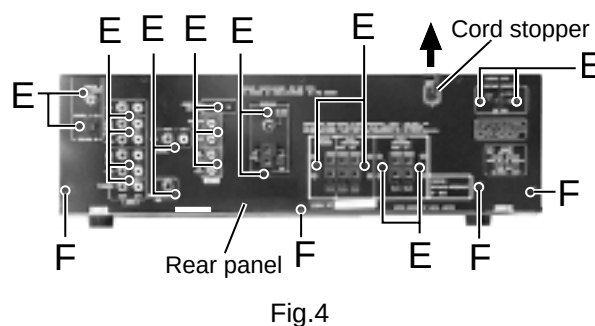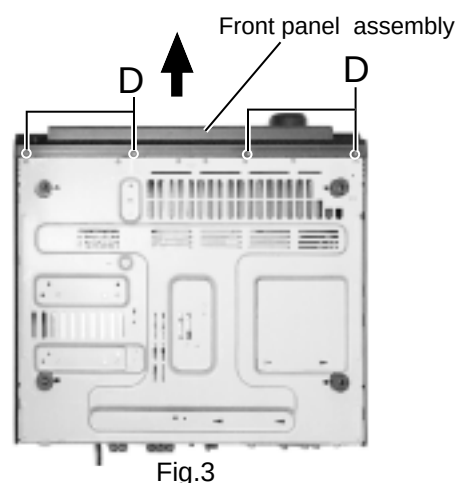

■ **Removing the digital signal board / audio input board / DVD board / video board and tuner board on the audio board**
(See Fig.5 to 8)

- Prior to performing the following procedure, remove the top cover and the rear panel.

1. Cut off the tie band fixing the harness.
2. Disconnect the digital signal board from connector CN481 on the audio board.
3. Disconnect the audio input board, DVD board and the video board from connector CN421, CN431 and CN441 on the audio board.
4. Disconnect the tuner board from connector CN411 on the audio board.

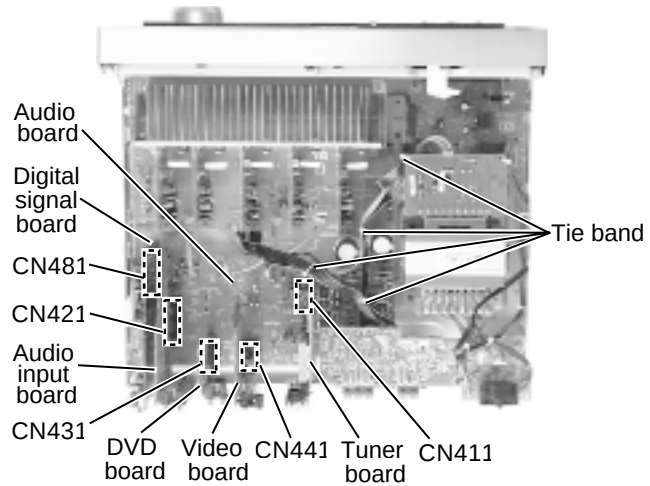


Fig.5

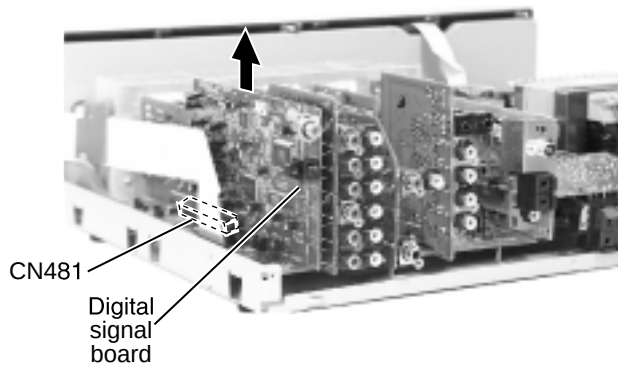


Fig.6

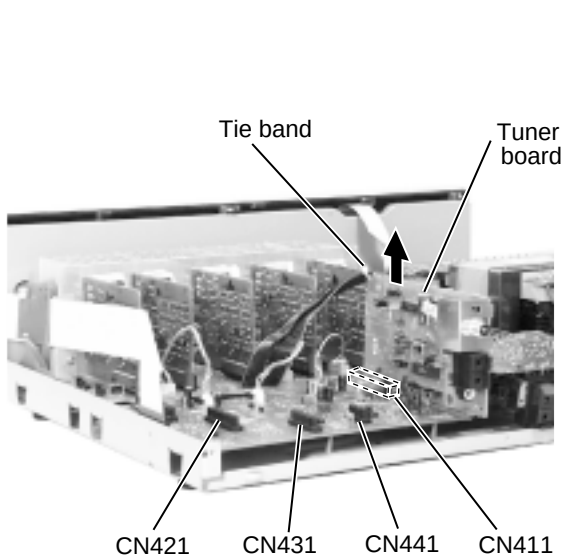


Fig.8

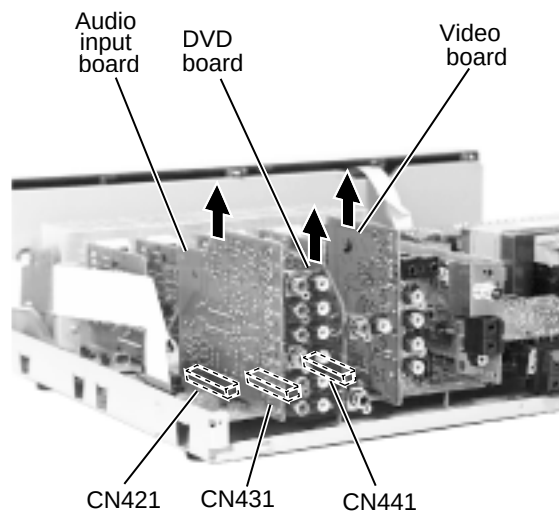


Fig.7

■ Removing the audio board (See Fig.10)

- Prior to performing the following procedure, remove the top cover and the rear panel.
1. Disconnect the card wire from connector CN402 on the audio board.
 2. Disconnect the relay board from the audio board and the power supply board. (CN291, CN491)
 3. Disconnect the harness from connector CN471, CN472, CN473.
 4. Remove the three screws G attaching the audio board assembly.
 5. Remove the screw H attaching the audio board assembly.

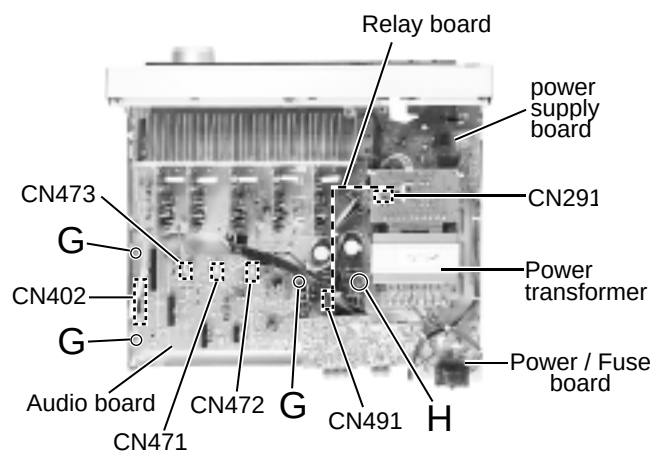


Fig.10

■ Removing the main board (See Fig.11)

- Prior to performing the following procedure, remove the top cover, the rear panel and audio board.
1. Disconnect the harness from connector CN241 and CN203 on the power supply board respectively.
 2. Disconnect the harness from connector CN251 on the power transformer board.
 3. Remove the four screws I and the two screws J attaching the main board.

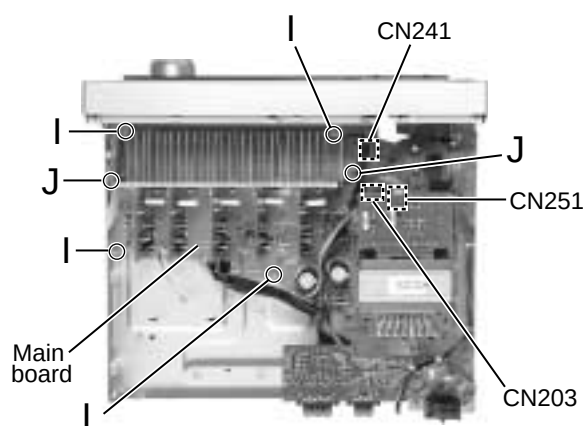


Fig.11

■ Removing the Heat sink (See Fig.12 to 14)

- Prior to performing the following procedure, remove the top cover and main board.
1. Remove the two screws K attaching the heat sink to the reverse side of main board.
 2. Disconnect the for connectors with each amp. board, and remove the main board.
 3. Remove the four screws M and ten screws L attaching the heat sink.

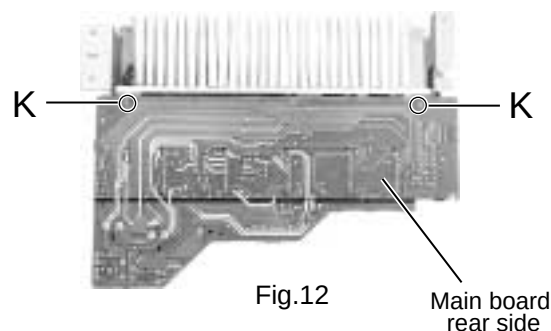


Fig.12

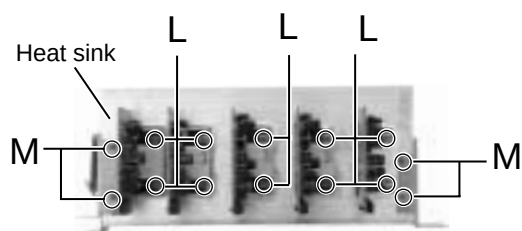


Fig.14

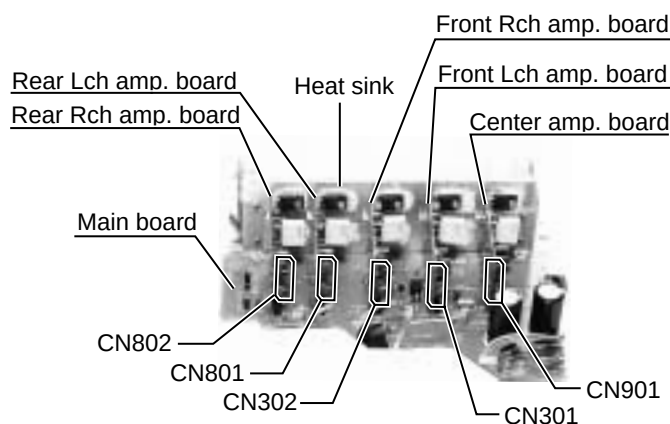


Fig.13

■ Removing the power transformer (See Fig.15)

- Prior to performing the following procedures, remove the top cover.
1. Cut off the tie band fixing the harness.
 2. Unsolder the two harnesses connected to the power transformer.
 3. Unsolder the harness connected to the FW201 on the power transformer board.
 4. Remove the four screws N attaching the power transformer.

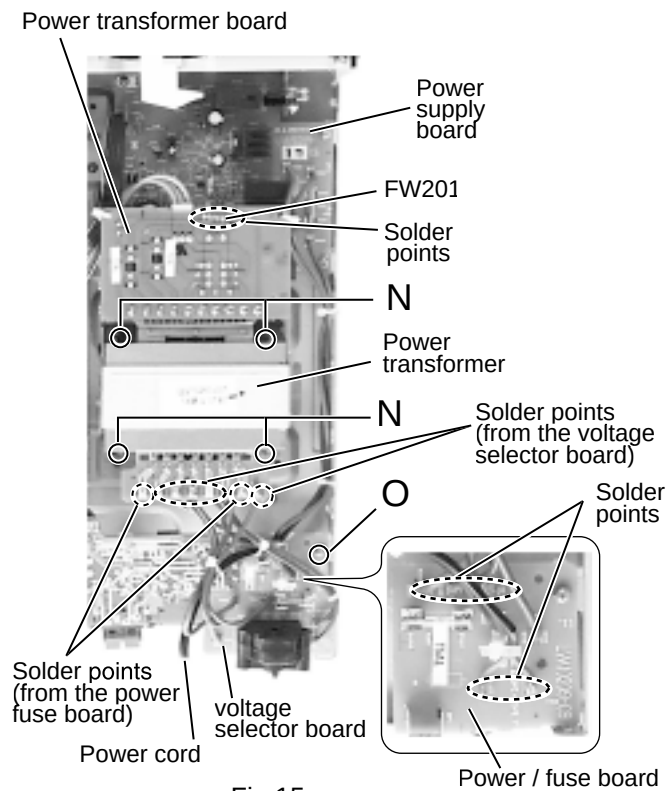


Fig.15

■ Removing the power / fuse board (See Fig.15)

- Prior to performing the following procedure, remove the top cover and the rear panel.
1. Remove the screw O attaching the power / fuse board.
 2. Unsolder the power cord and other harnesses connected to the power / fuse board.

■ Removing the power supply board (See Fig.16 , 17)

- Prior to performing the following procedure, remove the top cover and the front panel.
1. Remove the one nut attaching the headphone jack of the power supply board on the front side of the body.
 2. Disconnect the harness connected to connector CN241, CN201, CN203, and CN291 on the power supply board (If necessary, cut off the band fixing the harness on the side of the base chassis).
 3. Remove the three screws P attaching the power supply board and pull out the power supply board from the front bracket backward.
 4. Unsolder the three harnesses connected to the power supply board.

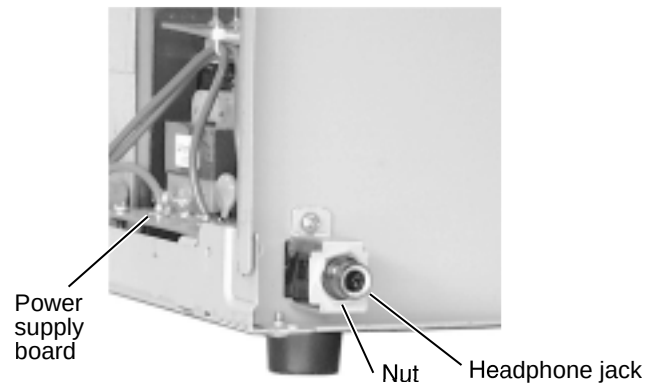


Fig.16

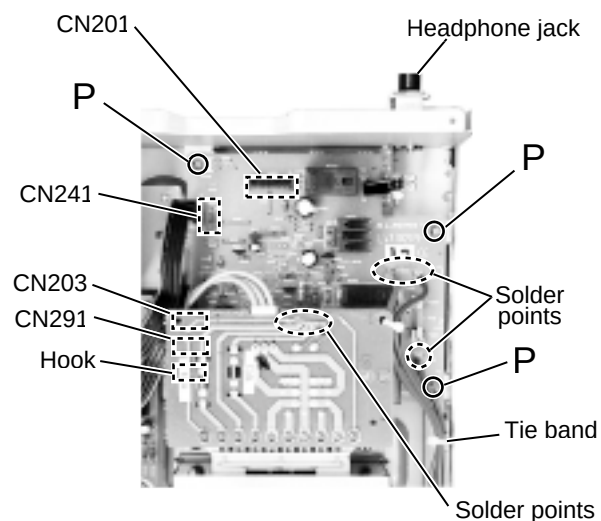


Fig.17

■ Removing the system control board / power switch board (See Fig.18 to 20)

- Prior to performing the following procedure, remove the top cover and the front panel assembly.
1. Pull out the volume knob on the front side of the front panel and remove the nut attaching the system control board.
 2. Remove the two screws Q attaching the power switch board.
 3. Disconnect the harness from connector CN714 on the power switch board.
 4. Remove the six screws R attaching the system control board on the back of the front panel.
 5. On the back of the front panel, release the six joints by pushing the joint tabs inward. Remove the operation switch panel toward the front.
 6. Release the two hook attaching the system control board.

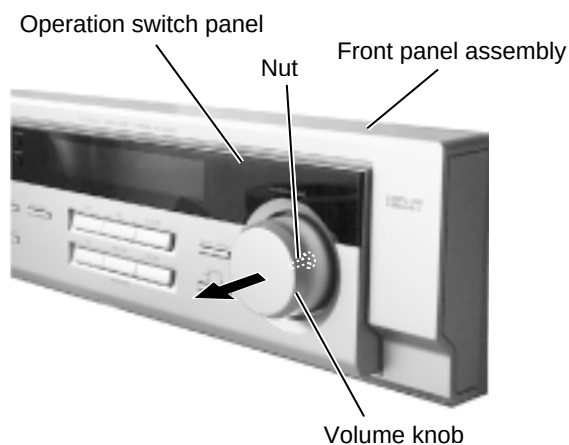


Fig.18

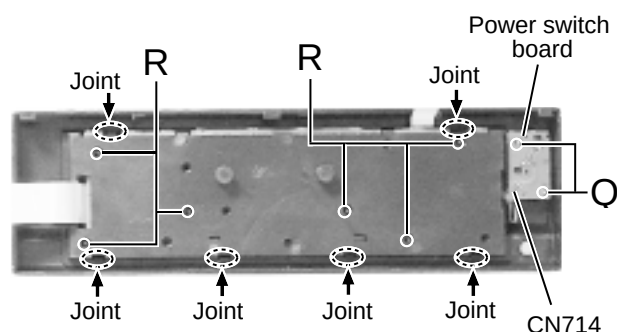


Fig.19

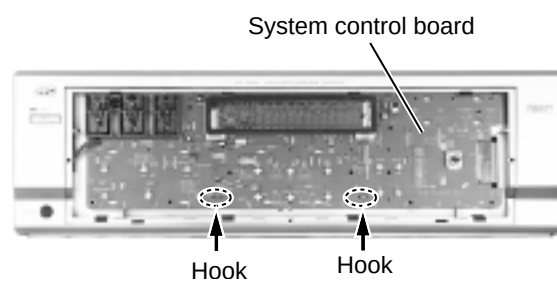


Fig.20

Adjustment method

■ Tuner section

1. Tuner range

FM	87.5MHz~108.0MHz
AM (MW)	531kHz~1602kHz (9kHz step)
	530kHz~1600kHz (10kHz step)

■ Power amplifier section

Adjustment of idling current

Measurement location	TP301 (Lch) , TP302 (Rch)
Adjustment part	VR301 (Lch) , VR302 (Rch)

Attention


This adjustment does not obtain a correct adjustment value immediately after the amplifier is used (state that an internal temperature has risen).

Please adjust immediately after using the amplifier after turning off the power supply of the amplifier and falling an internal temperature.

<Adjustment method>

1. Set the volume control to minimum during this adjustment. (No signal & No load)
2. Set the surround mode OFF.
3. Turn VR301 and VR302 fully counterclockwise to warm up before adjustment.
If the heat sink is already warm from previous use the correct adjustment can not be made.
4. For L-ch, connect a DC voltmeter between TP301's B216 and B217 (Lch)
and, connect it between TP302's B218 and B219 (Rch).
5. Adjust the VR301 (Lch) and VR302 (Rch) so that the DC voltmeter indicates 2.0mV
immediately after turning the power on.


* It is not abnormal though the idling current might not become 0mA even if it is finished to turn variable resistance (VR301, VR302) in the direction of counterclockwise.

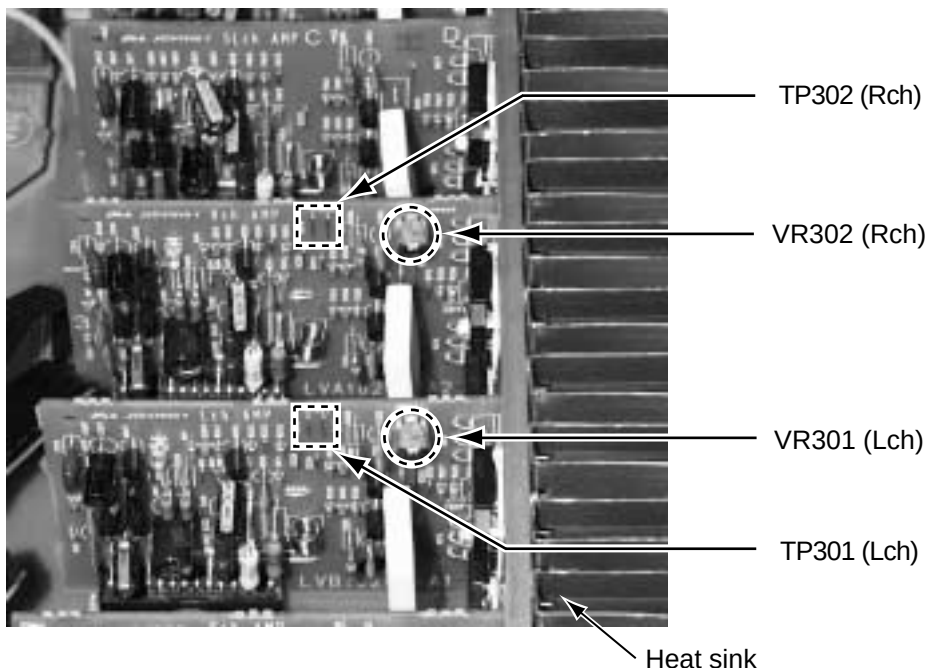


Description of major ICs

■ TC9162AF (IC423) : Analog switch

1. Pin layout

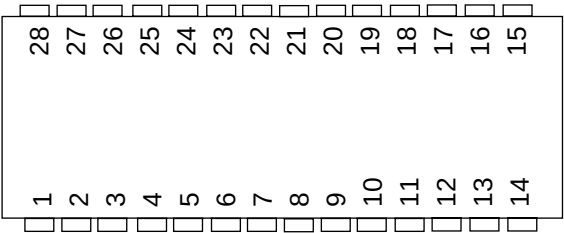


2. Block diagram

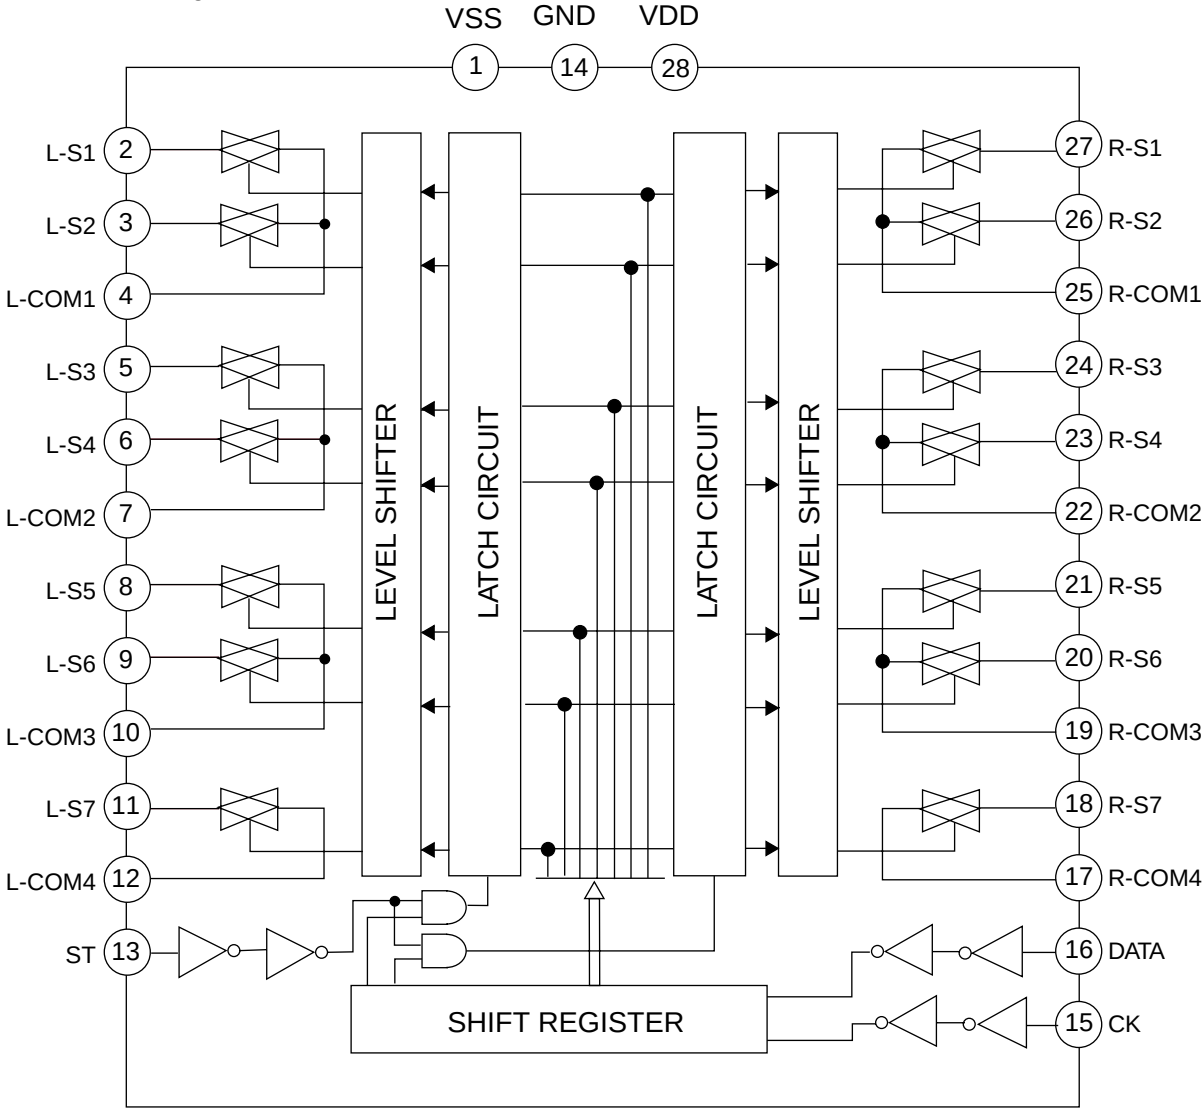

■ AK4527BVQP (IC601) : A/D,D/A converter

1.Pin layout

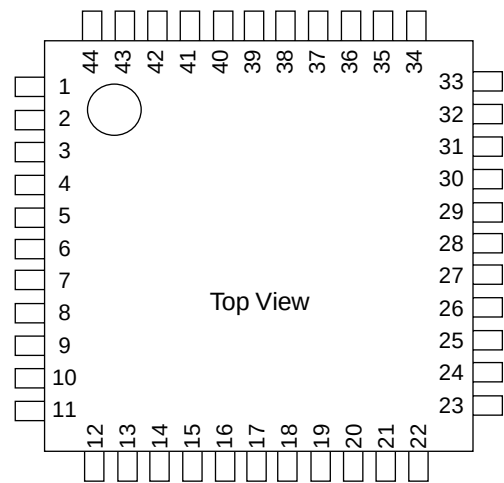

2. Pin function (1/2)

No.	Symbol	I/O	Function
1	SDOS	I	SDTO Source Select Pin (Note 1) "L" : Internal ADC output, "H" : DAUX input
2	OSKS	I	Control Mode Select Pin "L" : 3-wire Serial, "H" : I2C Bus
3	MIS	-	Soft Mute Pin (Note 1), Connect to GND When this pin goes to "H", soft mute cycle is initialized. When returning to "L", the output mute releases.
4	BICK	I	Audio Serial Data Clock Pin
5	LRCK	I/O	Input Channel Clock Pin
6	SDTI1	I	DAC1 Audio Serial Data Input Pin
7	SDTI2	I	DAC2 Audio Serial Data Input Pin
8	SDTI3	I	DAC3 Audio Serial Data Input Pin
9	SDTO	O	Audio Serial Data Output Pin
10	D,AUX	-	Sub Audio Serial Data Input Pin, Connect to GND
11	DFS	-	Double Speed Sampling Mode Pin (Note 1) "L" : Normal Speed, "H" : Double Speed
12	DEMI	-	Connect to GND No internal bonding.
13	DEMO	-	Zero Input Detect Enable Pin, Connect to GND "L" : mode 7 (disable) at parallel mode, zero detect mode is selectable by DZFM2-0 bits at serial mode. "H" : mode 0 (DZF is AND of all six channels)
14	MCKO	-	Output Buffer Power supply Pin, 2.7V~5.5V
15	DVDD	I	Digital Power Supply Pin, 4.5V~5.5V
16	DVSS	-	De-emphasis Pin, 0V
17	PD	I	Power-Down & Reset Pin When "L", the AK4527B is powered-down and the control registers are reset to default state. If the state of P/S or CAD0-1 changes, then the AK4527B must be reset by PDN.
18	XTS	-	Test Pin, Connect to GND This pin should be connected to DVSS.

Pin function (2/2)


AK4527

No.	Symbol	I/O	Function
19	ICKS	-	Connect to GND No internal bonding.
20	ADIF	-	Analog Input Format Select Pin, Digital Power Supply "H" : Full-differential input, "L" : Single-ended input
21	CAD1	-	Chip Address 1 Pin, Connect to GND
22	CAD0	-	Chip Address 0 Pin, Connect to GND
23	LOUT3	O	DAC3 Lch Analog Output Pin
24	ROUT3	O	DAC3 Rch Analog Output Pin
25	LOUT2	O	DAC2 Lch Analog Output Pin
26	ROUT2	O	DAC2 Rch Analog Output Pin
27	LOUT1	O	DAC1 Lch Analog Output Pin
28	ROUT1	O	DAC1 Rch Analog Output Pin
29	LIN-	I	Lch Analog Negative Input Pin
30	LIN+	I	Lch Analog Positive Input Pin
31	RIN-	I	Rch Analog Negative Input Pin
32	RIN+	I	Rch Analog Positive Input Pin
33	VREFL	-	Zero Input Detect 2 Pin (Note 2), Non Connect When the input data of the group 1 follow total 8192LRCK cycles with "0" input data, this pin goes to "H".
	OVF	O	Analog Input Overflow Detect Pin (Note 3) This pin goes to "H" if the analog input of Lch or Rch is overflows.
34	VCOM	O	Common Voltage Output Pin, AVDD/2 Large external capacitor around 2.2uF is used to reduce power-supply noise.
35	VREFH	-	Positive Voltage Reference Input Pin, AVDD
36	AVDD	-	Analog Power Supply Pin, 4.5V~5.5V
37	AVSS	-	Analog Ground Pin, 0V
38	XTI	-	Zero Input Detect 1 Pin (Note 2), Non connect When the input data of the group 1 follow total 8192 LRCK cycles with "0" input data, this pin goes to "H".
39	XTO	I	Master Clock Input Pin
40	P1S	-	Parallel / Serial Select Pin "L" : Serial control mode, "H" : Parallel control mode
41	$\overline{\text{CS}}$	I	Audio Data Interface Format 0 Pin in parallel mode
	CSN	I	Chip select pin in 3-wire serial control mode This pin should be connected to DVDD at I2C bus control mode
42	DIF1	I	Audio Data Interface Format 1 Pin in parallel mode
	SCL/CCLK	I	Control Data Clock Pin in serial control mode I2C = "L" : CCLK(3-wire Serial), I2C = "H" : SCL(I2C Bus)
43	LOOP0	I	Loopback Mode 0 Pin in parallel control mode Enables digital loop-back from ADC to 3 DACs.
	SAD/CDTI	I/O	Control Data Input Pin in serial control mode I2C = "L" : CDTI(3-wire Serial), I2C = "H" : SDA(I2C Bus)
44	CTD	I	Loopback Mode 1 Pin (Note 1) Enable all 3 DAC channels to be input from SDTI.

- Notes : 1. SDOS, SMUTE, DFS, and LOOP1 pins are ORed with register data if P/S = "L".
 2. The group 1 and 2 can be selected by DZFM2-0 bit if P/S = "L" and DZFM2 = "L".
 3. This pin becomes OVF pin if OVFE bit is set to "1" at serial control mode.
 4. All input pins should not be left floating.

■ M62446FP (IC428) : 6ch master volume

1.Block Diagram

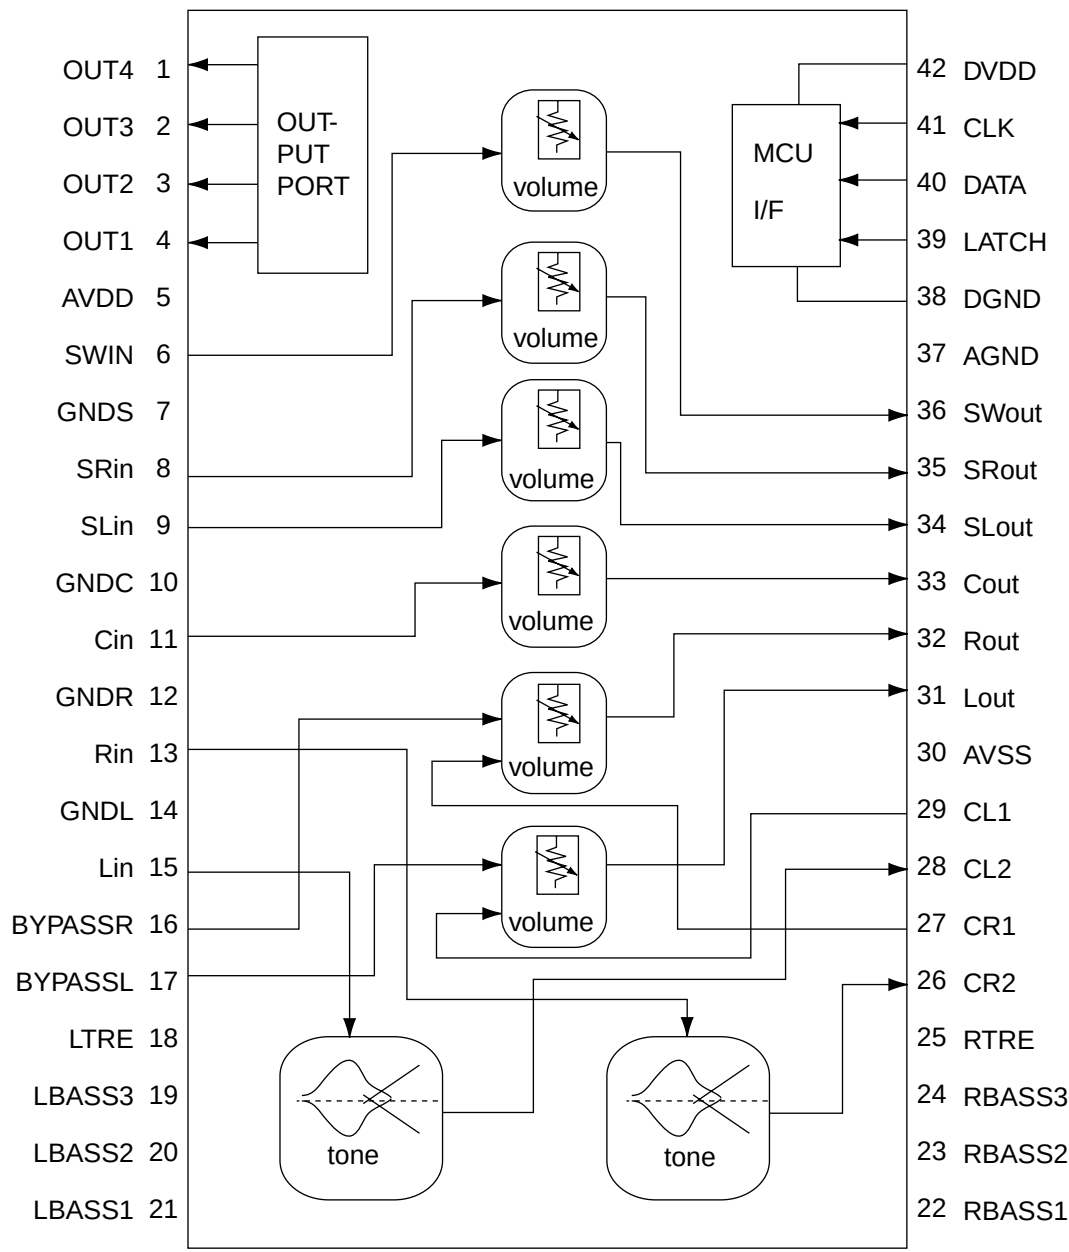


2.Pin Function

M62446FP

Pin No.	Symbol	I/O	Function
1	OUT4	O	BASS BOOST control terminal
2	OUT3	O	SURROUND control terminal
3	OUT2	O	VIDEO 2 control terminal
4	OUT1	O	VIDEO 1 control terminal
5	AVDD	-	Analog positive power supply terminal
6	SW IN	I	SUB Woofer volume signal input terminal
7	A.GND	-	Analog ground terminal
8	RR IN	I	R ch volume signal input terminal for rear speaker
9	RL IN	I	L ch volume signal input terminal for rear speaker
10	A.GND	-	Analog ground terminal
11	C IN	I	Center volume signal input terminal
12	A.GND	-	Analog ground terminal
13	R IN	I	R ch volume signal input terminal
14	A.GND	-	Analog ground terminal
15	L IN	I	L ch volume signal input terminal
16		-	Non connect
17		-	Non connect
18	LTRE	-	Frequency adjustment terminal tone/treble
19	LBASS3	-	Frequency adjustment terminal tone/bass
20	LBASS2	-	Frequency adjustment terminal tone/bass
21	KBASS1	-	Frequency adjustment terminal tone/bass
22	CR2	O	Tone output terminal
23	RBASS2	-	Frequency adjustment terminal tone/bass
24	RBASS3	-	Frequency adjustment terminal tone/bass
25	RTRE	-	Frequency adjustment terminal tone/treble
26	RBASS1	-	Frequency adjustment terminal tone/bass
27	CR1	I	L/R volume input terminal
28	LL2	O	Tone output terminal
29	CL1	I	L/R volume input terminal
30	AVSS	-	Analog negative power supply terminal
31	L OUT	O	L ch output
32	R OUT	O	R ch output
33	C OUT	O	Center volume signal output terminal
34	RL OUT	O	L ch volume signal output terminal for rear speaker
35	RR OUT	O	R ch volume signal output terminal for rear speaker
36	SW OUT	O	SUB Woofer volume signal output terminal
37	A.GND	-	Analog ground terminal
38	D.GND	-	Digital ground terminal
39	VOL LACH	I	Latch input terminal
40	VOL DATA	I	Volume data input terminal
41	VOL CLK	I	Clock input terminal for data transfer
42	DVDD	-	Digital power supply terminal

■ MN101C35DJW (IC701) : System controller

1. Pin layout

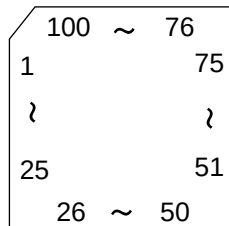

2. Pin function (1/2)

Pin No.	Symbol	I/O	Function
1	VOL.JOG IN_1	I	VOL.JOG IN_1
2	VOL.JOG IN_2	I	VOL.JOG IN_2
3	DATA (PLL)	I/O	DATA (PLL)
4	CLK (PLL)	O	CLK (PLL)
5	DE (PLL)	O	DE (PLL)
6	VIDEO S/C DVD	I	VIDEO S/C DVD
7	VIDEO S/C VCR	I	VIDEO S/C VCR
8	VDD	-	Power supply +5V
9	OSC2	I/O	Connecting the crystal oscillator for system clock (8MHz)
10	OSC1	I/O	Connecting the crystal oscillator for system clock (8MHz)
11	VSS	-	Connect to GND
12		-	Connect to GND
13	NC	-	Non connect
14		-	Connect to GND
15		-	Connect to GND
16	KEY IN 1	I	KEY INPUT 1
17	KEY IN 2	I	KEY INPUT 2
18	KEY IN 3	I	KEY INPUT 3
19	KEY IN 4	I	KEY INPUT 4
20	KEY IN 5	I	KEY INPUT 5
21	INH IN	I	INH IN
22	CS 1	I	CHIP SELECT 1
23	CS 2	I	CHIP SELECT 2
24	VREF+	-	Power supply +5V
25	VIDEO S/C DBS	I	VIDEO S/C DBS
26	RESET	I	RESET INPUT
27	CLK (RDS)	O	RDS CLK OUT (RDS)
28	DCS IN	I	DCS INPUT
29	DCS OUT	O	DCS OUTPUT
30	VCR IN	I	AVLINK VCR IN
31	VCR OUT	O	AVLINK VCR OUT
32	DATA (RDS)	I/O	RDS DATA (RDS)
33	PROTECTOR IN	I	PROTECTOR IN
34	RM IN	I	REMOCON INPUT
35	TUNED IN	I	TUNED IN (TUNER)
36	STEREO IN	I	STEREO IN (TUNER)
37	DAVN (RDS)	I	RDS DAVN (RDS)
38	SELF DET	I	SELF DET INPUT
39	COMMAND (DSP)	O	COMMAND (DSP)
40	STATUS (DSP)	I	STATUS (DSP)


Pin function (2/2)

MN101C35DJW

Pin No.	Symbol	I/O	Function
41	CLK DSP	O	CLK (DSP)
42	READY	O	READY (DSP)
43	RESET	O	RESET (DSP)
44	RY S	O	RELAY SURROUND
45	RY C	O	RELAY CENTER
46	RY L/R1	O	RELAY FRONT 1
47	RY L/R2	O	RELAY FRONT 2
48	RY HP	O	RELAY HEADPHONE
49 ~ 64	GRID16~GRID1	O	FL GRID SIGNAL CONTROL OUT
65 ~ 80	SEG1~SEG16	O	FL SEGMENT SIGNAL CONTROL OUT
81	NC	-	Non connect
82	NC	-	Non connect
83	NC	-	Non connect
84	NC	-	Non connect
85	NC	-	Non connect
86	NC	-	Non connect
87	NC	-	Non connect
88	POWER	-	POWER ON Relay Control
89	S MUTE	O	SOUSE MUTE
90	SW MUTE	O	SUBWOOFER MUTE
91	TU MUTE	O	TUNER MUTE
92	STB LED	O	STANDBY LED
93	SURROUND	O	SURROUND
94	DATA	O	AUDIO SW DATA
95	CLK	O	CLK (AUDIO SW)
96	STB	O	STB (AUDIO SW)
97	LATCH	O	LATCH (VOLUME)
98	DATA	O	VOLUME DATA
99	CLK	O	CLK (VOLUME)
100	VPP	-	VPP

■ UPD784215AGC167 (IC671) : Dital signal controller

1.Pin layout

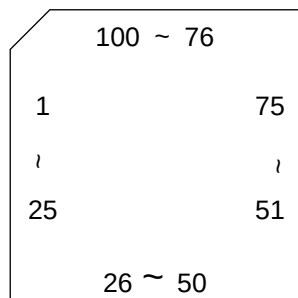

2.Pin function (1/2)

Pin No.	Symbol	I/O	Function
1~8		-	Non connect
9	VDD	-	Power supply terminal
10	X2	O	Connecting the crystal oscillator for system main clock
11	X1	I	Connecting the crystal oscillator for system main clock
12	VSS	-	Connect to GND
13	XT2	O	Connecting the crystal oscillator for system sub clock
14	XT1	I	Connecting the crystal oscillator for system sub clock
15	RESET	I	System reset signal input
16	AUTODATA	I	Output of DSP to general-purpose port
17	LOCK	I	Output of DSP to general-purpose port
18	DIGITAL0	I	Output of DSP to general-purpose port
19	FORMAT	I	Output of DSP to general-purpose port
20	CHANNEL	I	Output of DSP to general-purpose port
21	ERR	I	Output of DSP to general-purpose port
22	REST IN	I	Reset signal input
23	AVDD	-	Power supply terminal
24	AVREF0	-	Connect to GND
25		-	Connect to GND
26		-	Connect to GND
27		-	Connect to GND
28		-	Connect to GND
29		-	Connect to GND
30		-	Connect to GND
31		-	Connect to GND
32		-	Connect to GND
33	AVSS	-	Connect to GND
34,35		-	Non connect
36	AV REF1	-	Power supply terminal
37	RX	-	Not use
38	TX	-	Not use
39		-	Non connect
40	DSPCOM	I	Communication port from IC701
41	DSPSTS	O	Status communication port to IC701
42	DSPCLK	I	Clock input from IC701
43	DSPRDY	I	Ready signal input from IC701
44		-	Non connect
45	MIDIO IN	I/O	Interface I/O terminal with microcomputer
46	MIDIO OUT	I/O	Interface I/O terminal with microcomputer
47	MICK	O	Interface I/O terminal with microcomputer of clock signal
48	MICS	O	Interface I/O terminal with microcomputer of chip select


Pin function (2/2)

UPD784215AGC167

Pin No.	Symbol	I/O	Function
49	$\overline{\text{MILP}}$	O	Interface I/O terminal with microcomputer
50	$\overline{\text{MIACK}}$	O	Interface I/O terminal with microcomputer
51		-	Non connect
52		-	Non connect
53	$\overline{\text{DSPRST}}$	O	Reset signal output of DSP
54~63		-	Non connect
64	CODEC OUT	I/O	Interface I/O terminal with microcomputer
65	CODEC IN	I/O	Interface I/O terminal with microcomputer
66	$\overline{\text{CODEC CLK}}$	O	Interface I/O terminal with microcomputer of clock signal
67	$\overline{\text{CODEC CS}}$	O	Interface I/O terminal with microcomputer of chip select
68	CODEC XTS	-	Non connect
69		-	Non connect
70		-	Non connect
71	$\overline{\text{PD}}$	O	Reset signal output
72	GND	-	Connect to GND
73		-	Non connect
74		-	Non connect
75		-	Non connect
76		-	Non connect
77		-	Non connect
78		-	Non connect
79		-	Non connect
80		-	Non connect
81	VDD	-	Power supply
82		-	Non connect
83		-	Non connect
84	ANA/T-TONE	O	Test tone control
85	LEF-MIX	O	Control at output destination of LFE channel
86		-	Non connect
87	$\overline{\text{D.MUTE}}$	O	Mute of the digital out terminal is controlled
88	$\overline{\text{S.MUTE}}$	O	Mute of the audio signal is controlled
89		-	Non connect
90	ASW1	O	Selection of digital input selector
91	ASW2	O	Selection of digital input selector
92	ASW3	O	Selection of digital input selector
93	ASW4	O	Selection of digital input selector
94	TEST	-	Test terminal
95		-	Non connect
96		-	Non connect
97		-	Non connect
98		-	Non connect
99		-	Non connect
100		-	Non connect

■ LA1838 (IC102) : FM AM IF amp. & Detector, FM MPX decoder

1. Block Diagram

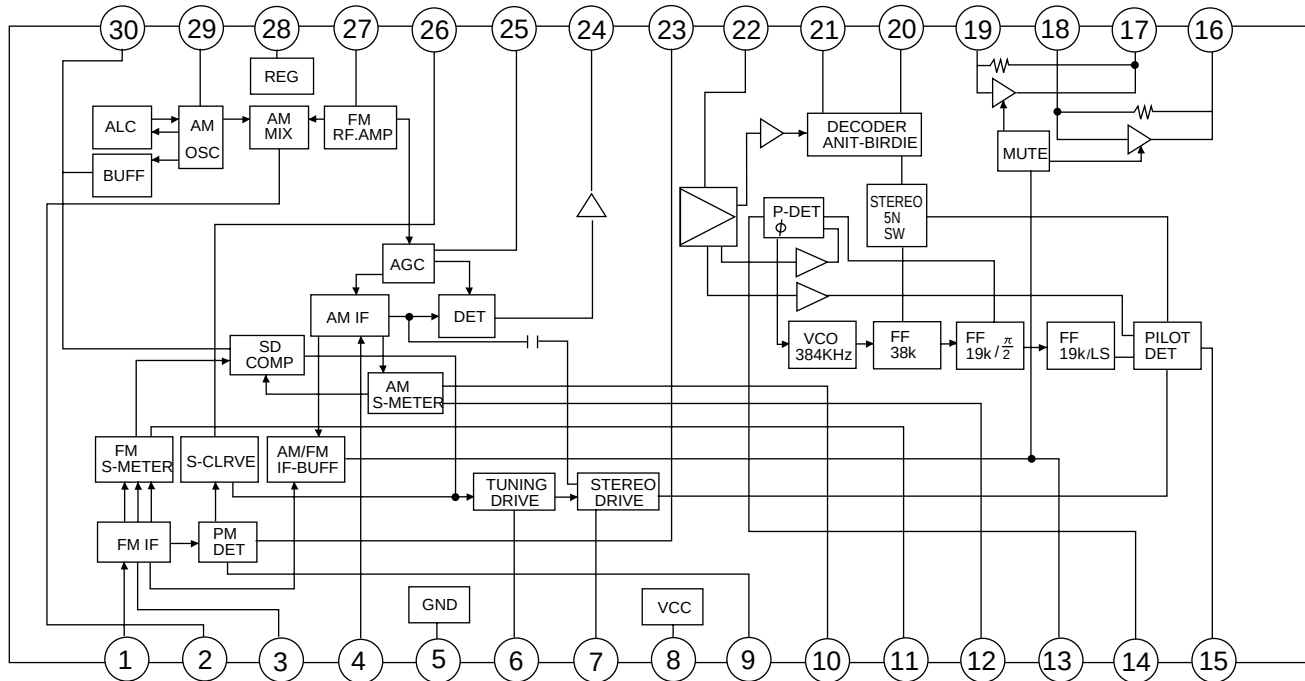

2. Pin Function


Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	FM IN	I	This is an input terminal of FM IF signal.	16	L OUT	O	Left channel signal output.
2	AM MIX	O	This is an out put terminal for AM mixer.	17	R OUT	O	Right channel signal output.
3	FM IF	I	Bypass of FM IF	18	L IN	I	Input terminal of the Left channel post AMP.
4	AM IF	I	Input of AM IF Signal.	19	R IN	I	Input terminal of the Right channel post AMP.
5	GND	—	This is the device ground terminal.	20	RO	O	Mpx Right channel signal output.
6	TUNED	O	When the set is tuning, this terminal becomes "L".	21	LO	O	Mpx Left channel signal output.
7	STEREO	O	Stereo indicator output. Stereo "L", Mono: "H"	22	MPX IN	I	Mpx input terminal
8	VCC	—	This is the power supply terminal.	23	FM OUT	O	FM detection output.
9	FM DET	—	FM detect transformer.	24	AM DET	O	AM detection output.
10	AM SD	—	This is a terminal of AM ceramic filter.	25	AM AGC	I	This is an AGC voltage input terminal for AM
11	FM VSM	O	Adjust FM SD sensitivity.	26	AFC	—	This is an output terminal of voltage for FM-AFC.
12	AM VSM	O	Adjust AM SD sensitivity.	27	AM RF	I	AM RF signal input.
13	MUTE	I/O	When the signal of IF REQ of IC121(LC72131) appear, the signal of FM/AM IF output. //Muting control input.	28	REG	O	Register value between pin 26 and pin28 besides the frequency width of the input signal.
14	FM/AM	I	Change over the FM/AM input. "H" :FM, "L" : AM	29	AM OSC	—	This is a terminal of AM Local oscillation circuit.
15	MONO/ST	O	Stereo : "H", Mono: "L"	30	OSC BUFFER	O	AM Local oscillation Signal output.

■ LC72136N (IC121) : PLL frequency synthesizer

1. Pin layout

XT	1	22	XT
FM/AM	2	21	GND
CE	3	20	LPFOUT
DI	4	19	LPFIN
CLOCK	5	18	PD
DO	6	17	VCC
FM/ST/VCO	7	16	FMIN
AM/FM	8	15	AMIN
	9	14	
	10	13	IFCONT
SDIN	11	12	IFIN

2. Block diagram

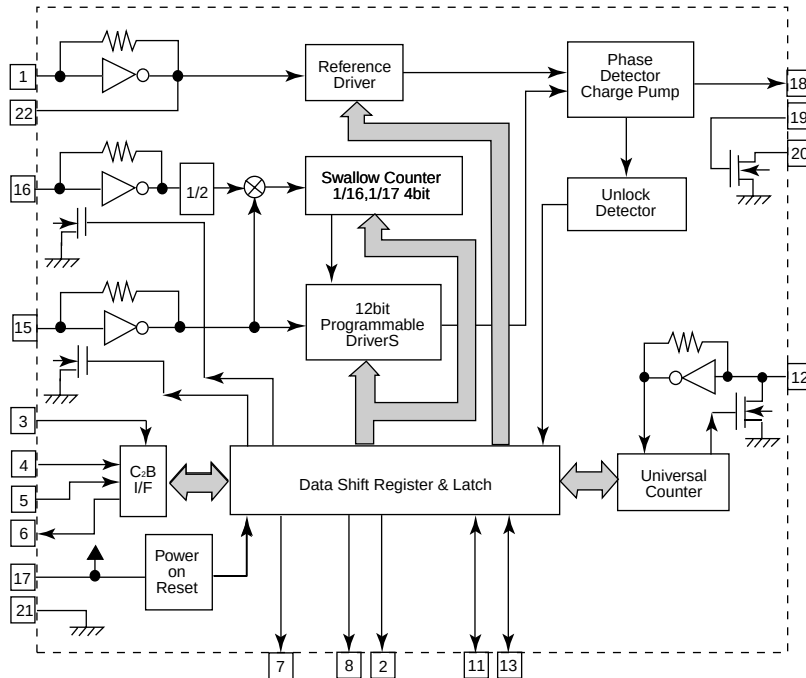

3. Pin function

Pin No.	Symbol	I/O	Function	Pin No.	Symbol	I/O	Function
1	XT	I	X'tal oscillator connect (75kHz)	12	IFIN	I	IF counter signal input
2	FM/AM	O	LOW:FM mode	13	IFCONT	O	IF signal output
3	CE	I	When data output/input for 4pin(input) and 6pin(output): H	14		-	Not use
4	DI	I	Input for receive the serial data from controller	15	AMIN	I	AM Local OSC signal output
5	CLOCK	I	Sync signal input use	16	FMIN	I	FM Local OSC signal input
6	DO	O	Data output for Controller Output port	17	VCC	-	Power supply(VDD=4.5-5.5V) When power ON:Reset circuit move
7	FM/ST/VCO	O	"Low": MW mode	18	PD	O	PLL charge pump output(H: Local OSC frequency Height than Reference frequency. L: Low Agreement: Height impedance)
8	AM/FM	O	Open state after the power on reset	19	LPFIN	I	Input for active lowpassfilter of PLL
9	LW	I/O	Input/output port	20	LPFOUT	O	Output for active lowpassfilter of PLL
10	MW	I/O	Input/output port	21	GND	-	Connected to GND
11	SDIN	I/O	Data input/output	22	XT	I	X'tal oscillator(75KHz)


**■ TC9446F-025 (IC631) : Digital signal processor for dolby digital (AC-3)
/ DTS audio decode**

Pin No.	Symbol	I/O	Function
1	$\overline{\text{RST}}$	I	Reset signal input terminal (L:reset H: normal operation)
2	MIMD	I	Microcomputer interface mode selection input terminal (L:serial H:IC bus)
3	$\overline{\text{MICS}}$	I	Microcomputer interface chip select input terminal
4	MILP	I	Microcomputer interface latch pulse input
5	MIDIO	I/O	Microcomputer interface data I/O terminal
6	$\overline{\text{MICK}}$	I	Microcomputer interface clock input terminal
7	MIACK	O	Microcomputer interface acknowledge output terminal
8~11	FI0~3	I	Flag input terminal 0~3
12	IRQ	I	Interrupt input terminal
13	VSS	-	Digital ground terminal
14	LRCKA	I	Audio interface LR clock input terminal A
15	BCKA	I	Audio interface bit clock input terminal A
16~18	SDO0~2	O	Audio interface data output terminal 0
19	SD03	-	Non connect
20	LRCKB	I	Audio interface LR clock input terminal B
21	BCKB	I	Audio interface bit clock input terminal B
22	SDT0	I	Audio interface data input terminal 0
23	SDT1	I	Audio interface data input terminal 1
24	VDD	-	Power supply for digital circuit
25	LRCKOA	O	Audio interface LR clock output terminal A
26	BCKOA	O	Audio interface bit clock output terminal A
27,28	TEST0,1	I	Test input terminal 0/1 (L:test H: normal operation)
29~30	LRCKOB,BCKOB	-	Non connect
31	TXO	O	SPDIF Output
32,33	TEST2,3	I	Test input terminal (L:test H: normal operation)
34	RX	I	SPDIF input terminal
35	VSS	-	Ground terminal for digital circuit
36	TSTSUB0	I	Test sub input terminal 0 (L:test H: normal operation)
37	FCONT	O	VCO Frequency control output terminal
38,39	TSTSUB1,TSTSUB2	I	Test sub input terminal 1,2 (L:test H: normal operation)
40	PDO	O	Phase detect signal output terminal
41	VDDA	-	Power supply for analog circuit
42	PLON	I	Clock selection input terminal (L:external clock H:VCO clock)
43	AMPI	I	amplifier input terminal for LPF
44	AMPO	O	amplifier output terminal for LPF
45	CKI	I	External clock input terminal
46	VSSA	-	Ground terminal for analog circuit
47	CKO	O	DIR Clock output terminal
48	LOCK	O	VCO Lock output terminal
49	VSS	-	Ground terminal for digital circuit
50	$\overline{\text{WR}}$	O	External SRAM writing signal output terminal
51	$\overline{\text{OE}}$	O	External SRAM output enable signal output terminal
52	CE	O	External SRAM chip enable signal output terminal
53	VDD	-	Power supply terminal for digital circuit
54~61	IO7~0	I/O	External SRAM data I/O terminal 7~0
62	VSS	-	Ground terminal for digital circuit
63~70	AD0~7	O	External SRAM address output terminal 0~7
71	VDD	-	Power supply terminal for digital circuit
72~80	AD8~16	O	External SRAM address output terminal 8~16
81	VSS	-	Ground terminal for digital circuit
82~89	PO0~7	O	General purpose output terminal 0~7
90	VDDDL	-	Power supply terminal for DLL
91	LPFO	O	LPF output terminal for DLL
92,93	DLON,DLCKS	I	Refer to the undermentioned table
94	SCKO	-	Non connect
95	VSSDL	-	Ground terminal for DLL
96	SCKI	I	External system clock input terminal
97	VSSX	-	Ground terminal for oscillation circuit
98,99	XO,XI	I/O	Oscillation I/O terminal
100	VDDX	-	Power supply terminal for oscillation circuit

DLCKS terminal	DLONterminal	DLL clock setting
L	L	SCKI input (DLL circuit OFF)
L	H	Four times XI clock
H	L	Three times XI clock
H	H	Six times XI clock


■ **BA15218N (IC403) : Dual ope. amp.**

1. Pin layout / Block diagram

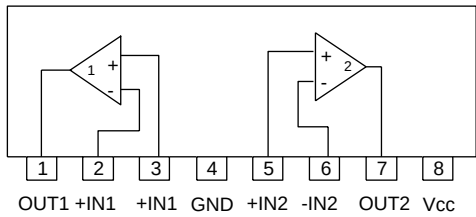

■ **NJM2246D (IC501) : Video switch**

1. Pin layout / Block diagram

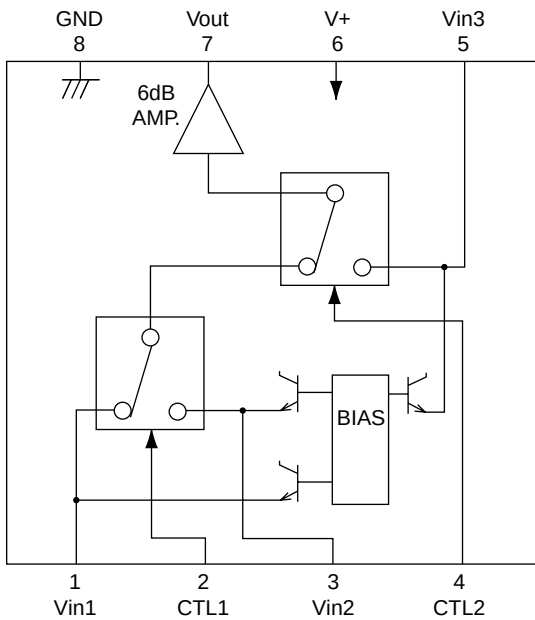


Control input - output signal

CTL 1	CTL 2	Output
L	L	VIN 1
H	L	VIN 2
L/H	H	VIN 3

■ **TC74HCU04AF (IC621) : Inverter**

1. Pin layout

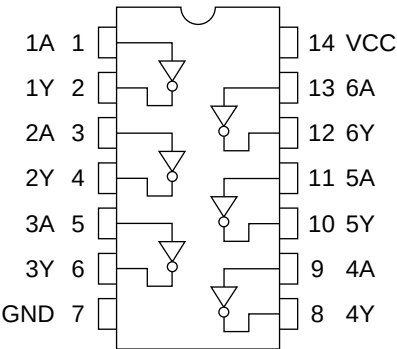


2. Truth value

A	Y
L	H
H	L


TC7SET32FU (IC672) : Z-Input or gate

IMX9-W (IC652, IC662, IC682) : Driver

1. Pin layout / Block diagram

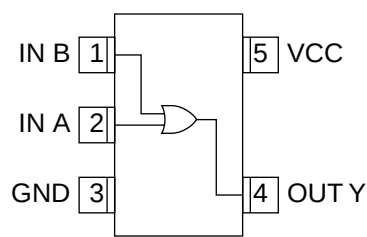


1. Pin layout / Block diagram

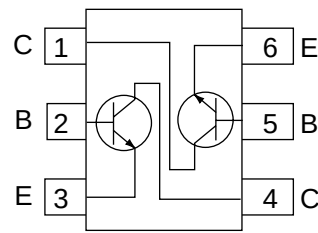

TC74HCU08AF (IC611) : Inverter

1. Pin layout / Block diagram

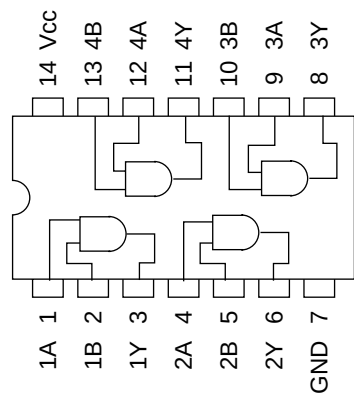


2.The truth value table

A	B	Y
L	L	L
L	H	L
H	L	L
H	H	H

TC74HC4072AF (IC612) : 4-Input gate

1.Pin layout & block diagram

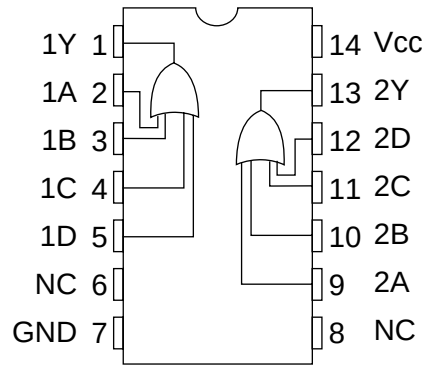


2. Truth table

A	B	C	D	Y
H	X	X	X	H
X	H	X	X	H
X	X	H	X	H
X	X	X	H	H
L	L	L	L	L


BA15218F (IC427, 609, 610, 650, 651, 661, 690, 691) : Op amp.

1. Pin layout / Block diagram

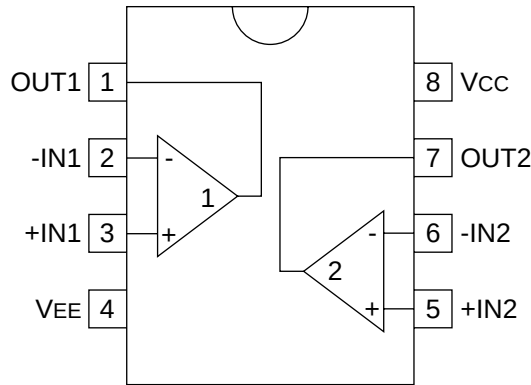


W24L010AJ-12 (IC641) : SRAM

1. Pin layout

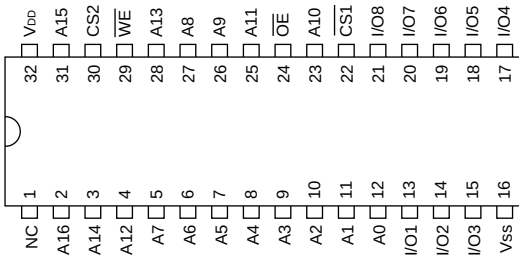

2. Block diagram

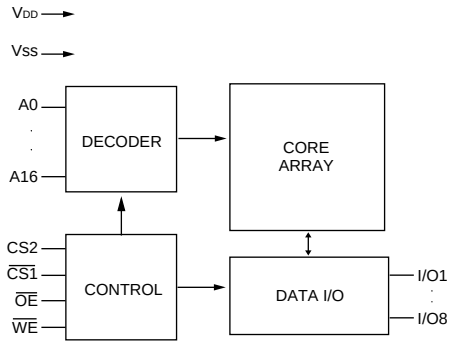

3. Pin function


Pin No.	Symbol	Function	Pin No.	Symbol	Function
1	NC	No Connection	17	I/O4	Data Input/Output
2	A16	Address Input	18	I/O5	Data Input/Output
3	A14	Address Input	19	I/O6	Data Input/Output
4	A12	Address Input	20	I/O7	Data Input/Output
5	A7	Address Input	21	I/O8	Data Input/Output
6	A6	Address Input	22	CS1	Chip Select Inputs
7	A5	Address Input	23	A10	Address Input
8	A4	Address Input	24	OE	Output Enable Input
9	A3	Address Input	25	A11	Address Input
10	A2	Address Input	26	A9	Address Input
11	A1	Address Input	27	A8	Address Input
12	A0	Address Input	28	A13	Address Input
13	I/O1	Data Input/Output	29	WE	Write Enable Input
14	I/O2	Data Input/Output	30	CS2	Chip Select Inputs
15	I/O3	Data Input/Output	31	A15	Address Input
16	Vss	Ground	32	VDD	Power Supply

TC9164AN (IC402) : Analog switch

1. Function

Switch to On/Off of S1 to S8 by control of LSI.

2. Pin layout & Block Diagram

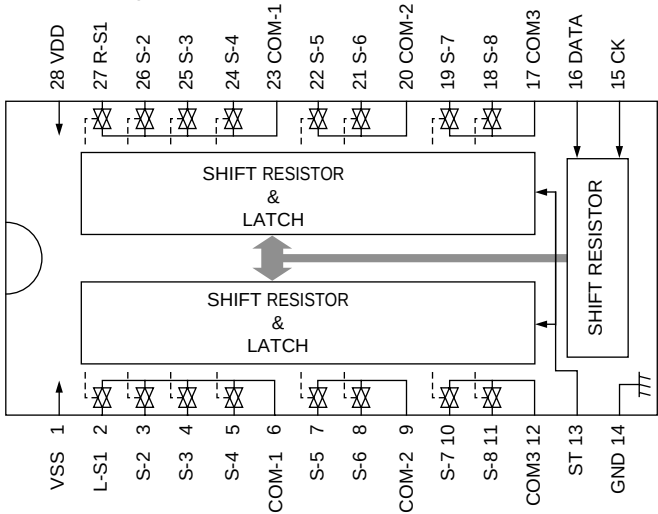

PARTS LIST

[RX-5022VSL]

* All printed circuit boards and its assemblies are not available as service parts.

Area suffix

US ----- Singapore

- Contents -


Exploded view of general assembly and parts list (Block No.M1)	3- 3
Electrical parts list (Block No.01~05)	3- 5
Packing materials and accessories parts list (Block No.M3,M5)	3-18

< M E M O >

Exploded view of general assembly and parts list

Block No.

M	1	M	M
---	---	---	---

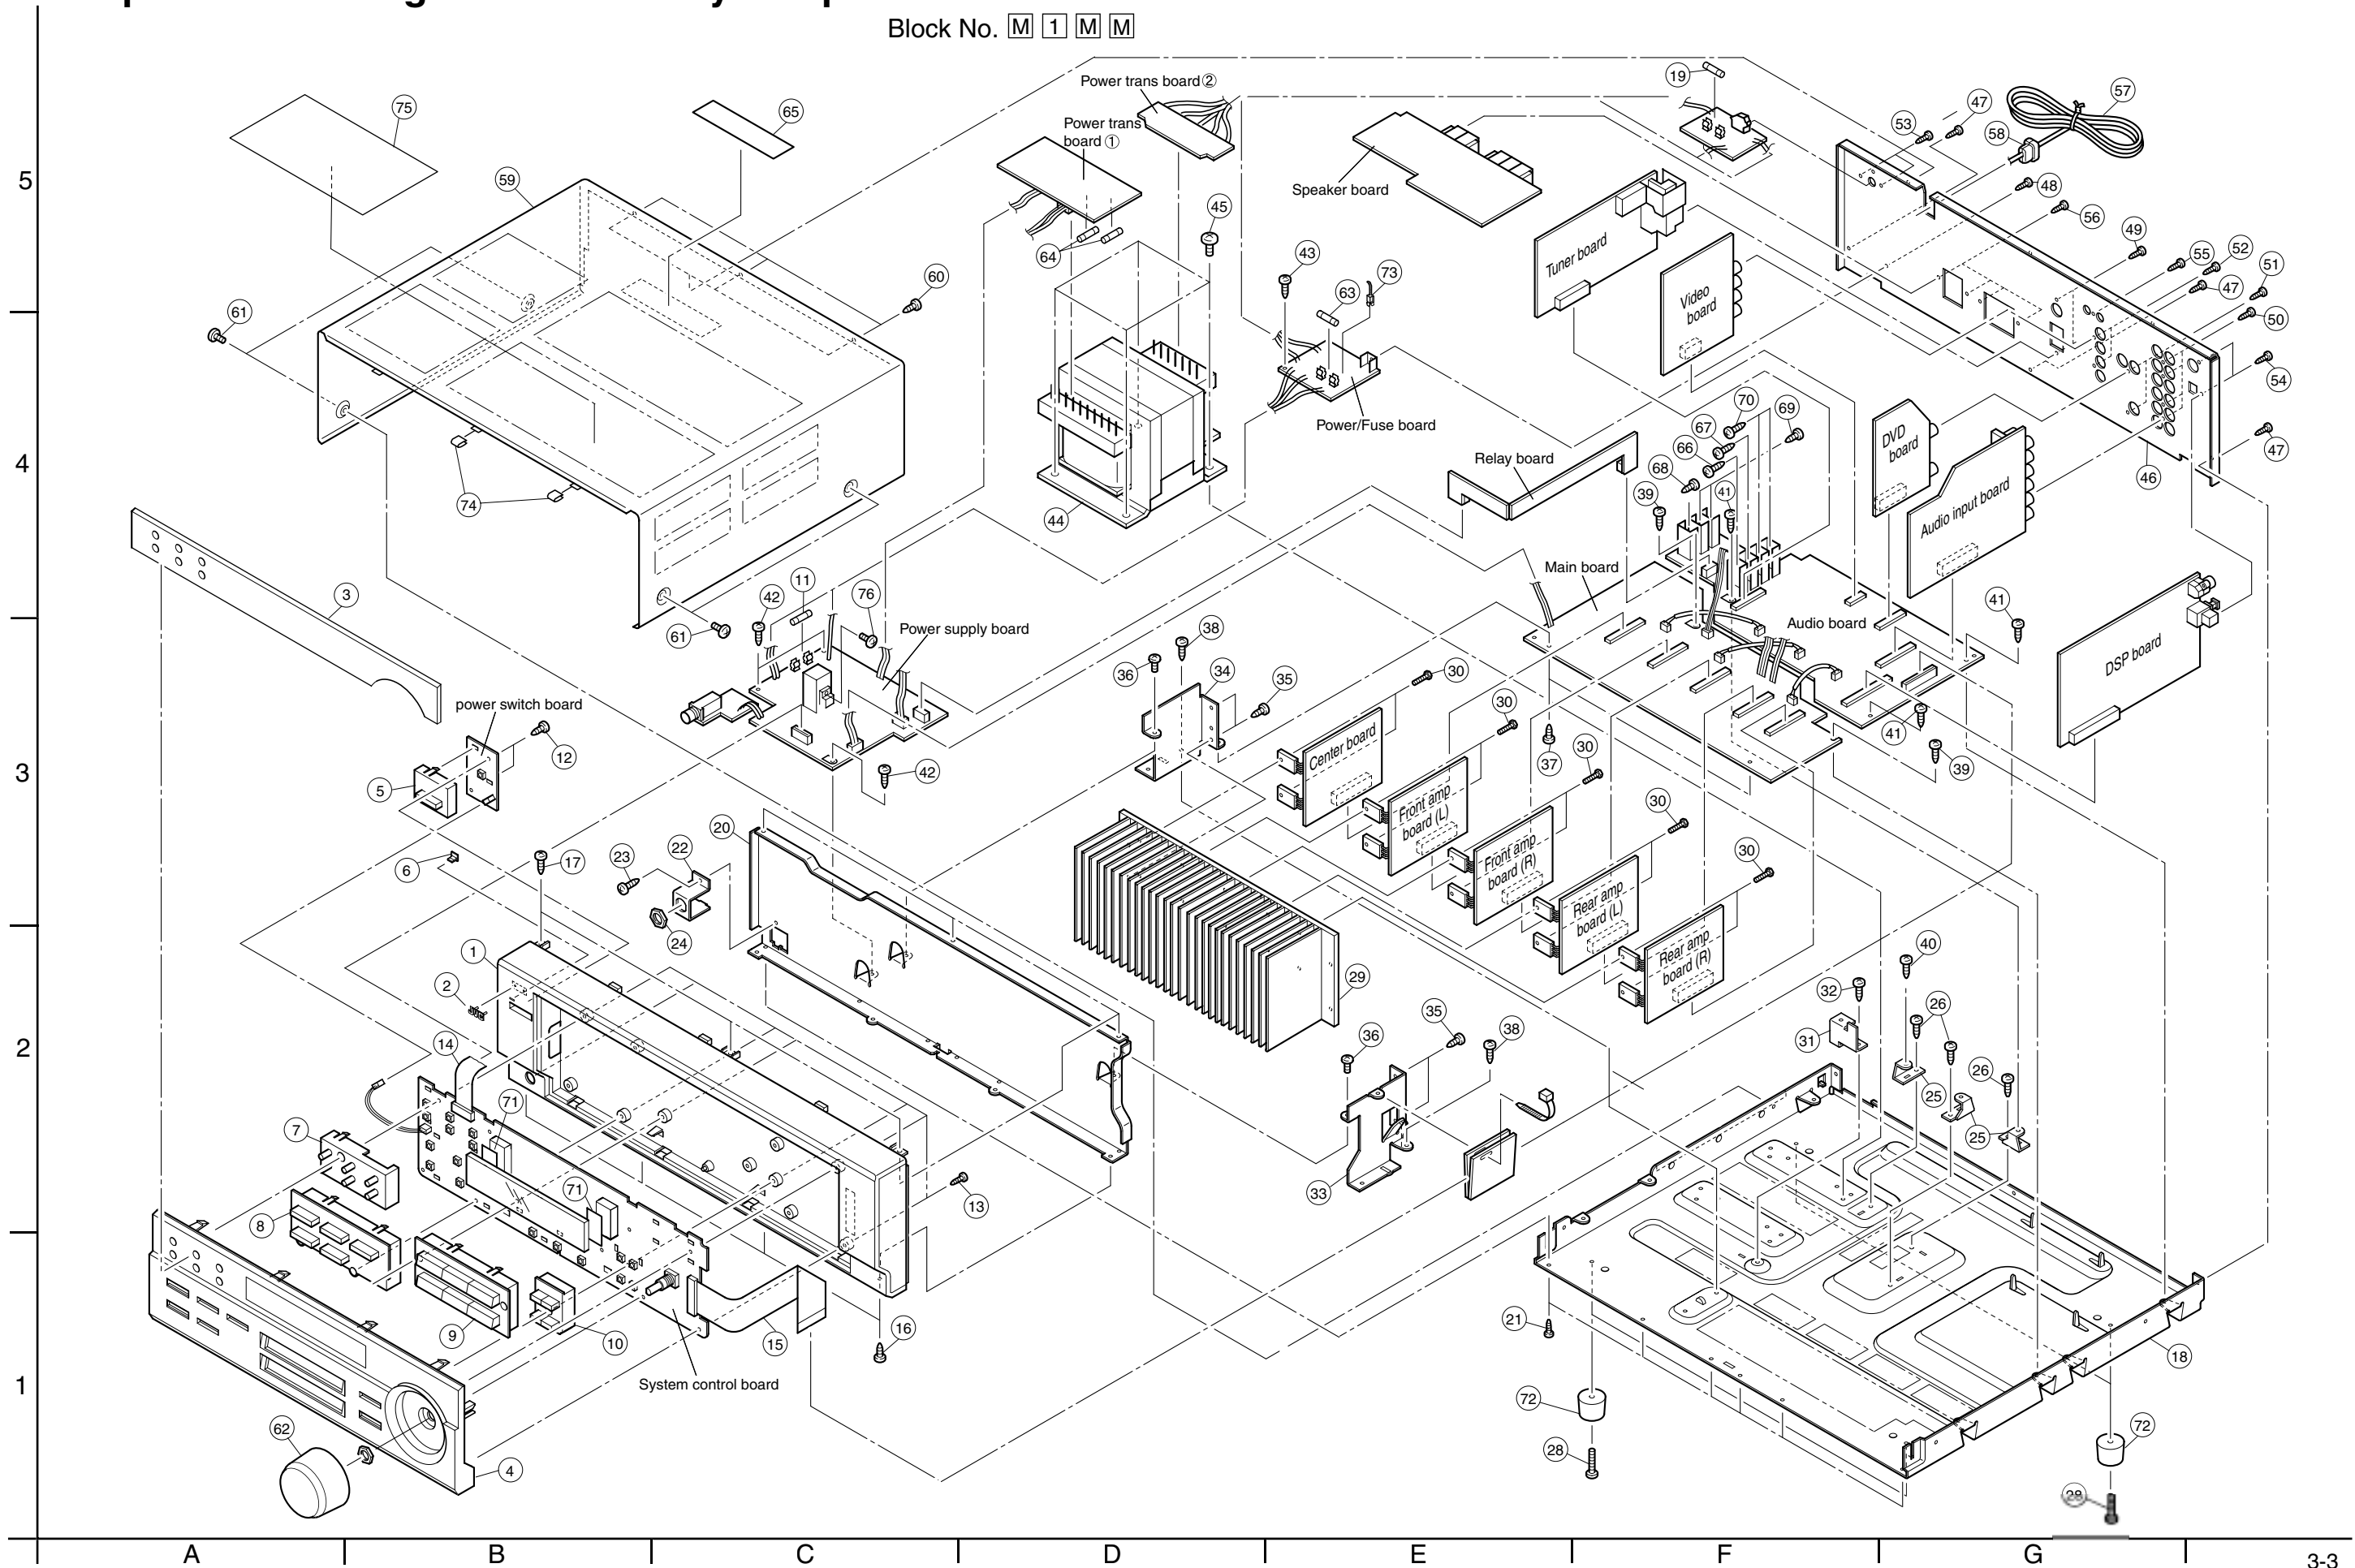

■ Parts list (General assembly)

Block No. M1MM

△	Item	Parts number	Parts name	Q'ty	Description	Area
△	1	LV10457-023A	FRONT PANEL	1		
	2	VJD5429-002SS	JVC MARK	1	SL MODEL	
	3	LV20949-009A	LENS	1		
	4	LV10459-022A	SUB PANEL	1		
	5	LV32431-002A	POWER BUTTON	1	SL-MODEL	
	6	LV42096-001A	INDICATOR	1	POWER	
	7	LV20951-002A	PUSH BUTTON	1	TUNER	
	8	LV20919-004A	PUSH BUTTON(C)	1	SURROUND	
	9	LV20918-005A	PUSH BUTTON(E)	1	SOURCE	
	10	LV32430-004A	PUSH BUTTON(F)	1	SEA	
	11	QMF51E2-R10-J1	FUSE	1	F 205	
	12	QYSBSF2610Z	SCREW	2	FRONT C.B	
	13	QYSBSF2610Z	SCREW	6	FRONT C.B FL	
	14	QUQ412-1415CJ	FFC WIRE	1		
	15	QUQ412-2538CJ	FFC WIRE	1		
	16	QYSDSG3006Z	SCREW	4	FRONT D	
	17	QYSBSG3006Z	T.SCREW	3	FRONT U	
	18	LV10019-003A	CHASSIS BASE	1		
	19	QMF51W2-2R5-J8	FUSE	1	F 204	
	20	LV10458-002A	FRONT BRACKET	1		
	21	QYSDSG3006Z	SCREW	7	C.B-F.B	
	22	LV42094-003A	H.P BKT	1		
	23	QYSBSG3006Z	T.SCREW	1	H.P BKT-F.B	
	24	VKZ4150-001	SPECIAL NUT	1		
	25	E68587-223SM	CB BKT	3		
	26	QYSBST3006Z	T.SCREW	3	C.B-BKT	
	28	QYSBST3010Z	T.SCREW	4	FOOT	
	29	LV21213-001A	HEAT SINK	1	NEW TYPE	
	30	QYSBSG3012E	SCREW	10	TR	
	31	LV42098-001A	C.B BKT	1	PRI/SEC C.B	
	32	QYSBST3006Z	T.SCREW	1	C.B BKT	
	33	LV32433-001A	H.S BRACKET(R)	1		
	34	LV32434-001A	H.S BRACKET(L)	1		
	35	QYSBSG3008Z	T.SCREW	4	H.S-BKT	
	36	QYSBST3006Z	T.SCREW	2	H.S BKT-F.BKT	
	37	QYSBSG3006Z	T.SCREW	2	H.S BKT	
	38	QYSBST3006Z	T.SCREW	2	H.S BKT-CHASSIS	
	39	QYSBSG3006Z	T.SCREW	2	M.C.B	
	40	E65923-003	TAPPING SCREW	1	M.C.B	
	41	QYSBSG3006Z	T.SCREW	3	H.S-C.B	
	42	QYSBSG3006Z	T.SCREW	3	P.C.B-CHASSIS	
	43	QYSBSG3006Z	T.SCREW	1	C.B-CHASSIS	
	44	QQT0283-001	POWER TRANSF	1		
	45	QYSDSTL4008Z	SPECIAL SCREW	4	P.TRANS	
	46	LV20915-041A	REAR PANEL	1		
	47	QYSBSGY3008M	SPECIAL SCREW	3	R.P-C.BASE	
	48	QYSBSGY3008M	SPECIAL SCREW	1		
	49	QYSBSGY3008M	SPECIAL SCREW	2	TUNER	

■ Parts list (General assembly)

Block No. M1MM

△	Item	Parts number	Parts name	Q'ty	Description	Area
△	50	QYSBSGY3008M	SPECIAL SCREW	4	INPUT	
	51	QYSBSGY3008M	SPECIAL SCREW	2	V AUDIO	
	52	QYSBSGY3008M	SPECIAL SCREW	2	VIDEO	
	53	QYSBSGY3008M	SPECIAL SCREW	2	VOL SEL	
	54	QYSBSGY3008M	SPECIAL SCREW	2	DIGITAL	
	55	QYSBSGY3008M	SPECIAL SCREW	1	COMP C.B	
	56	QYSBSGY3008M	SPECIAL SCREW	4	SPK C.B	
	57	QMPK250-205-JV	POWER CORD	1		
	58	QZW0033-001	STRAIN RELIEF	1		
	59	LE20131-009A/S/	METAL COVER	1		
	60	QYSBSGY3008M	SPECIAL SCREW	3		
	61	E406308-004	SPECIAL SCREW	4		
	62	LV32435-005A	VOL KNOB	1	SL	
	63	QMF51W2-5R0-J8	FUSE	1	F 201	
	64	QMF51W2-2R0-J8	FUSE	2	F 202 F 203	
	65	E409396-003	CAUTION LABEL	1		
	66	QYSBSG3008E	T.SCREW	1		
	67	QYSBSG3008E	T.SCREW	1		
	68	QYSBSG3008E	T.SCREW	1		
	69	QYSBSG3008E	T.SCREW	2		
	70	QYSBSG3008E	T.SCREW	2		
	71	LV30225-097A	SPACER	2		
	72	E47227-036	FOOT	4		
	73	E307572-001	FASTENER	1		
	74	LV30225-0E5A	SPACER	2	FOR METAL COVER	
	75	LV30077-006A	PROTECT SHEET	1	SL	
	76	QYSBSG3008E	T.SCREW	1		

■ Electrical parts list (power amp board)

Block No. 01

▲	Item	Parts number	Parts name	Remarks	Area	▲	Item	Parts number	Parts name	Remarks	Area
	C 201	QFLC2AJ-104Z	M CAPACITOR	.10MF 5% 100V			C 813	QFLC1HJ-103Z	M CAPACITOR	.010MF 5% 50V	
	C 202	QFLC2AJ-104Z	M CAPACITOR	.10MF 5% 100V			C 814	QFLC1HJ-103Z	M CAPACITOR	.010MF 5% 50V	
	C 203	QFLC2AJ-104Z	M CAPACITOR	.10MF 5% 100V			C 815	QCS32HJ-330Z	C CAPACITOR	33PF 5% 500V	
	C 204	QETM1VM-228	E.CAPACITOR	2200MF 20% 35V			C 816	QCS32HJ-330Z	C CAPACITOR	33PF 5% 500V	
	C 205	QETM1VM-108	E.CAPACITOR	1000MF 20% 35V			C 817	QEHR1HM-225Z	E CAPACITOR	2.2MF 20% 50V	
	C 206	QFLC1HJ-473Z	M CAPACITOR	.047MF 5% 50V			C 818	QEHR1HM-225Z	E CAPACITOR	2.2MF 20% 50V	
	C 207	QFLC1HJ-473Z	M CAPACITOR	.047MF 5% 50V			C 819	QEHR2AM-106Z	E CAPACITOR	10MF 20% 100V	
	C 208	QFLC2AJ-472Z	M CAPACITOR	4700PF 5% 100V			C 820	QEHR2AM-106Z	E CAPACITOR	10MF 20% 100V	
	C 209	QETN1JM-477Z	E CAPACITOR	470MF 20% 63V			C 821	QCS32HJ-470Z	C CAPACITOR	47PF 5% 500V	
▲	C 210	QCZ9104-472	C CAPACITOR	4700PF			C 822	QCS32HJ-470Z	C CAPACITOR	47PF 5% 500V	
	C 212	QETN1CM-477Z	E CAPACITOR	470MF 20% 16V			C 823	QCS32HJ-470Z	C CAPACITOR	47PF 5% 500V	
	C 213	QETM0JM-228	E CAPACITOR	2200MF 20% 6.3V			C 824	QCS32HJ-470Z	C CAPACITOR	47PF 5% 500V	
	C 218	QETN1HM-105Z	E CAPACITOR	1.0MF 20% 50V			C 825	QFLC1HJ-473Z	M CAPACITOR	.047MF 5% 50V	
	C 301	QEHR1HM-106Z	E CAPACITOR	10MF 20% 50V			C 826	QFLC1HJ-473Z	M CAPACITOR	.047MF 5% 50V	
	C 302	QEHR1HM-106Z	E CAPACITOR	10MF 20% 50V			C 827	QFLC1HJ-473Z	M CAPACITOR	.047MF 5% 50V	
	C 303	QCS31HJ-271Z	C CAPACITOR	270PF 5% 50V			C 828	QFLC1HJ-473Z	M CAPACITOR	.047MF 5% 50V	
	C 304	QCS31HJ-271Z	C CAPACITOR	270PF 5% 50V			C 829	QETN1HM-476Z	E CAPACITOR	47MF 20% 50V	
	C 305	QCS31HJ-221Z	C CAPACITOR	220PF 5% 50V			C 830	QETN1HM-476Z	E CAPACITOR	47MF 20% 50V	
	C 306	QCS31HJ-221Z	C CAPACITOR	220PF 5% 50V			C 901	QEHR1HM-106Z	E CAPACITOR	10MF 20% 50V	
	C 307	QCB31HK-152Z	C CAPACITOR	1500PF 10% 50V			C 903	QCS31HJ-271Z	C CAPACITOR	270PF 5% 50V	
	C 308	QCB31HK-152Z	C CAPACITOR	1500PF 10% 50V			C 905	QCS31HJ-221Z	C CAPACITOR	220PF 5% 50V	
	C 309	QETN1EM-107Z	E CAPACITOR	100MF 20% 25V			C 907	QCB31HK-152Z	C CAPACITOR	1500PF 10% 50V	
	C 310	QETN1EM-107Z	E CAPACITOR	100MF 20% 25V			C 909	QETN1EM-107Z	E CAPACITOR	100MF 20% 25V	
	C 311	QCS31HJ-100Z	C CAPACITOR	10PF 5% 50V			C 911	QCS31HJ-100Z	C CAPACITOR	10PF 5% 50V	
	C 312	QCS31HJ-100Z	C CAPACITOR	10PF 5% 50V			C 913	QFLC1HJ-103Z	M CAPACITOR	.010MF 5% 50V	
	C 313	QFLC1HJ-103Z	M CAPACITOR	.010MF 5% 50V			C 915	QCS32HJ-330Z	C CAPACITOR	33PF 5% 500V	
	C 314	QFLC1HJ-103Z	M CAPACITOR	.010MF 5% 50V			C 917	QEHR1HM-225Z	E CAPACITOR	2.2MF 20% 50V	
	C 315	QCS32HJ-220Z	C CAPACITOR	22PF 5% 500V			C 919	QEHR2AM-106Z	E CAPACITOR	10MF 20% 100V	
	C 316	QCS32HJ-220Z	C CAPACITOR	22PF 5% 500V			C 921	QCS32HJ-470Z	C CAPACITOR	47PF 5% 500V	
	C 317	QEHR1VM-476Z	E CAPACITOR	47MF 20% 35V			C 923	QCS32HJ-470Z	C CAPACITOR	47PF 5% 500V	
	C 318	QEHR1VM-476Z	E CAPACITOR	47MF 20% 35V			C 925	QFLC1HJ-473Z	M CAPACITOR	.047MF 5% 50V	
	C 319	QETN1JM-107Z	E CAPACITOR	100MF 20% 63V			C 927	QFLC1HJ-473Z	M CAPACITOR	.047MF 5% 50V	
	C 320	QETN1JM-107Z	E CAPACITOR	100MF 20% 63V			C 929	QETN1HM-476Z	E CAPACITOR	47MF 20% 50V	
	C 321	QCS32HJ-470Z	C CAPACITOR	47PF 5% 500V			CN201	QGF1205C1-14	CONNECTOR		
	C 322	QCS32HJ-470Z	C CAPACITOR	47PF 5% 500V			CN203	QGD2501C1-05Z	SOCKET I.M		
	C 323	QCS32HJ-470Z	C CAPACITOR	47PF 5% 500V			CN241	QGD2501C1-05Z	SOCKET I.M		
	C 324	QCS32HJ-470Z	C CAPACITOR	47PF 5% 500V			CN251	QGA3901F2-03	CONNECTOR		
	C 325	QFLC1HJ-473Z	M CAPACITOR	.047MF 5% 50V			CN291	QGB2510J1-04	CONNECTOR		
	C 326	QFLC1HJ-473Z	M CAPACITOR	.047MF 5% 50V			CN292	QGB2510K1-04	CONNECTOR		
	C 327	QFLC1HJ-473Z	M CAPACITOR	.047MF 5% 50V			CN301	QGB2510K1-14	CONNECTOR		
	C 328	QFLC1HJ-473Z	M CAPACITOR	.047MF 5% 50V			CN302	QGB2510K1-14	CONNECTOR		
	C 501	QEK1HM-475Z	E CAPACITOR	4.7MF 20% 50V			CN492	QGB2510K1-04	CONNECTOR		
	C 503	QETN0JM-477Z	E CAPACITOR	470MF 20% 6.3V			CN501	QGB2510K1-07	CONNECTOR		
	C 504	QCS31HJ-470Z	C CAPACITOR	47PF 5% 50V			CN801	QGB2510K1-14	CONNECTOR		
	C 505	QEK1HM-475Z	E CAPACITOR	4.7MF 20% 50V			CN802	QGB2510K1-14	CONNECTOR		
	C 506	QETN0JM-477Z	E CAPACITOR	470MF 20% 6.3V			CN901	QGB2510K1-14	CONNECTOR		
	C 507	QCS31HJ-470Z	C CAPACITOR	47PF 5% 50V			C1331	QCB1HK-331Y	C CAPACITOR	330PF 10% 50V	
	C 511	QETN1CM-108Z	E CAPACITOR	1000MF 20% 16V			C1332	QCB1HK-331Y	C CAPACITOR	330PF 10% 50V	
	C 512	QCB1HK-223Y	C CAPACITOR	.022MF 10% 50V			▲	D 201	10E2-FD	DIODE	
	C 521	QCB1HK-221Y	C CAPACITOR	220PF 10% 50V			▲	D 202	11ES2-T4	DIODE I.M	
	C 522	QCZ0202-155Z	ML C CAPA I/M	1.5MF			▲	D 203	10E2-FD	DIODE	
	C 801	QEHR1HM-106Z	E CAPACITOR	10MF 20% 50V			▲	D 204	11ES2-T4	DIODE I.M	
	C 802	QEHR1HM-106Z	E CAPACITOR	10MF 20% 50V			▲	D 206	11ES2-T4	DIODE I.M	
	C 803	QCS31HJ-271Z	C CAPACITOR	270PF 5% 50V			▲	D 207	11ES2-T4	DIODE I.M	
	C 804	QCS31HJ-271Z	C CAPACITOR	270PF 5% 50V			▲	D 208	11ES2-T4	DIODE I.M	
	C 805	QCS31HJ-221Z	C CAPACITOR	220PF 5% 50V			▲	D 209	11ES2-T4	DIODE I.M	
	C 806	QCS31HJ-221Z	C CAPACITOR	220PF 5% 50V				D 210	1SS133-T2	SI DIODE I/M	
	C 807	QCB31HK-152Z	C CAPACITOR	1500PF 10% 50V				D 211	MTZJ6.8C-T2	Z DIODE I/M	
	C 808	QCB31HK-152Z	C CAPACITOR	1500PF 10% 50V				D 212	11ES2-T4	DIODE I.M	
	C 809	QETN1EM-107Z	E CAPACITOR	100MF 20% 25V				D 217	MTZJ6.2C-T2	Z DIODE I/M	
	C 810	QETN1EM-107Z	E CAPACITOR	100MF 20% 25V				D 218	1SS133-T2	SI DIODE I/M	
	C 811	QCS31HJ-100Z	C CAPACITOR	10PF 5% 50V				D 219	11ES2-T4	DIODE I.M	
	C 812	QCS31HJ-100Z	C CAPACITOR	10PF 5% 50V				D 220	11ES2-T4	DIODE I.M	

■ Electrical parts list (power amp board) Block No. 01

⚠	Item	Parts number	Parts name	Remarks	Area	⚠	Item	Parts number	Parts name	Remarks	Area
	D 221	1SS133-T2	SI DIODE IM				Q 305	KTA1268/GL/-T	TRANSISTOR		
	D 222	MTZJ12C-T2	ZENER DIODE				Q 306	KTA1268/GL/-T	TRANSISTOR		
	D 223	1SS133-T2	SI DIODE IM				Q 307	KTC3200/GL/-T	TRANSISTOR		
	D 301	1SS133-T2	SI DIODE IM				Q 308	KTC3200/GL/-T	TRANSISTOR		
	D 302	1SS133-T2	SI DIODE IM				Q 309	2SD637/QR/	TRANSISTOR		
	D 303	SLR-342MC-T	LED				Q 310	2SD637/QR/	TRANSISTOR		
	D 304	SLR-342MC-T	LED				Q 311	KTC3200/GL/-T	TRANSISTOR		
	D 305	1SS133-T2	SI DIODE IM				Q 312	KTC3200/GL/-T	TRANSISTOR		
	D 306	1SS133-T2	SI DIODE IM				Q 313	KTA1268/GL/-T	TRANSISTOR		
	D 307	1SS133-T2	SI DIODE IM				Q 314	KTA1268/GL/-T	TRANSISTOR		
	D 308	1SS133-T2	SI DIODE IM			⚠	Q 315	2SD2390/OPY/-F6	TRANSISTOR		
	D 309	1SS133-T2	SI DIODE IM			⚠	Q 316	2SD2390/OPY/-F6	TRANSISTOR		
	D 310	1SS133-T2	SI DIODE IM			⚠	Q 317	2SB1560/OPY/-F6	TRANSISTOR		
	D 801	1SS133-T2	SI DIODE IM			⚠	Q 318	2SB1560/OPY/-F6	TRANSISTOR		
	D 802	1SS133-T2	SI DIODE IM				Q 319	KTA1268/GL/-T	TRANSISTOR		
	D 805	1SS133-T2	SI DIODE IM				Q 320	KTA1268/GL/-T	TRANSISTOR		
	D 806	1SS133-T2	SI DIODE IM				Q 501	KTA1267/YG/-T	TRANSISTOR		
	D 807	1SS133-T2	SI DIODE IM				Q 502	KTC3199/GL/-T	TRANSISTOR		
	D 808	1SS133-T2	SI DIODE IM				Q 503	KRC101M-T	TR I/M		
	D 809	1SS133-T2	SI DIODE IM				Q 504	KTA1267/YG/-T	TRANSISTOR		
	D 810	1SS133-T2	SI DIODE IM				Q 505	KTC3199/GL/-T	TRANSISTOR		
	D 901	1SS133-T2	SI DIODE IM				Q 801	2SC2240/L/-T	TR.I/M		
	D 905	1SS133-T2	SI DIODE IM				Q 802	2SC2240/L/-T	TR.I/M		
	D 907	1SS133-T2	SI DIODE IM				Q 803	2SC2240/L/-T	TR.I/M		
	D 909	1SS133-T2	SI DIODE IM				Q 804	2SC2240/L/-T	TR.I/M		
	EP 1	E409182-001SM	GRAND TERMINAL				Q 805	KTA1268/GL/-T	TRANSISTOR		
	EP201	QNZ0136-001Z	EARTH PLATE				Q 806	KTA1268/GL/-T	TRANSISTOR		
	FC211	QNG0020-001Z	FUSE CLIP	F201			Q 809	2SD637/QR/	TRANSISTOR		
	FC212	QNG0020-001Z	FUSE CLIP	F201			Q 810	2SD637/QR/	TRANSISTOR		
	FC221	QNG0020-001Z	FUSE CLIP	F202			Q 811	KTC3200/GL/-T	TRANSISTOR		
	FC222	QNG0020-001Z	FUSE CLIP	F202			Q 812	KTC3200/GL/-T	TRANSISTOR		
	FC231	QNG0020-001Z	FUSE CLIP	F203			Q 813	KTA1268/GL/-T	TRANSISTOR		
	FC232	QNG0020-001Z	FUSE CLIP	F203			Q 814	KTA1268/GL/-T	TRANSISTOR		
	FC241	QNG0020-001Z	FUSE CLIP	F204		⚠	Q 815	2SD2390/OPY/-F6	TRANSISTOR		
	FC242	QNG0020-001Z	FUSE CLIP	F204			Q 816	2SD2390/OPY/-F6	TRANSISTOR		
	FC251	QNG0020-001Z	FUSE CLIP	F205			Q 817	2SB1560/OPY/-F6	TRANSISTOR		
	FC252	QNG0020-001Z	FUSE CLIP	F205			Q 818	2SB1560/OPY/-F6	TRANSISTOR		
	FW201	QUM137-14Z4Z4	PARA RIBON WIRE				Q 819	KTA1268/GL/-T	TRANSISTOR		
	FW251	QUM133-08Z4Z4	PARA RIBON WIRE				Q 820	KTA1268/GL/-T	TRANSISTOR		
	HS211	E70945-H40B	HEAT SINK				Q 901	2SC2240/L/-T	TR.I/M		
	IC501	NJM2246D	IC				Q 903	2SC2240/L/-T	TR.I/M		
	J 501	QNN0063-001	PIN JACK				Q 905	KTA1268/GL/-T	TRANSISTOR		
	J 502	QNN0063-001	PIN JACK	VCR(R/P)			Q 909	2SD637/QR/	TRANSISTOR		
	J 521	QNS0073-001	JACK				Q 911	KTC3200/GL/-T	TRANSISTOR		
	J1331	QNS0022-001	JACK				Q 913	KTA1268/GL/-T	TRANSISTOR		
	L 301	QQLZ005-R45	INDUCTOR				Q 915	2SD2390/OPY/-F6	TRANSISTOR		
	L 302	QQLZ005-R45	INDUCTOR				Q 917	2SB1560/OPY/-F6	TRANSISTOR		
	L 801	QQLZ005-R45	INDUCTOR				Q 919	KTA1268/GL/-T	TRANSISTOR		
	L 802	QQLZ005-R45	INDUCTOR			⚠	R 201	QRJ146J-5R6X	UNF C RESISTOR	5.6 5% 1/4W	
	L 901	QQLZ005-R45	INDUCTOR			⚠	R 203	QRJ146J-3R9X	UNF C RESISTOR	3.9 5% 1/4W	
	Q 202	KRC105M-T	D.TR.I.M.			⚠	R 204	QRJ146J-821X	UNF C RESISTOR	820 5% 1/4W	
	Q 203	KTC3203/0Y/-T	TRANSISTOR			⚠	R 208	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W	
	Q 205	KTC3200/GL/-T	TRANSISTOR				R 209	QRE141J-104Y	C RESISTOR	100K 5% 1/4W	
	Q 206	KRC105M-T	D.TR.I.M.			⚠	R 210	QRJ146J-680X	UNF C RESISTOR	68 5% 1/4W	
	Q 207	KRC105M-T	D.TR.I.M.			⚠	R 211	QRJ146J-153X	UNF C RESISTOR	15K 5% 1/4W	
	Q 208	KRC105M-T	D.TR.I.M.			⚠	R 212	QRL012J-332	UNF OMF RESISTO	3.3K 5% 1/1W	
	Q 209	KRC105M-T	D.TR.I.M.				R 301	QRE141J-222Y	C RESISTOR	2.2K 5% 1/4W	
	Q 210	KRC105M-T	D.TR.I.M.				R 302	QRE141J-222Y	C RESISTOR	2.2K 5% 1/4W	
	Q 211	2SD2395/EF/	TRANSISTOR				R 303	QRE141J-563Y	C RESISTOR	56K 5% 1/4W	
	Q 301	2SC2240/L/-T	TR.I/M				R 304	QRE141J-563Y	C RESISTOR	56K 5% 1/4W	
	Q 302	2SC2240/L/-T	TR.I/M				R 305	QRE141J-123Y	C RESISTOR	12K 5% 1/4W	
	Q 303	2SC2240/L/-T	TR.I/M				R 306	QRE141J-123Y	C RESISTOR	12K 5% 1/4W	
	Q 304	2SC2240/L/-T	TR.I/M				R 307	QRE141J-272Y	C RESISTOR	2.7K 5% 1/4W	

■ Electrical parts list (Power amp board)

Block No. 01

△	Item	Parts number	Parts name	Remarks	Area	△	Item	Parts number	Parts name	Remarks	Area
	R 308	QRE141J-272Y	C RESISTOR	2.7K 5% 1/4W			R 521	QRE141J-221Y	C RESISTOR	220 5% 1/4W	
	R 309	QRE141J-101Y	C RESISTOR	100 5% 1/4W			R 522	QRE141J-471Y	C RESISTOR	470 5% 1/4W	
	R 310	QRE141J-101Y	C RESISTOR	100 5% 1/4W			R 801	QRE141J-222Y	C RESISTOR	2.2K 5% 1/4W	
	R 311	QRJ146J-391X	UNF C RESISTOR	390 5% 1/4W			R 802	QRE141J-222Y	C RESISTOR	2.2K 5% 1/4W	
	R 312	QRJ146J-391X	UNF C RESISTOR	390 5% 1/4W			R 803	QRE141J-563Y	C RESISTOR	56K 5% 1/4W	
	R 313	QRE141J-563Y	C RESISTOR	56K 5% 1/4W			R 804	QRE141J-563Y	C RESISTOR	56K 5% 1/4W	
	R 314	QRE141J-563Y	C RESISTOR	56K 5% 1/4W			R 805	QRE141J-123Y	C RESISTOR	12K 5% 1/4W	
△	R 315	QRJ146J-331X	UNF C RESISTOR	330 5% 1/4W			R 806	QRE141J-123Y	C RESISTOR	12K 5% 1/4W	
△	R 316	QRJ146J-331X	UNF C RESISTOR	330 5% 1/4W			R 807	QRE141J-272Y	C RESISTOR	2.7K 5% 1/4W	
	R 317	QRE141J-473Y	C RESISTOR	47K 5% 1/4W			R 808	QRE141J-272Y	C RESISTOR	2.7K 5% 1/4W	
	R 318	QRE141J-473Y	C RESISTOR	47K 5% 1/4W			R 809	QRE141J-101Y	C RESISTOR	100 5% 1/4W	
	R 319	QRJ146J-331X	UNF C RESISTOR	330 5% 1/4W			R 810	QRE141J-101Y	C RESISTOR	100 5% 1/4W	
	R 320	QRJ146J-331X	UNF C RESISTOR	330 5% 1/4W			R 811	QRJ146J-391X	UNF C RESISTOR	390 5% 1/4W	
△	R 321	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W			R 812	QRJ146J-391X	UNF C RESISTOR	390 5% 1/4W	
△	R 322	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W			R 813	QRE141J-563Y	C RESISTOR	56K 5% 1/4W	
△	R 323	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W			R 814	QRE141J-563Y	C RESISTOR	56K 5% 1/4W	
△	R 324	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W		△	R 815	QRJ146J-331X	UNF C RESISTOR	330 5% 1/4W	
	R 325	QRE141J-361Y	C RESISTOR	360 5% 1/4W		△	R 816	QRJ146J-331X	UNF C RESISTOR	330 5% 1/4W	
	R 326	QRE141J-361Y	C RESISTOR	360 5% 1/4W		△	R 821	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W	
	R 327	QRE141J-471Y	C RESISTOR	470 5% 1/4W		△	R 822	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W	
	R 328	QRE141J-471Y	C RESISTOR	470 5% 1/4W		△	R 823	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W	
	R 329	QRE141J-471Y	C RESISTOR	470 5% 1/4W		△	R 824	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W	
	R 330	QRE141J-471Y	C RESISTOR	470 5% 1/4W			R 825	QRE141J-361Y	C RESISTOR	360 5% 1/4W	
△	R 331	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W			R 826	QRE141J-361Y	C RESISTOR	360 5% 1/4W	
△	R 332	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W			R 827	QRE141J-821Y	C RESISTOR	820 5% 1/4W	
△	R 333	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W			R 828	QRE141J-821Y	C RESISTOR	820 5% 1/4W	
△	R 334	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W			R 829	QRE141J-221Y	C RESISTOR	220 5% 1/4W	
	R 335	QRE141J-121Y	C RESISTOR	120 5% 1/4W			R 830	QRE141J-221Y	C RESISTOR	220 5% 1/4W	
	R 336	QRE141J-121Y	C RESISTOR	120 5% 1/4W		△	R 831	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W	
	R 337	QRE141J-121Y	C RESISTOR	120 5% 1/4W		△	R 832	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W	
	R 338	QRE141J-121Y	C RESISTOR	120 5% 1/4W		△	R 833	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W	
	R 339	QRE141J-181Y	C RESISTOR	180 5% 1/4W		△	R 834	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W	
	R 340	QRE141J-181Y	C RESISTOR	180 5% 1/4W			R 835	QRE141J-181Y	C RESISTOR	180 5% 1/4W	
	R 341	QRE141J-181Y	C RESISTOR	180 5% 1/4W			R 836	QRE141J-181Y	C RESISTOR	180 5% 1/4W	
	R 342	QRE141J-181Y	C RESISTOR	180 5% 1/4W			R 837	QRE141J-181Y	C RESISTOR	180 5% 1/4W	
	R 343	QRZ0218-R22	C RESISTOR	1/2W			R 838	QRE141J-181Y	C RESISTOR	180 5% 1/4W	
	R 344	QRZ0218-R22	C RESISTOR	1/2W			R 839	QRE141J-181Y	C RESISTOR	180 5% 1/4W	
	R 345	QRE141J-102Y	C RESISTOR	1.0K 5% 1/4W			R 840	QRE141J-181Y	C RESISTOR	180 5% 1/4W	
	R 346	QRE141J-102Y	C RESISTOR	1.0K 5% 1/4W			R 841	QRE141J-181Y	C RESISTOR	180 5% 1/4W	
	R 347	QRE141J-153Y	C RESISTOR	15K 5% 1/4W			R 842	QRE141J-181Y	C RESISTOR	180 5% 1/4W	
	R 348	QRE141J-153Y	C RESISTOR	15K 5% 1/4W			R 843	QRZ0218-R22	C RESISTOR	1/2W	
	R 349	QRE141J-473Y	C RESISTOR	47K 5% 1/4W			R 844	QRZ0218-R22	C RESISTOR	1/2W	
	R 350	QRE141J-473Y	C RESISTOR	47K 5% 1/4W			R 845	QRE141J-102Y	C RESISTOR	1.0K 5% 1/4W	
△	R 351	QRJ125J-330	UNF OMF RESISTO	33 5% 1/2W			R 846	QRE141J-102Y	C RESISTOR	1.0K 5% 1/4W	
△	R 352	QRJ125J-330	UNF OMF RESISTO	33 5% 1/2W			R 847	QRE141J-183Y	C RESISTOR	18K 5% 1/4W	
△	R 353	QRL027J-100	UNF OMF RESISTO	10 5% 1/2W			R 848	QRE141J-183Y	C RESISTOR	18K 5% 1/4W	
△	R 354	QRL027J-100	UNF OMF RESISTO	10 5% 1/2W			R 849	QRE141J-123Y	C RESISTOR	12K 5% 1/4W	
	R 363	QRE141J-272Y	C RESISTOR	2.7K 5% 1/4W			R 850	QRE141J-123Y	C RESISTOR	12K 5% 1/4W	
	R 364	QRE141J-272Y	C RESISTOR	2.7K 5% 1/4W		△	R 851	QRJ125J-330	UNF OMF RESISTO	33 5% 1/2W	
	R 501	QRE141J-331Y	C RESISTOR	330 5% 1/4W		△	R 852	QRJ125J-330	UNF OMF RESISTO	33 5% 1/2W	
	R 502	QRE141J-750Y	C RESISTOR	75 5% 1/4W		△	R 853	QRL027J-100	UNF OMF RESISTO	10 5% 1/2W	
	R 505	QRE141J-750Y	C RESISTOR	75 5% 1/4W		△	R 854	QRL027J-100	UNF OMF RESISTO	10 5% 1/2W	
	R 506	QRE141J-473Y	C RESISTOR	47K 5% 1/4W			R 855	QRE141J-332Y	C RESISTOR	3.3K 5% 1/4W	
	R 507	QRE141J-331Y	C RESISTOR	330 5% 1/4W			R 856	QRE141J-332Y	C RESISTOR	3.3K 5% 1/4W	
	R 508	QRE141J-750Y	C RESISTOR	75 5% 1/4W			R 857	QRE141J-332Y	C RESISTOR	3.3K 5% 1/4W	
	R 509	QRE141J-750Y	C RESISTOR	75 5% 1/4W			R 858	QRE141J-332Y	C RESISTOR	3.3K 5% 1/4W	
	R 510	QRE141J-473Y	C RESISTOR	47K 5% 1/4W			R 859	QRE141J-332Y	C RESISTOR	3.3K 5% 1/4W	
	R 511	QRE141J-151Y	C RESISTOR	150 5% 1/4W			R 860	QRE141J-332Y	C RESISTOR	3.3K 5% 1/4W	
	R 512	QRE141J-271Y	C RESISTOR	270 5% 1/4W			R 861	QRE141J-332Y	C RESISTOR	3.3K 5% 1/4W	
	R 513	QRE141J-152Y	C RESISTOR	1.5K 5% 1/4W			R 862	QRE141J-332Y	C RESISTOR	3.3K 5% 1/4W	
	R 514	QRE141J-151Y	C RESISTOR	150 5% 1/4W			R 863	QRE141J-272Y	C RESISTOR	2.7K 5% 1/4W	
	R 515	QRE141J-271Y	C RESISTOR	270 5% 1/4W			R 864	QRE141J-272Y	C RESISTOR	2.7K 5% 1/4W	
	R 516	QRE141J-152Y	C RESISTOR	1.5K 5% 1/4W			R 901	QRE141J-222Y	C RESISTOR	2.2K 5% 1/4W	

■ Electrical parts list (Power amp board)

Block No. 01

⚠	Item	Parts number	Parts name	Remarks	Area
	R 903	QRE141J-563Y	C RESISTOR	56K 5% 1/4W	
	R 905	QRE141J-123Y	C RESISTOR	12K 5% 1/4W	
	R 907	QRE141J-272Y	C RESISTOR	2.7K 5% 1/4W	
	R 909	QRE141J-101Y	C RESISTOR	100 5% 1/4W	
	R 911	QRJ146J-301X	UNF C RESISTOR	300 5% 1/4W	
	R 913	QRE141J-563Y	C RESISTOR	56K 5% 1/4W	
⚠	R 915	QRJ146J-331X	UNF C RESISTOR	330 5% 1/4W	
⚠	R 921	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W	
⚠	R 923	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W	
	R 925	QRE141J-361Y	C RESISTOR	360 5% 1/4W	
	R 927	QRE141J-821Y	C RESISTOR	820 5% 1/4W	
	R 929	QRE141J-221Y	C RESISTOR	220 5% 1/4W	
⚠	R 931	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W	
⚠	R 933	QRJ146J-100X	UNF C RESISTOR	10 5% 1/4W	
	R 935	QRE141J-181Y	C RESISTOR	180 5% 1/4W	
	R 937	QRE141J-181Y	C RESISTOR	180 5% 1/4W	
	R 939	QRE141J-181Y	C RESISTOR	180 5% 1/4W	
	R 941	QRE141J-181Y	C RESISTOR	180 5% 1/4W	
	R 943	QRZ0218-R22	C RESISTOR	1/2W	
	R 945	QRE141J-102Y	C RESISTOR	1.0K 5% 1/4W	
	R 947	QRE141J-183Y	C RESISTOR	18K 5% 1/4W	
	R 949	QRE141J-473Y	C RESISTOR	47K 5% 1/4W	
⚠	R 951	QRJ125J-330	UNF OMF RESISTO	33 5% 1/2W	
⚠	R 953	QRL027J-100	UNF OMF RESISTO	10 5% 1/2W	
	R 955	QRE141J-332Y	C RESISTOR	3.3K 5% 1/4W	
	R 957	QRE141J-332Y	C RESISTOR	3.3K 5% 1/4W	
	R 959	QRE141J-332Y	C RESISTOR	3.3K 5% 1/4W	
	R 961	QRE141J-332Y	C RESISTOR	3.3K 5% 1/4W	
	R 963	QRE141J-272Y	C RESISTOR	2.7K 5% 1/4W	
⚠	RY202	QSK0142-001	RELAY		
⚠	RY203	QSK0109-001	RELAY		
⚠	R1331	QRL027J-471	UNF OMF RESISTO	470 5% 1/2W	
⚠	R1332	QRL027J-471	UNF OMF RESISTO	470 5% 1/2W	
⚠	T 202	QQT0281-004	POWER TRANSF		
	TA201	QNZ0079-001Z	TAB IM		
	TA202	QNZ0079-001Z	TAB IM		
⚠	TH301	QAD0012-202	BATTERY PACK		
⚠	TH302	QAD0012-202	BATTERY PACK		
⚠	TH801	QAD0012-202	BATTERY PACK		
⚠	TH802	QAD0012-202	BATTERY PACK		
⚠	TH901	QAD0012-202	BATTERY PACK		
	VR301	QVP0008-102Z	SEMI V RESISTOR		
	VR302	QVP0008-102Z	SEMI V RESISTOR		
⚠	VS201	QSW0812-001	VOLTAGE SWITCH		

■ Electrical parts list (Main board)

Block No. 02

▲	Item	Parts number	Parts name	Remarks	Area	▲	Item	Parts number	Parts name	Remarks	Area
	C 400	QCB1HK-223Y	C CAPACITOR	.022MF 10% 50V			C1367	QCB1HK-221Y	C CAPACITOR	220PF 10% 50V	
	C 419	QCB1HK-223Y	C CAPACITOR	.022MF 10% 50V			C1368	QFLC1HJ-102Z	M CAPACITOR	1000PF 5% 50V	
	C 420	QCB1HK-223Y	C CAPACITOR	.022MF 10% 50V			C1369	QFLC1HJ-223Z	M CAPACITOR	.022MF 5% 50V	
	C 421	QCB1HK-331Y	C CAPACITOR	330PF 10% 50V			C1370	QCS31HJ-221Z	C CAPACITOR	220PF 5% 50V	
	C 422	QCB1HK-331Y	C CAPACITOR	330PF 10% 50V			C1371	QCB1HK-221Y	C CAPACITOR	220PF 10% 50V	
	C 423	QCB1HK-331Y	C CAPACITOR	330PF 10% 50V			C1372	QCS31HJ-221Z	C CAPACITOR	220PF 5% 50V	
	C 424	QCB1HK-331Y	C CAPACITOR	330PF 10% 50V			C1373	QFLC1HJ-223Z	M CAPACITOR	.022MF 5% 50V	
	C 425	QCB1HK-331Y	C CAPACITOR	330PF 10% 50V			C1374	QCS31HJ-221Z	C CAPACITOR	220PF 5% 50V	
	C 426	QCB1HK-331Y	C CAPACITOR	330PF 10% 50V			C1375	QCS31HJ-221Z	C CAPACITOR	220PF 5% 50V	
	C 427	QCB1HK-221Y	C CAPACITOR	220PF 10% 50V			C1376	QCB1HK-221Y	C CAPACITOR	220PF 10% 50V	
	C 428	QCB1HK-221Y	C CAPACITOR	220PF 10% 50V		▲	D1301	30DF2-FC	DIODE		
	C 429	QCB1HK-331Y	C CAPACITOR	330PF 10% 50V		▲	D1302	30DF2-FC	DIODE		
	C 430	QCB1HK-331Y	C CAPACITOR	330PF 10% 50V		▲	D1303	30DF2-FC	DIODE		
	C 431	QCB1HK-331Y	C CAPACITOR	330PF 10% 50V		▲	D1304	30DF2-FC	DIODE		
	C 432	QCB1HK-331Y	C CAPACITOR	330PF 10% 50V			D1305	MTZJ18C-T2	Z.DIODE I.M		
	C 433	QCB1HK-221Y	C CAPACITOR	220PF 10% 50V			D1306	MTZJ30C-T2	ZENER DIODE		
	C 434	QCB1HK-221Y	C CAPACITOR	220PF 10% 50V			D1307	1SS133-T2	SI DIODE IM		
	C 435	QCB1HK-331Y	C CAPACITOR	330PF 10% 50V			D1308	1SS133-T2	SI DIODE IM		
	C 436	QCB1HK-331Y	C CAPACITOR	330PF 10% 50V			D1309	MTZJ20C-T2	Z.DIODE I.M		
	C 440	QCB1HK-221Y	C CAPACITOR	220PF 10% 50V			D1352	1SS133-T2	SI DIODE IM		
	C 441	QETN1EM-106Z	E CAPACITOR	10MF 20% 25V			D1353	1SS133-T2	SI DIODE IM		
	C 442	QETN1EM-106Z	E CAPACITOR	10MF 20% 25V			D1354	1SS133-T2	SI DIODE IM		
	C 443	QETN1EM-226Z	E CAPACITOR	22MF 20% 25V			D1355	1SS133-T2	SI DIODE IM		
	C 444	QETN1EM-226Z	E CAPACITOR	22MF 20% 25V			D1356	MTZJ5.1C-T2	ZENER DIODE		
	C 445	QCB1HK-223Y	C CAPACITOR	.022MF 10% 50V			D1357	1SS133-T2	SI DIODE IM		
	C 446	QCB1HK-223Y	C CAPACITOR	.022MF 10% 50V			D1358	1SS133-T2	SI DIODE IM		
	C 451	QCB1HK-331Y	C CAPACITOR	330PF 10% 50V			D1359	1SS133-T2	SI DIODE IM		
	C 452	QCB1HK-331Y	C CAPACITOR	330PF 10% 50V			D1360	1SS133-T2	SI DIODE IM		
	C 459	QFLC1HJ-104Z	M CAPACITOR	.10MF 5% 50V			EP301	QNZ0136-001Z	EARTH PLATE		
	C 460	QCZ0202-155Z	ML C CAPA I/M	1.5MF			FW301	QUM135-25Z4Z4	PARA RIBON WIRE		
	CN311	QGB2510J1-14	CONNECTOR				FW302	QUM136-25Z4Z4	PARA RIBON WIRE		
	CN312	QGB2510J1-14	CONNECTOR				FW303	QUM135-28DGZ4	PARA RIBON WIRE		
	CN321	QGB2510J1-14	CONNECTOR				FW341	QUM135-20DGZ4	PARA RIBON WIRE		
	CN331	QGB2510J1-14	CONNECTOR				IC402	TC9164AN	IC		
	CN332	QGB2510J1-14	CONNECTOR				IC403	BA15218N	IC		
	CN351	QJK012-032403	SKT WIRE ASSY				J 402	QNN0168-001	PIN JACK		
	CN371	QJP001-031201	SHI CR C-B WIRE				J 403	QNN0168-001	PIN JACK		
	CN372	QJP002-021201	SHI CR C-B WIRE				J 404	QNN0389-001	PIN JACK	DVD FL/FR	
	CN373	QJP001-031201	SHI CR C-B WIRE				J 406	QNN0060-001	PIN JACK		
	CN401	QGB2510K1-14	CONNECTOR				L1351	QQLZ005-R45	INDUCTOR		
	CN451	QGB2510K1-11	CONNECTOR				L1352	QQLZ005-R45	INDUCTOR		
	C1301	QFZ9076-104Z	MM CAPACITOR	.10MF			L1353	QQLZ005-R45	INDUCTOR		
	C1302	QCE22HP-103	C CAPACITOR	.010MF +100%-0%			L1354	QQLZ005-R45	INDUCTOR		
	C1303	QCE22HP-103	C CAPACITOR	.010MF +100%-0%			L1355	QQLZ005-R45	INDUCTOR		
	C1304	QEZO341-688	E CAPACITER	6800MF		▲	Q1301	KTA1046/Y/	TRANSISTOR		
	C1305	QEZO341-688	E CAPACITER	6800MF			Q1302	KTC3200/GL/-T	TRANSISTOR		
	C1306	QETN1EM-476Z	E CAPACITOR	47MF 20% 25V			Q1303	KTA1268/GL/-T	TRANSISTOR		
	C1308	QETN1HM-476Z	E CAPACITOR	47MF 20% 50V			Q1304	KTC3199/GL/-T	TRANSISTOR		
	C1309	QEK1HM-106Z	E CAPACITOR	10MF 20% 50V			Q1305	2SD2395/EF/	TRANSISTOR		
	C1310	QEK1CM-476Z	E CAPACITOR	47MF 20% 16V			Q1306	KTA1023/OY/-T	TRANSISTOR		
	C1311	QEK1HM-226Z	E CAPACITOR	22MF 20% 50V			Q1307	KTC3200/GL/-T	TRANSISTOR		
	C1351	QETN1HM-475Z	E CAPACITOR	4.7MF 20% 50V			Q1351	KRC109M-T	D.TR.I.M.		
	C1352	QEK1HM-475Z	E CAPACITOR	4.7MF 20% 50V			Q1352	KRC109M-T	D.TR.I.M.		
	C1353	QEK1HM-475Z	E CAPACITOR	4.7MF 20% 50V			Q1353	KRC109M-T	D.TR.I.M.		
	C1354	QEK1HM-475Z	E CAPACITOR	4.7MF 20% 50V			Q1354	KRC109M-T	D.TR.I.M.		
	C1359	QFLC1HJ-223Z	M CAPACITOR	.022MF 5% 50V			Q1355	KRC109M-T	D.TR.I.M.		
	C1360	QFLC1HJ-223Z	M CAPACITOR	.022MF 5% 50V			Q1356	KRC109M-T	D.TR.I.M.		
	C1361	QFLC1HJ-223Z	M CAPACITOR	.022MF 5% 50V			Q1357	KRC109M-T	D.TR.I.M.		
	C1362	QCS31HJ-221Z	C CAPACITOR	220PF 5% 50V			Q1358	KRC109M-T	D.TR.I.M.		
	C1363	QFLC1HJ-223Z	M CAPACITOR	.022MF 5% 50V			R 421	QRE141J-471Y	C RESISTOR	470 5% 1/4W	
	C1364	QCS31HJ-221Z	C CAPACITOR	220PF 5% 50V			R 422	QRE141J-471Y	C RESISTOR	470 5% 1/4W	
	C1365	QFLC1HJ-473Z	M CAPACITOR	.047MF 5% 50V			R 423	QRE141J-471Y	C RESISTOR	470 5% 1/4W	
	C1366	QCS31HJ-221Z	C CAPACITOR	220PF 5% 50V			R 424	QRE141J-471Y	C RESISTOR	470 5% 1/4W	

■ Electrical parts list (Main board) Block No. 02

⚠	Item	Parts number	Parts name	Remarks	Area
	R 425	QRE141J-471Y	C RESISTOR	470 5% 1/4W	
	R 426	QRE141J-471Y	C RESISTOR	470 5% 1/4W	
	R 429	QRE141J-471Y	C RESISTOR	470 5% 1/4W	
	R 430	QRE141J-471Y	C RESISTOR	470 5% 1/4W	
	R 431	QRE141J-471Y	C RESISTOR	470 5% 1/4W	
	R 432	QRE141J-471Y	C RESISTOR	470 5% 1/4W	
	R 435	QRE141J-471Y	C RESISTOR	470 5% 1/4W	
	R 436	QRE141J-471Y	C RESISTOR	470 5% 1/4W	
	R 440	QRE141J-102Y	C RESISTOR	1.0K 5% 1/4W	
	R 441	QRE141J-104Y	C RESISTOR	100K 5% 1/4W	
	R 442	QRE141J-104Y	C RESISTOR	100K 5% 1/4W	
	R 443	QRE141J-104Y	C RESISTOR	100K 5% 1/4W	
	R 444	QRE141J-104Y	C RESISTOR	100K 5% 1/4W	
	R 445	QRE141J-104Y	C RESISTOR	100K 5% 1/4W	
	R 446	QRE141J-104Y	C RESISTOR	100K 5% 1/4W	
⚠	R 449	QRJ146J-271X	UNF C RESISTOR	270 5% 1/4W	
⚠	R 450	QRJ146J-271X	UNF C RESISTOR	270 5% 1/4W	
	R 451	QRE141J-471Y	C RESISTOR	470 5% 1/4W	
	R 452	QRE141J-471Y	C RESISTOR	470 5% 1/4W	
	R 458	QRJ146J-271X	UNF C RESISTOR	270 5% 1/4W	
	R 459	QRJ146J-271X	UNF C RESISTOR	270 5% 1/4W	
⚠	RY302	QSK0109-001	RELAY		
⚠	RY303	QSK0109-001	RELAY		
⚠	RY304	QSK0109-001	RELAY		
⚠	R1301	QRL027J-332	UNF OMF RESISTO	3.3K 5% 1/2W	
⚠	R1302	QRZ9005-100X	F RESISTOR	10 1/4W	
⚠	R1303	QRJ146J-562X	UNF C RESISTOR	5.6K 5% 1/4W	
	R1304	QRE141J-104Y	C RESISTOR	100K 5% 1/4W	
	R1305	QRE141J-104Y	C RESISTOR	100K 5% 1/4W	
	R1306	QRE141J-823Y	C RESISTOR	82K 5% 1/4W	
	R1307	QRE141J-104Y	C RESISTOR	100K 5% 1/4W	
	R1308	QRE141J-104Y	C RESISTOR	100K 5% 1/4W	
	R1309	QRE141J-103Y	C RESISTOR	10K 5% 1/4W	
	R1310	QRE141J-103Y	C RESISTOR	10K 5% 1/4W	
	R1311	QRE141J-104Y	C RESISTOR	100K 5% 1/4W	
	R1312	QRE141J-104Y	C RESISTOR	100K 5% 1/4W	
⚠	R1313	QRZ9005-100X	F RESISTOR	10 1/0W	
⚠	R1314	QRJ146J-103X	UNF C RESISTOR	10K 5% 1/4W	
⚠	R1315	QRJ146J-2R2X	UNF C RESISTOR	2.2 5% 1/4W	
⚠	R1316	QRJ146J-102X	UNF C RESISTOR	1.0K 5% 1/4W	
⚠	R1317	QRJ146J-223X	UNF C RESISTOR	22K 5% 1/4W	
	R1318	QRE141J-223Y	C RESISTOR	22K 5% 1/4W	
	R1319	QRE141J-473Y	C RESISTOR	47K 5% 1/4W	
⚠	R1352	QRJ146J-680X	UNF C RESISTOR	68 5% 1/4W	
⚠	R1353	QRJ146J-680X	UNF C RESISTOR	68 5% 1/4W	
⚠	R1354	QRJ146J-680X	UNF C RESISTOR	68 5% 1/4W	
⚠	R1355	QRJ146J-392X	UNF C RESISTOR	3.9K 5% 1/4W	
	R1356	QRE141J-472Y	C RESISTOR	4.7K 5% 1/4W	
	R1357	QRE141J-223Y	C RESISTOR	22K 5% 1/4W	
	R1358	QRE141J-682Y	C RESISTOR	6.8K 5% 1/4W	
	R1359	QRE141J-472Y	C RESISTOR	4.7K 5% 1/4W	
	R1360	QRE141J-472Y	C RESISTOR	4.7K 5% 1/4W	
	R1361	QRE141J-472Y	C RESISTOR	4.7K 5% 1/4W	
	R1362	QRE141J-472Y	C RESISTOR	4.7K 5% 1/4W	
	R1363	QRE141J-472Y	C RESISTOR	4.7K 5% 1/4W	
	R1364	QRE141J-223Y	C RESISTOR	22K 5% 1/4W	
	R1365	QRE141J-682Y	C RESISTOR	6.8K 5% 1/4W	
	R1366	QRE141J-223Y	C RESISTOR	22K 5% 1/4W	
	R1367	QRE141J-682Y	C RESISTOR	6.8K 5% 1/4W	
⚠	R1370	QRJ146J-2R7X	UNF C RESISTOR	2.7 5% 1/4W	
⚠	R1371	QRJ146J-2R7X	UNF C RESISTOR	2.7 5% 1/4W	
⚠	R1372	QRJ146J-2R7X	UNF C RESISTOR	2.7 5% 1/4W	
⚠	R1373	QRJ146J-2R7X	UNF C RESISTOR	2.7 5% 1/4W	

⚠	Item	Parts number	Parts name	Remarks	Area
⚠	R1374	QRJ146J-2R7X	UNF C RESISTOR	2.7 5% 1/4W	
	ST304	QNB0103-002	SPK TERMINAL		
	ST305	QNB0001-002	SPK TERMINAL		

■ Electrical parts list (System control & Audio board) Block No. 03

△	Item	Parts number	Parts name	Remarks	Area	△	Item	Parts number	Parts name	Remarks	Area
	BK701	LV42093-001A	FL HOLDER(L)				C1438	QETN0JM-477Z	E CAPACITOR	470MF 20% 6.3V	
	BK702	LV42092-001A	FL HOLDER(R)				C1439	QFLC1HJ-562Z	M CAPACITOR	5600PF 5% 50V	
	C 701	QEKCOJM-107Z	E CAPACITOR	100MF 20% 6.3V			C1440	QFLC1HJ-562Z	M CAPACITOR	5600PF 5% 50V	
	C 702	QCZ0202-155Z	ML C CAPA I/M	1.5MF			C1443	QCZ0202-155Z	ML C CAPA I/M	1.5MF	
	C 703	QEKCIHM-225Z	E CAPACITOR	2.2MF 20% 50V			C1444	NCB31CK-223X	C CAPACITOR		
	C 704	NCB31CK-223X	C CAPACITOR				C1445	NCB31CK-223X	C CAPACITOR		
	C 705	QEKCOJM-107Z	E CAPACITOR	100MF 20% 6.3V			C1446	NCB31HK-221X	C CAPACITOR		
	C 706	NCB21HK-331X	C.CAPA. C.M				C1447	QEKCIHM-475Z	E CAPACITOR	4.7MF 20% 50V	
	C 707	QEKCIHM-475Z	E CAPACITOR	4.7MF 20% 50V			C1453	QETN1HM-475Z	E CAPACITOR	4.7MF 20% 50V	
	C 708	QEKCIHM-475Z	E CAPACITOR	4.7MF 20% 50V			C1459	QETN1HM-475Z	E CAPACITOR	4.7MF 20% 50V	
	C 709	QEKCIHM-475Z	E CAPACITOR	4.7MF 20% 50V			C1460	NCB31CK-223X	C CAPACITOR		
	C 713	NCB21HK-103X	C CAPACITOR				C1461	NCB31CK-223X	C CAPACITOR		
	C 714	NCB21HK-103X	C CAPACITOR				C1463	QETN1EM-106Z	E CAPACITOR	10MF 20% 25V	
	C 715	NCB21HK-103X	C CAPACITOR				C1464	QETN1EM-106Z	E CAPACITOR	10MF 20% 25V	
	C 716	NCB21HK-103X	C CAPACITOR				C1465	QETN1HM-106Z	E CAPACITOR	10MF 20% 50V	
	C 717	NCB21HK-103X	C CAPACITOR				D 701	1SS355-X	DIODE C.M		
	C 718	NCB21HK-103X	C CAPACITOR				D 702	1SS355-X	DIODE C.M		
	C 719	NCB21HK-103X	C CAPACITOR				D 719	SLR-342VC-T	LED		
	C 720	NCB31CK-104X	C CAPACITOR				DI701	QLF0098-001	FL TUBE		
	C 721	NCB31CK-104X	C CAPACITOR				D1401	MTZJ13C-T2	ZENER DIODE		
	C 722	QCZ0202-155Z	ML C CAPA I/M	1.5MF			D1402	MTZJ6.2C-T2	Z DIODE I/M		
	C 730	NCB31CK-104X	C CAPACITOR				D1403	MTZJ5.6C-T2	ZENER DIODE		
	CN402	QGF1205C1-25	CONNECTOR				D1404	MTZJ5.6C-T2	ZENER DIODE		
	CN411	QGB2501J1-12	CONNECTOR				D1405	MTZJ13C-T2	ZENER DIODE		
	CN421	QGB2510J1-14	CONNECTOR				D1406	MTZJ10C-T2	Z.DIODE I.M		
	CN431	QGB2510J1-11	CONNECTOR				D1407	MTZJ7.5C-T2	ZENER DIODE		
	CN441	QGB2510J1-07	CONNECTOR				D1408	MTZJ7.5C-T2	ZENER DIODE		
	CN471	QGA2501C1-03	3P CONNECTOR				D1409	1SS355-X	DIODE C.M		
	CN472	QGA2501C1-02	2P CONNECTOR				D1410	1SS355-X	DIODE C.M		
	CN473	QGA2501C1-03	3P CONNECTOR				D1411	1SS355-X	DIODE C.M		
	CN481	QGB2510J1-20	CONNECTOR				D1412	1SS355-X	DIODE C.M		
	CN491	QGB2510J1-04	CONNECTOR				EP401	QNZ0136-001Z	EARTH PLATE		
	CN701	QGF1205F1-14	CONNECTOR				FL401	QQR0590-001	FILTER		
	CN702	QGF1205F1-25	CONNECTOR				FL402	QQR0590-001	FILTER		
	CN704	WJS0020-001A	SKT.WIRE ASS'Y				HS401	E70306-001	HEAT SINK		
	CN714	QGA2001C1-03	3P PLUG ASSY				HS402	E70306-001	HEAT SINK		
	C1401	QETN1HM-476Z	E CAPACITOR	47MF 20% 50V			HS403	E70306-001	HEAT SINK		
	C1402	QETN1EM-107Z	E CAPACITOR	100MF 20% 25V			HS404	E70306-001	HEAT SINK		
	C1403	QETN1EM-107Z	E CAPACITOR	100MF 20% 25V			HS405	E70306-001	HEAT SINK		
	C1404	QETN1EM-107Z	E CAPACITOR	100MF 20% 25V			HS434	E70306-001	HEAT SINK		
	C1405	QETN1EM-107Z	E CAPACITOR	100MF 20% 25V			HS435	E70306-001	HEAT SINK		
	C1406	QETN1EM-107Z	E CAPACITOR	100MF 20% 25V			IC423	TC9162AF-X	IC		
	C1407	QCF31HZ-223Z	C CAPACITOR	.022MF +80:-20%			IC427	BA15218F-XE	IC		
	C1408	QETN1EM-476Z	E CAPACITOR	47MF 20% 25V			IC428	M62446FP-X	IC		
	C1409	QETN1EM-476Z	E CAPACITOR	47MF 20% 25V			IC701	MN101C35DJW	IC		
	C1410	NCB31CK-223X	C CAPACITOR				IC702	IC-PST9139-T	IC I.M		
	C1411	NCB31CK-223X	C CAPACITOR				IC703	GP1UM281XK	IR DETECT UNIT		
	C1422	QETN1HM-475Z	E CAPACITOR	4.7MF 20% 50V			JS701	QSW0898-001	JOG VOLUME		
	C1423	QEKCIHM-475Z	E CAPACITOR	4.7MF 20% 50V			Q 701	DTC114YKA-X	CHIP D.TRANSIST		
	C1424	QEKCIHM-475Z	E CAPACITOR	4.7MF 20% 50V			Q 702	DTC114TKA-X	TRANSISTOR		
	C1425	QEKCIHM-106Z	E CAPACITOR	10MF 20% 16V			Q 703	DTC144WKA-X	TRANSISTOR		
	C1426	NCB31CK-223X	C CAPACITOR				Q 704	DTC114YKA-X	CHIP D.TRANSIST		
	C1427	QFVF1HJ-334Z	MF CAPACITOR	.33MF 5% 50V			Q 707	DTC114YKA-X	CHIP D.TRANSIST		
	C1428	QFLC1HJ-153Z	M CAPACITOR	.015MF 5% 50V			Q 708	DTC114YKA-X	CHIP D.TRANSIST		
	C1429	QCB31HK-822Z	C CAPACITOR	8200PF 10% 50V			Q 709	DTC114YKA-X	CHIP D.TRANSIST		
	C1430	QETN1HM-475Z	E CAPACITOR	4.7MF 20% 50V			Q 711	DTA144EKA-X	TRANSISTOR		
	C1431	QETN1HM-475Z	E CAPACITOR	4.7MF 20% 50V			△ Q1401	KTA1046/Y/	TRANSISTOR		
	C1432	NCB31CK-223X	C CAPACITOR				△ Q1402	2SD2395/EF/	TRANSISTOR		
	C1433	QFVF1HJ-334Z	MF CAPACITOR	.33MF 5% 50V			△ Q1403	2SD2395/EF/	TRANSISTOR		
	C1434	QFLC1HJ-153Z	M CAPACITOR	.015MF 5% 50V			△ Q1404	2SD2395/EF/	TRANSISTOR		
	C1435	QCB31HK-822Z	C CAPACITOR	8200PF 10% 50V			△ Q1405	2SD2395/EF/	TRANSISTOR		
	C1436	NCB31CK-223X	C CAPACITOR				△ Q1406	KTC3203/OY/-T	TRANSISTOR		
	C1437	QCZ0202-155Z	ML C CAPA I/M	1.5MF			△ Q1407	KTC3203/OY/-T	TRANSISTOR		

■ Electrical parts list (System control & Audio board) Block No. 03

⚠	Item	Parts number	Parts name	Remarks	Area	⚠	Item	Parts number	Parts name	Remarks	Area
⚠	Q1408	KTA1271/OY-T	TRANSISTOR				R 725	NRSA63J-152X	MG RESISTOR		
	Q1413	2SC3576-JVC-T	TRANSISTOR I/M				R 726	NRSA63J-222X	MG RESISTOR		
	Q1414	2SC3576-JVC-T	TRANSISTOR I/M				R 727	NRSA63J-272X	MG RESISTOR		
	Q1417	2SC3576-JVC-T	TRANSISTOR I/M				R 728	NRSA63J-103X	MG RESISTOR		
	Q1418	2SC3576-JVC-T	TRANSISTOR I/M				R 729	NRSA63J-102X	MG RESISTOR		
	Q1419	2SC3576-JVC-T	TRANSISTOR I/M				R 730	NRSA63J-102X	MG RESISTOR		
	Q1420	KRA104M-T	D.TR.I.M				R 731	NRSA63J-122X	MG RESISTOR		
	Q1421	2SC3576-JVC-T	TRANSISTOR I/M				R 732	NRSA63J-152X	MG RESISTOR		
	Q1422	2SC3576-JVC-T	TRANSISTOR I/M				R 733	NRSA63J-222X	MG RESISTOR		
	Q1423	KRA104M-T	D.TR.I.M				R 734	NRSA63J-272X	MG RESISTOR		
	Q1424	KRA104M-T	D.TR.I.M				R 736	NRSA63J-103X	MG RESISTOR		
	Q1425	2SC3576-JVC-T	TRANSISTOR I/M				R 737	NRSA63J-102X	MG RESISTOR		
	Q1426	2SC3576-JVC-T	TRANSISTOR I/M				R 738	NRSA63J-102X	MG RESISTOR		
	Q1431	KRC104M-T	D.TR.I.M				R 739	NRSA63J-122X	MG RESISTOR		
	Q1432	KRC104M-T	D.TR.I.M				R 740	NRSA63J-152X	MG RESISTOR		
	Q1433	KRC104M-T	D.TR.I.M				R 741	NRSA63J-222X	MG RESISTOR		
⚠	Q1434	2SD2395/EF/	TRANSISTOR				R 742	NRSA63J-272X	MG RESISTOR		
⚠	Q1435	2SD2395/EF/	TRANSISTOR				R 743	NRSA63J-103X	MG RESISTOR		
	R 475	NRSA63J-203X	MG RESISTOR				R 744	NRSA63J-102X	MG RESISTOR		
	R 476	NRSA63J-273X	MG RESISTOR				R 745	NRSA63J-102X	MG RESISTOR		
	R 477	QRZ9006-4R7X	F RESISTOR	4.7 1/4W			R 746	NRSA63J-122X	MG RESISTOR		
	R 478	QRJ146J-2R2X	UNF C RESISTOR	2.2 5% 1/4W			R 747	NRSA63J-152X	MG RESISTOR		
	R 479	QRJ146J-2R2X	UNF C RESISTOR	2.2 5% 1/4W			R 748	NRSA63J-222X	MG RESISTOR		
	R 480	NRSA63J-512X	MG RESISTOR				R 749	NRSA63J-272X	MG RESISTOR		
	R 481	NRSA63J-104X	MG RESISTOR				R 750	NRSA63J-103X	MG RESISTOR		
	R 482	NRSA63J-104X	MG RESISTOR				R 757	NRSA63J-103X	MG RESISTOR		
	R 483	NRSA63J-102X	MG RESISTOR				R 758	NRSA63J-103X	MG RESISTOR		
	R 484	NRSA63J-104X	MG RESISTOR				R 759	NRSA63J-103X	MG RESISTOR		
	R 485	NRSA63J-102X	MG RESISTOR				R 760	NRSA63J-103X	MG RESISTOR		
	R 486	NRSA63J-104X	MG RESISTOR				R 761	NRSA63J-103X	MG RESISTOR		
	R 487	NRSA63J-102X	MG RESISTOR				R 762	NRSA63J-102X	MG RESISTOR		
	R 488	NRSA63J-104X	MG RESISTOR				R 763	NRSA63J-102X	MG RESISTOR		
	R 489	NRSA63J-103X	MG RESISTOR				R 764	NRSA63J-122X	MG RESISTOR		
	R 490	NRSA63J-103X	MG RESISTOR				R 765	NRSA63J-152X	MG RESISTOR		
	R 491	NRSA63J-512X	MG RESISTOR				R 768	NRSA63J-103X	MG RESISTOR		
	R 492	NRSA63J-0R0X	MG RESISTOR				R 769	NRSA63J-102X	MG RESISTOR		
	R 493	NRSA63J-0R0X	MG RESISTOR				R 770	NRSA63J-102X	MG RESISTOR		
	R 494	NRSA63J-0R0X	MG RESISTOR				R 771	NRSA63J-102X	MG RESISTOR		
	R 495	NRSA63J-0R0X	MG RESISTOR				R 772	NRSA63J-392X	MG RESISTOR		
	R 701	NRSA63J-472X	MG RESISTOR				R 773	NRSA63J-392X	MG RESISTOR		
	R 702	NRSA63J-223X	MG RESISTOR				R 775	NRSA63J-103X	MG RESISTOR		
	R 703	NRSA63J-103X	MG RESISTOR				R 776	NRSA63J-152X	MG RESISTOR		
	R 704	NRSA63J-471X	MG RESISTOR				R 777	NRSA63J-222X	MG RESISTOR		
	R 705	NRSA63J-103X	MG RESISTOR				R 779	NRSA63J-103X	MG RESISTOR		
	R 706	NRSA63J-103X	MG RESISTOR				R 783	NRSA63J-221X	MG RESISTOR		
	R 707	NRSA63J-103X	MG RESISTOR				R 784	NRSA63J-221X	MG RESISTOR		
	R 708	NRSA63J-103X	MG RESISTOR				R 785	NRSA63J-221X	MG RESISTOR		
	R 709	NRSA63J-103X	MG RESISTOR				R 786	NRSA63J-221X	MG RESISTOR		
	R 710	NRSA63J-103X	MG RESISTOR				R 787	NRSA63J-221X	MG RESISTOR		
	R 711	NRSA63J-104X	MG RESISTOR				R 788	NRSA63J-221X	MG RESISTOR		
	R 712	NRSA63J-103X	MG RESISTOR				R 789	NRSA63J-221X	MG RESISTOR		
	R 713	NRSA63J-103X	MG RESISTOR				R 790	NRSA63J-221X	MG RESISTOR		
	R 714	NRSA63J-103X	MG RESISTOR				R 791	NRSA63J-221X	MG RESISTOR		
	R 715	NRSA63J-103X	MG RESISTOR				R 792	NRSA63J-221X	MG RESISTOR		
	R 716	NRSA63J-103X	MG RESISTOR				R 793	NRSA63J-221X	MG RESISTOR		
	R 717	NRSA63J-103X	MG RESISTOR				R 794	NRSA63J-221X	MG RESISTOR		
	R 718	NRSA63J-103X	MG RESISTOR				R 795	NRSA63J-221X	MG RESISTOR		
	R 719	NRSA63J-221X	MG RESISTOR				R 796	NRSA63J-221X	MG RESISTOR		
	R 720	NRSA63J-222X	MG RESISTOR				R 797	NRSA63J-221X	MG RESISTOR		
	R 721	NRSA63J-103X	MG RESISTOR				R 798	NRSA63J-221X	MG RESISTOR		
	R 722	NRSA63J-102X	MG RESISTOR				R 799	NRSA63J-221X	MG RESISTOR		
	R 723	NRSA63J-102X	MG RESISTOR				R 871	NRSA63J-103X	MG RESISTOR		
	R 724	NRSA63J-122X	MG RESISTOR				R 872	NRSA63J-103X	MG RESISTOR		

■ Electrical parts list (System control & Audio board) Block No. 03

△	Item	Parts number	Parts name	Remarks	Area
△	R 873	NRSA63J-103X	MG RESISTOR		
△	R1401	QRZ9005-100X	F RESISTOR	10 1/4W	
△	R1402	QRJ146J-182X	UNF C RESISTOR	1.8K 5% 1/4W	
△	R1403	QRZ9005-120X	F RESISTOR	12 1/4W	
△	R1404	QRJ146J-272X	UNF C RESISTOR	2.7K 5% 1/4W	
△	R1405	QRZ9005-120X	F RESISTOR	12 1/4W	
△	R1406	QRK126J-682X	C RESISTOR	6.8K 5% 1/2W	
△	R1407	QRZ9006-4R7X	F RESISTOR	4.7 1/4W	
△	R1408	QRZ9006-4R7X	F RESISTOR	4.7 1/4W	
△	R1409	QRJ146J-272X	UNF C RESISTOR	2.7K 5% 1/4W	
△	R1410	QRZ9006-4R7X	F RESISTOR	4.7 1/4W	
△	R1411	QRJ146J-182X	UNF C RESISTOR	1.8K 5% 1/4W	
△	R1412	QRZ9005-100X	F RESISTOR	10 1/4W	
△	R1413	QRJ146J-102X	UNF C RESISTOR	1.0K 5% 1/4W	
△	R1414	QRZ9005-100X	F RESISTOR	10 1/4W	
△	R1415	QRJ146J-222X	UNF C RESISTOR	2.2K 5% 1/4W	
△	R1416	QRZ9005-100X	F RESISTOR	10 1/4W	
△	R1417	QRJ146J-222X	UNF C RESISTOR	2.2K 5% 1/4W	
△	R1418	QRZ9005-680X	F RESISTOR	68 1/4W	
△	R1419	QRZ9005-680X	F RESISTOR	68 1/4W	
	R1437	NRSA63J-102X	MG RESISTOR		
	R1438	NRSA63J-102X	MG RESISTOR		
	R1439	NRSA63J-103X	MG RESISTOR		
	R1440	NRSA63J-103X	MG RESISTOR		
	R1442	NRSA63J-104X	MG RESISTOR		
	R1444	NRSA63J-103X	MG RESISTOR		
	R1445	NRSA63J-102X	MG RESISTOR		
	R1446	NRSA63J-104X	MG RESISTOR		
	R1447	NRSA63J-102X	MG RESISTOR		
	R1448	NRSA63J-103X	MG RESISTOR		
	R1449	NRSA63J-102X	MG RESISTOR		
	R1450	NRSA63J-103X	MG RESISTOR		
	R1451	NRSA63J-104X	MG RESISTOR		
	R1452	NRSA63J-104X	MG RESISTOR		
	R1453	NRSA63J-102X	MG RESISTOR		
	R1454	NRSA63J-104X	MG RESISTOR		
	R1455	NRSA63J-104X	MG RESISTOR		
△	R1456	QRJ146J-220X	UNF C RESISTOR	22 5% 1/4W	
	R1457	NRSA63J-472X	MG RESISTOR		
	R1458	NRSA63J-472X	MG RESISTOR		
△	R1459	QRZ9005-680X	F RESISTOR	68 1/4W	
△	R1460	QRZ9005-680X	F RESISTOR	68 1/4W	
	R1461	QRJ146J-2R2X	UNF C RESISTOR	2.2 5% 1/4W	
	R1462	QRJ146J-2R2X	UNF C RESISTOR	2.2 5% 1/4W	
	R1463	NRSA63J-104X	MG RESISTOR		
	R1464	NRSA63J-104X	MG RESISTOR		
	R1465	NRSA63J-102X	MG RESISTOR		
	R1470	NRSA63J-391X	MG RESISTOR		
	R1471	NRSA63J-391X	MG RESISTOR		
	R1472	NRSA63J-103X	MG RESISTOR		
	R1473	NRSA63J-103X	MG RESISTOR		
	R1474	NRSA63J-102X	MG RESISTOR		
	R1480	NRSA63J-104X	MG RESISTOR		
	R1490	NRSA63J-273X	MG RESISTOR		
	R1492	NRSA63J-102X	MG RESISTOR		
	R1493	NRSA63J-102X	MG RESISTOR		
	R1494	NRSA63J-102X	MG RESISTOR		
	R1495	NRSA63J-103X	MG RESISTOR		
	R1496	NRSA63J-103X	MG RESISTOR		
	R1497	NRSA63J-511X	MG RESISTOR		
	R1498	NRSA63J-511X	MG RESISTOR		
	R1499	NRSA63J-104X	MG RESISTOR		
	R1500	NRSA63J-474X	MG RESISTOR		

△	Item	Parts number	Parts name	Remarks	Area
	S 721	QSW0683-001Z	PUSH SWITCH	TUNING+	
	S 722	QSW0683-001Z	PUSH SWITCH	TUNING-	
	S 723	QSW0683-001Z	PUSH SWITCH	PRESET+	
	S 724	QSW0683-001Z	PUSH SWITCH	PRESET-	
	S 725	QSW0683-001Z	PUSH SWITCH	FM MODE	
	S 726	QSW0683-001Z	PUSH SWITCH	MEMORY	
	S 727	QSW0683-001Z	PUSH SWITCH	POWER	
	S 728	QSW0683-001Z	PUSH SWITCH	SURROUND	
	S 729	QSW0683-001Z	PUSH SWITCH	SURR MODE	
	S 732	QSW0683-001Z	PUSH SWITCH	SPK1	
	S 740	QSW0683-001Z	PUSH SWITCH	TV/DBS(COM)	
	S 741	QSW0683-001Z	PUSH SWITCH	FM/AM(COM)	
	S 742	QSW0683-001Z	PUSH SWITCH	ADJUST	
	S 743	QSW0683-001Z	PUSH SWITCH	SETTING	
	S 744	QSW0683-001Z	PUSH SWITCH	+	
	S 745	QSW0683-001Z	PUSH SWITCH	-	
	S 751	QSW0683-001Z	PUSH SWITCH	DIGITAL(50/60)	
	S 752	QSW0683-001Z	PUSH SWITCH	ANALOG(50/60)	
	S 754	QSW0683-001Z	PUSH SWITCH	DVD	
	S 755	QSW0683-001Z	PUSH SWITCH	CD	
	S 756	QSW0683-001Z	PUSH SWITCH	VCR	
	S 757	QSW0683-001Z	PUSH SWITCH	TAPE/CDR	
	X 701	QAX0246-001Z	C RESONATOR		

■ Electrical parts list (DSP board)

Block No. 04

△	Item	Parts number	Parts name	Remarks	Area
	C 601	NCB31HK-102X	C CAPACITOR		
	C 602	NCB31HK-102X	C CAPACITOR		
	C 603	QEKCOJM-107Z	E CAPACITOR	100MF 20% 6.3V	
	C 604	QEKCOJM-107Z	E CAPACITOR	100MF 20% 6.3V	
	C 605	NCF31CZ-104X	C CAPACITOR		
	C 606	NCF31CZ-104X	C CAPACITOR		
	C 607	QEKCC1CM-107Z	E CAPACITOR	100MF 20% 16V	
	C 608	NCF31CZ-104X	C CAPACITOR		
	C 609	NCF31CZ-104X	C CAPACITOR		
	C 610	QEKCOJM-107Z	E CAPACITOR	100MF 20% 6.3V	
	C 611	QEKCOJM-107Z	E CAPACITOR	100MF 20% 6.3V	
	C 612	NCB31CK-103X	C CAPACITOR		
	C 621	QEKCH1HM-105Z	E CAPACITOR	1.0MF 20% 50V	
	C 622	NCS31HJ-101X	C.CAPA. C.M		
	C 624	NCF31CZ-104X	C CAPACITOR		
	C 626	NCF31AZ-105X	C CAPACITOR		
	C 627	NCF31AZ-105X	C CAPACITOR		
	C 628	NCB31CK-103X	C CAPACITOR		
	C 631	QEKCOJM-107Z	E CAPACITOR	100MF 20% 6.3V	
	C 632	NCB31CK-103X	C CAPACITOR		
	C 633	NCF31CZ-104X	C CAPACITOR		
	C 634	NCF31CZ-104X	C CAPACITOR		
	C 635	NCF31CZ-104X	C CAPACITOR		
	C 636	NCB31CK-473X	C CAPACITOR		
	C 638	QEKCOJM-107Z	E CAPACITOR	100MF 20% 6.3V	
	C 639	NCB31CK-103X	C CAPACITOR		
	C 640	NCB31CK-103X	C CAPACITOR		
	C 641	QEKCOJM-107Z	E CAPACITOR	100MF 20% 6.3V	
	C 642	NCB31CK-103X	C CAPACITOR		
	C 643	NCB31AK-474X	C CAPACITOR		
	C 644	NCB31CK-103X	C CAPACITOR		
	C 645	NCS31HJ-101X	C.CAPA. C.M		
	C 646	NCB31CK-103X	C CAPACITOR		
	C 647	NCS31HJ-220X	C CAPACITOR		
	C 648	NCS31HJ-180X	C CAPACITOR		
	C 649	NCS31HJ-121X	C CAPACITOR		
	C 653	NCB31CK-104X	C CAPACITOR		
	C 654	QEKCOJM-107Z	E CAPACITOR	100MF 20% 6.3V	
	C 661	NCB31CK-103X	C CAPACITOR		
	C 671	NCB31CK-103X	C CAPACITOR		
	C 672	QEKCOJM-107Z	E CAPACITOR	100MF 20% 6.3V	
	C 673	NCB31CK-103X	C CAPACITOR		
	C 677	NCS31HJ-101X	C.CAPA. C.M		
	C 679	NCS31HJ-101X	C.CAPA. C.M		
	C 681	NCB31CK-103X	C CAPACITOR		
	C 682	NCB31CK-103X	C CAPACITOR		
	C 683	NCB31CK-103X	C CAPACITOR		
	C 684	QEKCOJM-107Z	E CAPACITOR	100MF 20% 6.3V	
	C 685	QEKCC1CM-476Z	E CAPACITOR	47MF 20% 16V	
	C 686	QEKCC1CM-476Z	E CAPACITOR	47MF 20% 16V	
	C 687	NCB31CK-103X	C CAPACITOR		
	C 688	QEKCOJM-107Z	E CAPACITOR	100MF 20% 6.3V	
	C 689	NCB31CK-103X	C CAPACITOR		
	C 690	QEKCOJM-107Z	E CAPACITOR	100MF 20% 6.3V	
	C 691	NCB31HK-103X	C CAPACITOR		
	C 693	NCB31CK-103X	C CAPACITOR		
	C 694	NCF31CZ-104X	C CAPACITOR		
	CN681	QGB2510K1-20	B TO B CONNE		
	C2500	QEKCC1CM-226Z	E CAPACITOR	22MF 20% 16V	
	C2503	QETN1HM-475Z	E CAPACITOR	4.7MF 20% 50V	
	C2504	QETN1HM-475Z	E CAPACITOR	4.7MF 20% 50V	
	C2507	NCS31HJ-330X	C CAPACITOR		
	C2508	NCS31HJ-330X	C CAPACITOR		

△	Item	Parts number	Parts name	Remarks	Area
	C2512	NCF31CZ-104X	C CAPACITOR		
	C2513	NCB31HK-122X	C CAPACITOR		
	C2514	NCB31HK-122X	C CAPACITOR		
	C2515	NCS31HJ-121X	C CAPACITOR		
	C2516	NCS31HJ-121X	C CAPACITOR		
	C2525	NCB31HK-102X	C CAPACITOR		
	C2526	NCB31HK-102X	C CAPACITOR		
	C2527	QETN1HM-106Z	E CAPACITOR	10MF 20% 50V	
	C2528	QETN1HM-106Z	E CAPACITOR	10MF 20% 50V	
	C2531	NCS31HJ-560X	C CAPACITOR		
	C2532	NCS31HJ-560X	C CAPACITOR		
	C2533	QETN1HM-475Z	E CAPACITOR	4.7MF 20% 50V	
	C2534	QETN1HM-475Z	E CAPACITOR	4.7MF 20% 50V	
	C2539	NCF31CZ-104X	C CAPACITOR		
	C2540	NCF31CZ-104X	C CAPACITOR		
	C2551	NCS31HJ-560X	C CAPACITOR		
	C2552	NCS31HJ-560X	C CAPACITOR		
	C2555	NCF31CZ-104X	C CAPACITOR		
	C2556	NCF31CZ-104X	C CAPACITOR		
	C2561	QETN1HM-105Z	E CAPACITOR	1.0MF 20% 50V	
	C2562	QETN1HM-105Z	E CAPACITOR	1.0MF 20% 50V	
	C2563	NCS31HJ-560X	C CAPACITOR		
	C2564	NCS31HJ-560X	C CAPACITOR		
	C2565	NCB31HK-102X	C CAPACITOR		
	C2566	NCB31HK-102X	C CAPACITOR		
	C2569	NCF31CZ-104X	C CAPACITOR		
	C2570	NCF31CZ-104X	C CAPACITOR		
	C2575	NCB31HK-102X	C CAPACITOR		
	C2576	NCB31HK-102X	C CAPACITOR		
	C2577	QETN1HM-106Z	E CAPACITOR	10MF 20% 50V	
	C2578	QETN1HM-106Z	E CAPACITOR	10MF 20% 50V	
	C2581	QETN1HM-105Z	E CAPACITOR	1.0MF 20% 50V	
	C2582	QETN1CM-106Z	E CAPACITOR	10MF 20% 16V	
	C2583	NCS31HJ-560X	C CAPACITOR		
	C2584	NCS31HJ-560X	C CAPACITOR		
	C2585	NCF31CZ-104X	C CAPACITOR		
	C2586	NCF31CZ-104X	C CAPACITOR		
	C2587	NCS31HJ-560X	C CAPACITOR		
	C2588	QETN1HM-475Z	E CAPACITOR	4.7MF 20% 50V	
	C2589	NCF31CZ-104X	C CAPACITOR		
	C2590	NCF31CZ-104X	C CAPACITOR		
	C2591	NCB31HK-102X	C CAPACITOR		
	C2592	NCB31HK-103X	C CAPACITOR		
	C2594	NCB31CK-473X	C CAPACITOR		
	C2595	NCB31HK-102X	C CAPACITOR		
	C2597	QETN1HM-106Z	E CAPACITOR	10MF 20% 50V	
	C2598	QETN1HM-475Z	E CAPACITOR	4.7MF 20% 50V	
	D 607	1SS355-X	DIODE C.M		
	D 608	1SS355-X	DIODE C.M		
	D 609	1SS355-X	DIODE C.M		
	D 610	1SS355-X	DIODE C.M		
	IC601	AK4527BVQP	IC		
	IC609	BA15218F-XE	IC		
	IC610	BA15218F-XE	IC		
	IC611	TC74HC08AF-X	IC		
	IC612	TC74HC4072AF-X	IC		
	IC621	TC74HCU04AF-W	IC		
	IC631	TC9446F-025	IC		
	IC641	W24L010AJ-12-X	IC		
	IC650	BA15218F-XE	IC		
	IC651	BA15218F-XE	IC		
	IC652	IMX9-W	IC		
	IC661	BA15218F-XE	IC		

■ Electrical parts list (DSP board)

Block No. 04

▲	Item	Parts number	Parts name	Remarks	Area
	IC662	IMX9-W	IC		
	IC671	UPD784215AGC167	IC(MICRO C ROM)		
	IC672	TC7SET32FU-X	IC		
	IC681	BA033FP-X	I.C.		
	IC682	IMX9-W	IC		
	IC683	BA033LBSG-W	IC		
	IC690	BA15218F-XE	IC		
	IC691	BA15218F-XE	IC		
	J 601	QNN0347-001	PIN JACK		
	K 601	NQR0269-004X	FERRITE BEADS		
	Q 607	DTA144EKA-X	TRANSISTOR		
	Q 670	DTC114YE-X	TRANSISTOR		
	Q 671	2SD2114K/VW/-X	CHIP TRANSISTOR		
	Q 672	DTC114YE-X	TRANSISTOR		
	Q 673	DTA144EKA-X	TRANSISTOR		
	Q2501	DTA144EKA-X	TRANSISTOR		
	R 600	NRSA63J-0R0X	MG RESISTOR		
	R 601	NRSA63J-473X	MG RESISTOR		
	R 602	NRSA63J-473X	MG RESISTOR		
	R 603	NRSA63J-473X	MG RESISTOR		
	R 606	NRSA63J-221X	MG RESISTOR		
	R 607	NRSA63J-221X	MG RESISTOR		
	R 608	NRSA63J-221X	MG RESISTOR		
	R 609	NRSA63J-221X	MG RESISTOR		
	R 611	NRSA63J-221X	MG RESISTOR		
	R 612	NRSA63J-221X	MG RESISTOR		
	R 613	NRSA63J-822X	MG RESISTOR		
	R 615	NRSA63J-432X	MG RESISTOR		
	R 617	NRSA63J-103X	MG RESISTOR		
	R 618	NRSA63J-103X	MG RESISTOR		
	R 620	NRSA63J-221X	MG RESISTOR		
	R 621	NRSA63J-561X	MG RESISTOR		
	R 622	NRSA63J-750X	MG RESISTOR		
	R 623	NRSA63J-331X	MG RESISTOR		
	R 624	NRSA63J-222X	MG RESISTOR		
	R 627	NRSA63J-472X	MG RESISTOR		
	R 628	NRSA63J-333X	MG RESISTOR		
	R 631	NRSA63J-0R0X	MG RESISTOR		
	R 632	NRSA63J-0R0X	MG RESISTOR		
	R 639	NRSA63J-472X	MG RESISTOR		
	R 640	NRSA63J-0R0X	MG RESISTOR		
	R 641	NRSA63F-102X	MG RESISTOR		
	R 642	NRSA63J-103X	MG RESISTOR		
	R 643	NRSA63J-101X	MG RESISTOR		
	R 644	NRSA63J-153X	MG RESISTOR		
	R 645	NRSA63F-102X	MG RESISTOR		
	R 646	NRSA63J-103X	MG RESISTOR		
	R 647	NRSA63J-225X	MG RESISTOR		
	R 648	NRSA63J-472X	MG RESISTOR		
	R 657	NRSA63J-103X	MG RESISTOR		
	R 661	NRSA63J-221X	MG RESISTOR		
	R 662	NRSA63J-221X	MG RESISTOR		
	R 663	NRSA63J-221X	MG RESISTOR		
	R 664	NRSA63J-221X	MG RESISTOR		
	R 668	NRSA63J-0R0X	MG RESISTOR		
	R 669	NRSA63J-103X	MG RESISTOR		
	R 670	NRSA63J-103X	MG RESISTOR		
	R 671	NRSA63J-103X	MG RESISTOR		
	R 672	NRSA63J-105X	MG RESISTOR		
	R 673	NRSA63J-432X	MG RESISTOR		
	R 674	NRSA63J-432X	MG RESISTOR		
	R 675	NRSA63J-432X	MG RESISTOR		
	R 676	NRSA63J-432X	MG RESISTOR		

▲	Item	Parts number	Parts name	Remarks	Area
	R 677	NRSA63J-822X	MG RESISTOR		
	R 678	NRSA63J-822X	MG RESISTOR		
	R 679	NRSA63J-822X	MG RESISTOR		
	R 680	NRSA63J-822X	MG RESISTOR		
	R 682	NRSA63J-103X	MG RESISTOR		
	R 683	NRSA63J-0R0X	MG RESISTOR		
	R 684	NRSA63J-0R0X	MG RESISTOR		
	R 687	NRSA63J-0R0X	MG RESISTOR		
	R 688	NRSA63J-0R0X	MG RESISTOR		
	R 689	NRSA63J-0R0X	MG RESISTOR		
	R 691	NRSA63J-221X	MG RESISTOR		
	R 692	NRSA63J-221X	MG RESISTOR		
	R 693	NRSA63J-221X	MG RESISTOR		
	R 694	NRSA63J-221X	MG RESISTOR		
	R 695	NRSA63J-221X	MG RESISTOR		
	R 696	NRSA63J-221X	MG RESISTOR		
	R 697	NRSA63J-0R0X	MG RESISTOR		
	R 698	NRSA63J-0R0X	MG RESISTOR		
	R2500	NRSA63J-102X	MG RESISTOR		
	R2501	NRSA63J-104X	MG RESISTOR		
	R2502	NRSA63J-104X	MG RESISTOR		
	R2507	NRSA63J-223X	MG RESISTOR		
	R2508	NRSA63J-223X	MG RESISTOR		
	R2509	NRSA63J-223X	MG RESISTOR		
	R2510	NRSA63J-223X	MG RESISTOR		
	R2511	NRSA63J-103X	MG RESISTOR		
	R2512	NRSA63J-103X	MG RESISTOR		
	R2513	NRSA63J-103X	MG RESISTOR		
	R2514	NRSA63J-103X	MG RESISTOR		
	R2515	NRSA63J-103X	MG RESISTOR		
	R2516	NRSA63J-103X	MG RESISTOR		
	R2519	NRSA63J-331X	MG RESISTOR		
	R2520	NRSA63J-331X	MG RESISTOR		
	R2521	NRSA63J-331X	MG RESISTOR		
	R2522	NRSA63J-331X	MG RESISTOR		
	R2525	NRSA63J-102X	MG RESISTOR		
	R2526	NRSA63J-102X	MG RESISTOR		
	R2527	NRSA63J-104X	MG RESISTOR		
	R2528	NRSA63J-104X	MG RESISTOR		
	R2529	NRSA63J-103X	MG RESISTOR		
	R2530	NRSA63J-103X	MG RESISTOR		
	R2531	NRSA63J-752X	MG RESISTOR		
	R2532	NRSA63J-752X	MG RESISTOR		
	R2533	NRSA63J-103X	MG RESISTOR		
	R2534	NRSA63J-103X	MG RESISTOR		
	R2535	NRSA63J-103X	MG RESISTOR		
	R2536	NRSA63J-103X	MG RESISTOR		
	R2537	NRSA63J-104X	MG RESISTOR		
	R2538	NRSA63J-104X	MG RESISTOR		
	R2550	NRSA63J-272X	MG RESISTOR		
	R2551	NRSA63J-103X	MG RESISTOR		
	R2552	NRSA63J-103X	MG RESISTOR		
	R2553	NRSA63J-153X	MG RESISTOR		
	R2554	NRSA63J-153X	MG RESISTOR		
	R2555	NRSA63J-752X	MG RESISTOR		
	R2556	NRSA63J-752X	MG RESISTOR		
	R2557	NRSA63J-103X	MG RESISTOR		
	R2558	NRSA63J-273X	MG RESISTOR		
	R2560	NRSA63J-105X	MG RESISTOR		
	R2561	NRSA63J-104X	MG RESISTOR		
	R2562	NRSA63J-104X	MG RESISTOR		
	R2563	NRSA63J-103X	MG RESISTOR		
	R2564	NRSA63J-103X	MG RESISTOR		

■ Electrical parts list (DSP board) Block No. 04

⚠	Item	Parts number	Parts name	Remarks	Area
	R2565	NRSA63J-202X	MG RESISTOR		
	R2566	NRSA63J-202X	MG RESISTOR		
	R2567	NRSA63J-103X	MG RESISTOR		
	R2568	NRSA63J-103X	MG RESISTOR		
	R2569	NRSA63J-122X	MG RESISTOR		
	R2570	NRSA63J-122X	MG RESISTOR		
	R2575	NRSA63J-102X	MG RESISTOR		
	R2576	NRSA63J-102X	MG RESISTOR		
	R2577	NRSA63J-104X	MG RESISTOR		
	R2578	NRSA63J-104X	MG RESISTOR		
	R2581	NRSA63J-104X	MG RESISTOR		
	R2582	NRSA63J-104X	MG RESISTOR		
	R2583	NRSA63J-123X	MG RESISTOR		
	R2584	NRSA63J-223X	MG RESISTOR		
	R2585	NRSA63J-302X	MG RESISTOR		
	R2586	NRSA63J-332X	MG RESISTOR		
	R2587	NRSA63J-103X	MG RESISTOR		
	R2588	NRSA63J-103X	MG RESISTOR		
	R2589	NRSA63J-104X	MG RESISTOR		
	R2590	NRSA63J-333X	MG RESISTOR		
	R2591	NRSA63J-122X	MG RESISTOR		
	R2592	NRSA63J-333X	MG RESISTOR		
	R2594	NRSA63J-333X	MG RESISTOR		
	R2595	NRSA63J-102X	MG RESISTOR		
	R2596	NRSA63J-102X	MG RESISTOR		
	R2597	NRSA63J-104X	MG RESISTOR		
	R2598	NRSA63J-104X	MG RESISTOR		
	UN661	GP1FA351RZ	OPT RECEIVER		
	X 631	QAX0722-001Z	CRYSTAL		
	X 671	QAX0719-001Z	1COSCIALLATOR		

■ Electrical parts list (Tuner board)

Block No. 05

△	Item	Parts number	Parts name	Remarks	Area
	AT101	QNB0014-001	ANT TERMINAL		
	BK 1	LV31618-001A	SHIELD BKT		
	C 101	NCB21HK-103X	C CAPACITOR		
	C 103	NCB21HK-223X	C CAPACITOR		
	C 105	NCB21HK-223X	C CAPACITOR		
	C 107	QEK1CM-226Z	E CAPACITOR	22MF 20% 16V	
	C 111	NCB21HK-473X	C CAPACITOR		
	C 112	NDC21HJ-120X	C CAPACITOR		
	C 121	NDC21HJ-120X	C CAPACITOR		
	C 122	NDC21HJ-120X	C CAPACITOR		
	C 123	NCB21HK-473X	C CAPACITOR		
	C 126	NCS21HJ-101X	C CAPACITOR		
	C 128	QENC1HM-474Z	NP E CAPACITOR	.47MF 20% 50V	
	C 129	NCB21HK-102X	C CAPACITOR		
	C 130	QEK1AM-107Z	E CAPACITOR	100MF 20% 10V	
	C 133	QEK1CM-226Z	E CAPACITOR	22MF 20% 16V	
	C 134	NCB21HK-222X	C CAPACITOR		
	C 135	NCB21HK-223X	C CAPACITOR	C/M B	
	C 136	QEK1HM-105Z	E CAPACITOR	1.0MF 20% 50V	
	C 137	NCB21HK-331X	C.CAPA. C.M		
	C 138	NCB21HK-473X	C CAPACITOR		
	C 139	NCB21HK-223X	C CAPACITOR		
	C 140	NCB21HK-223X	C CAPACITOR		
	C 141	NCB21HK-473X	C CAPACITOR		
	C 143	NCB21HK-223X	C CAPACITOR		
	C 144	NCB21HK-473X	C CAPACITOR		
	C 146	QEK1HM-105Z	E CAPACITOR	1.0MF 20% 50V	
	C 147	QEK1HM-105Z	E CAPACITOR	1.0MF 20% 50V	
	C 148	QEK1HM-224Z	E CAPACITOR	.22MF 20% 50V	
	C 149	QEK1HM-105Z	E CAPACITOR	1.0MF 20% 50V	
	C 150	QEK1CM-226Z	E CAPACITOR	22MF 20% 16V	
	C 156	QDGB1HK-102Y	C CAPACITOR		
	C 157	NCB21HK-473X	C CAPACITOR		
	C 158	QEK1CM-226Z	E CAPACITOR	22MF 20% 16V	
	C 161	QEK1CM-106Z	E CAPACITOR	10MF 20% 16V	
	C 162	QEK1CM-106Z	E CAPACITOR	10MF 20% 16V	
	C 163	NCB21HK-223X	C CAPACITOR		
	C 164	NCB21HK-473X	C CAPACITOR		
	C 168	QEK1HM-105Z	E CAPACITOR	1.0MF 20% 50V	
	C 184	QEK1CM-107Z	E CAPACITOR	100MF 20% 16V	
	C 185	QEK1CM-106Z	E CAPACITOR	10MF 20% 16V	
	C 186	QEK1CM-106Z	E CAPACITOR	10MF 20% 16V	
	CF101	QAX0419-001Z	C FILTER		
	CF102	QAX0604-001Z	C FILTER		
	CF103	QAX0519-001Z	C FILTER		
	CN111	QGB2501K2-12	CONNECTOR		
	D 121	1SS133-T2	SI DIODE IM		
	D 123	1SS133-T2	SI DIODE IM		
	D 129	1SS133-T2	SI DIODE IM		
	IC102	LA1838	IC		
	IC121	LC72136N	IC		
	Q 102	2SC535/BC/-T	TRANSISTOR		
	Q 103	2SC461/BC/-T	TRANSISTOR		
	Q 121	KRA103M-T	TRANSISTOR		
	R 103	NRSA02J-221X	MG RESISTOR		
	R 104	NRSA02J-272X	MG RESISTOR		
	R 105	NRSA02J-391X	MG RESISTOR		
	R 106	NRSA02J-102X	MG RESISTOR		
	R 107	NRSA02J-391X	MG RESISTOR		
	R 108	NRSA02J-332X	MG RESISTOR		
	R 109	NRSA02J-221X	MG RESISTOR		
	R 115	NRSA02J-104X	MG RESISTOR		
	R 119	NRSA02J-103X	MG RESISTOR		

△	Item	Parts number	Parts name	Remarks	Area
	R 122	NRSA02J-472X	MG RESISTOR		
	R 124	NRSA02J-222X	MG RESISTOR		
	R 126	NRSA02J-562X	MG RESISTOR		
	R 127	NRSA02J-822X	MG RESISTOR		
	R 128	NRSA02J-472X	MG RESISTOR		
	R 129	NRSA02J-222X	MG RESISTOR		
	R 130	QRZ9005-680X	F RESISTOR	68 1/4W	
	R 132	NRSA02J-393X	MG RESISTOR		
	R 133	NRSA02J-392X	MG RESISTOR		
	R 134	NRSA02J-102X	MG RESISTOR		
	R 140	NRSA02J-183X	MG RESISTOR		
	R 141	NRSA02J-102X	MG RESISTOR		
	R 142	NRSA02J-470X	MG RESISTOR		
	R 143	NRSA02J-562X	MG RESISTOR		
	R 144	NRSA02J-332X	MG RESISTOR		
	R 145	NRSA02J-103X	MG RESISTOR		
	R 146	NRSA02J-392X	MG RESISTOR		
	R 147	NRSA02J-332X	MG RESISTOR		
	R 150	NRSA02J-331X	MG RESISTOR		
	R 157	NRSA02J-682X	MG RESISTOR		
	R 158	NRSA02J-682X	MG RESISTOR		
	R 161	NRSA02J-102X	MG RESISTOR		
	R 162	NRSA02J-102X	MG RESISTOR		
	R 182	NRSA02J-103X	MG RESISTOR		
	R 183	NRSA02J-103X	MG RESISTOR		
	R 184	NRSA02J-103X	MG RESISTOR		
	RF101	QAU0124-002	FRONT END		
	T 111	QQR0796-001	COIL BLOCK		
	T 142	QQR0973-001	IFT		
	X 121	QAX0402-001	CRYSTAL		


Packing materials and accessories parts list

Block No.

M	3	M	M
---	---	---	---

Block No.

M	5	M	M
---	---	---	---

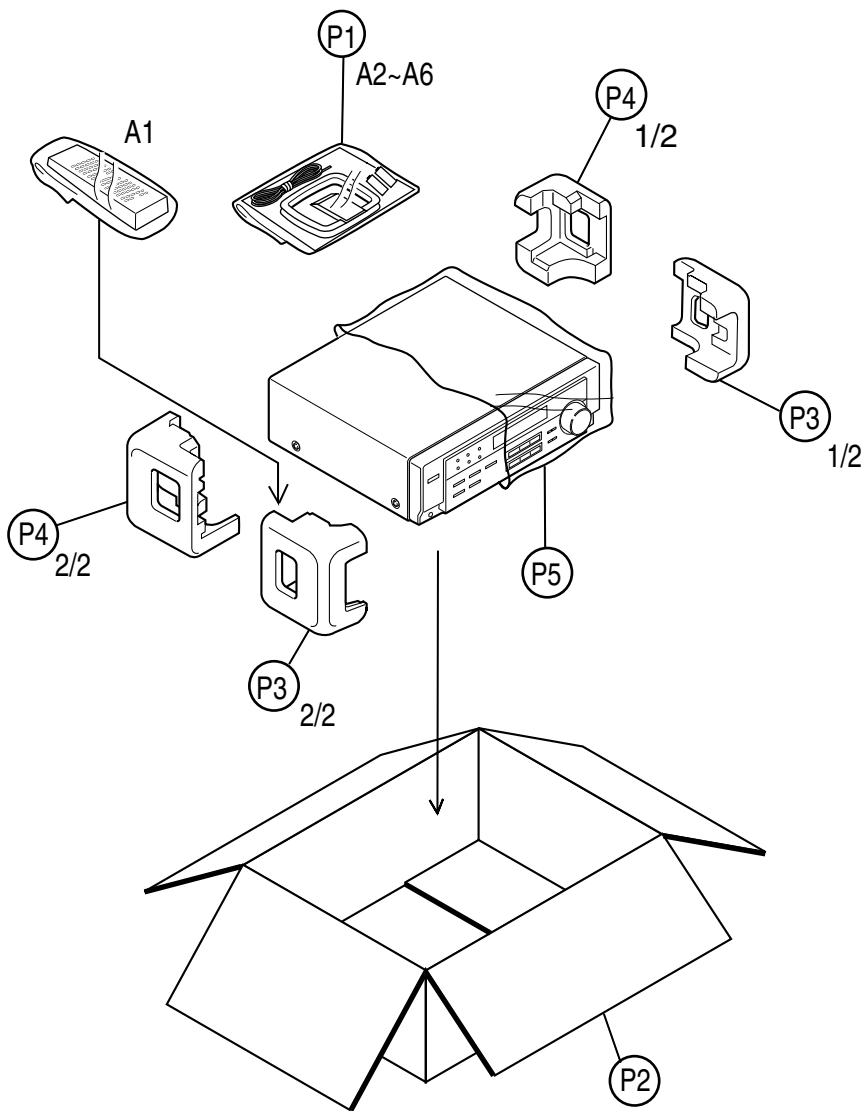

■ Parts list (Packing)

Block No. M3MM


△	Item	Parts number	Parts name	Q'ty	Description	Area
	P 1	QPA02503505P	POLY BAG	1		
	P 2	LV20983-036A	CARTON BOX	1		
	P 3	LV20925-001A	PACKING PAD	1		
	P 4	LV20926-001A	PACKING PAD	1		
	P 5	QPC06507015P	POLY BAG	1		

■ Parts list (Accessories)

Block No. M5MM

△	Item	Parts number	Parts name	Q'ty	Description	Area
	A 1	RM-SRX5022U	REMOCON	1		
	A 2	-----	BATTERY	2		
	A 3	LVT0850-003A	INST BOOK	1	ENG,SPA,POR	
	A 4	EWP503-001C	ANT.WIRE	1		
	A 5	QAL0204-001	AM LOOP ANT	1		
	A 6	QAM0112-001	AC PLUG ADAPTER	1		


Block diagram

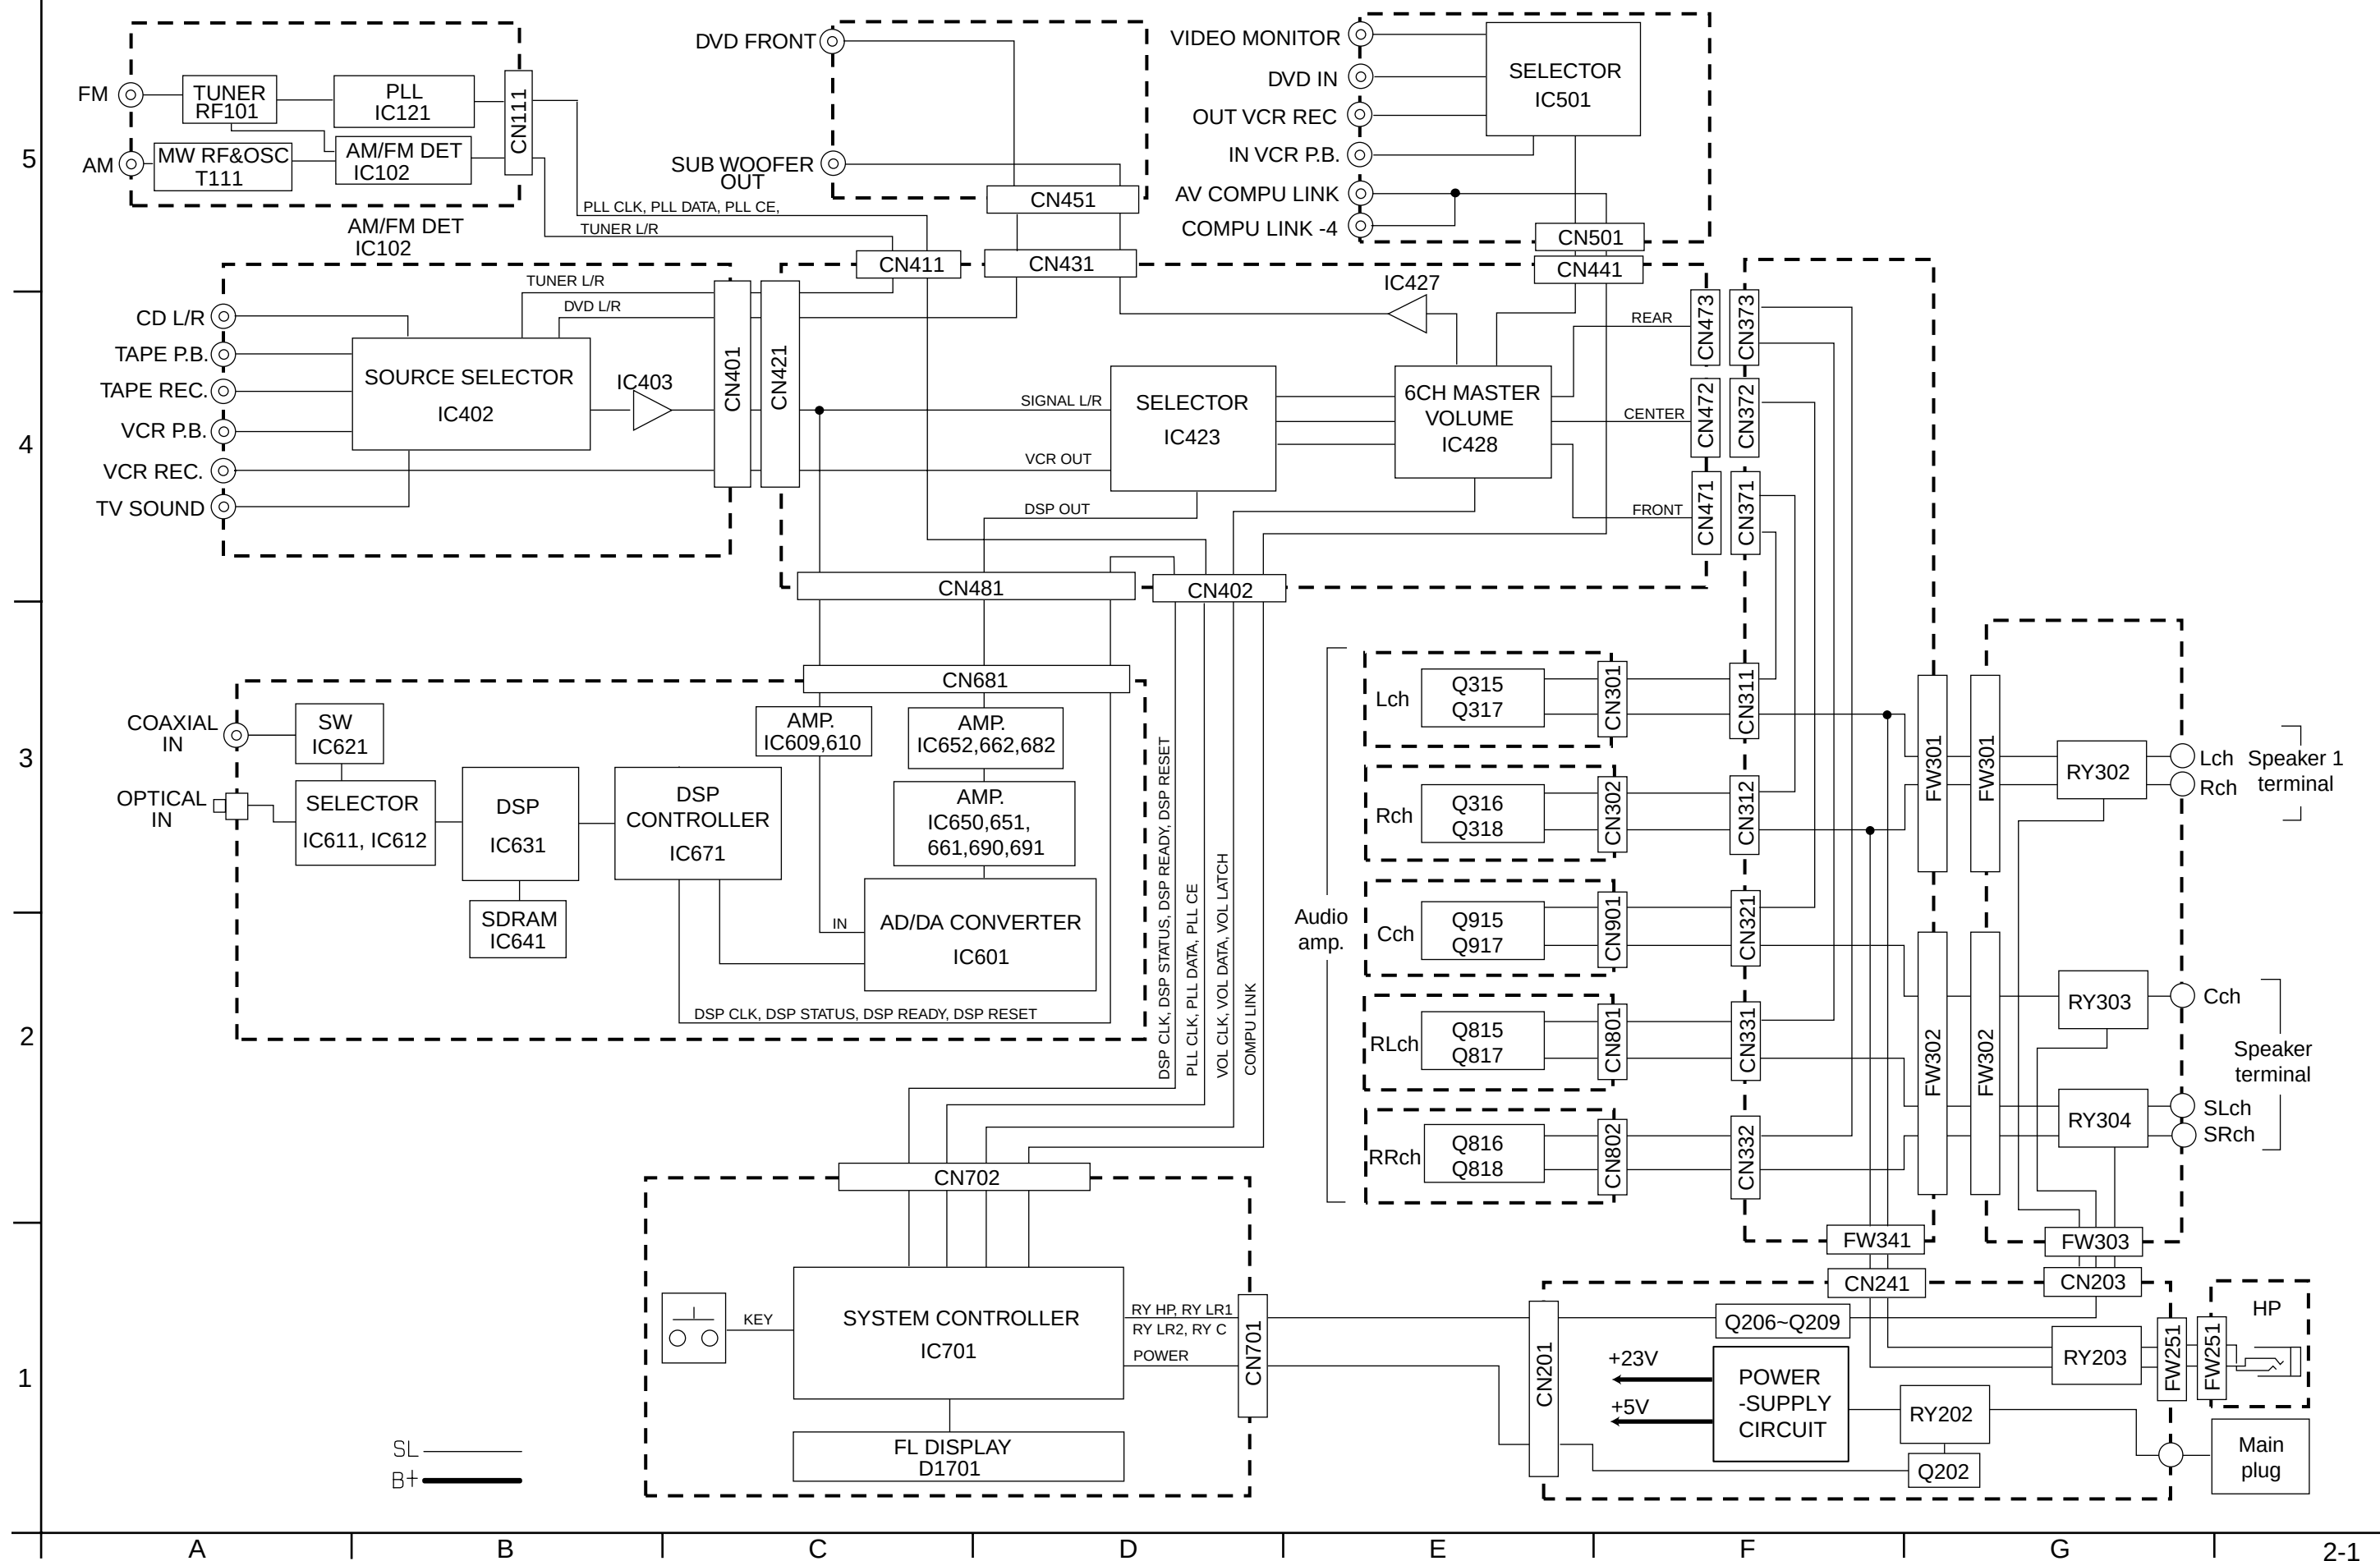

Standard schematic diagrams


Power supply section

Audio / Video / DVD signal input section

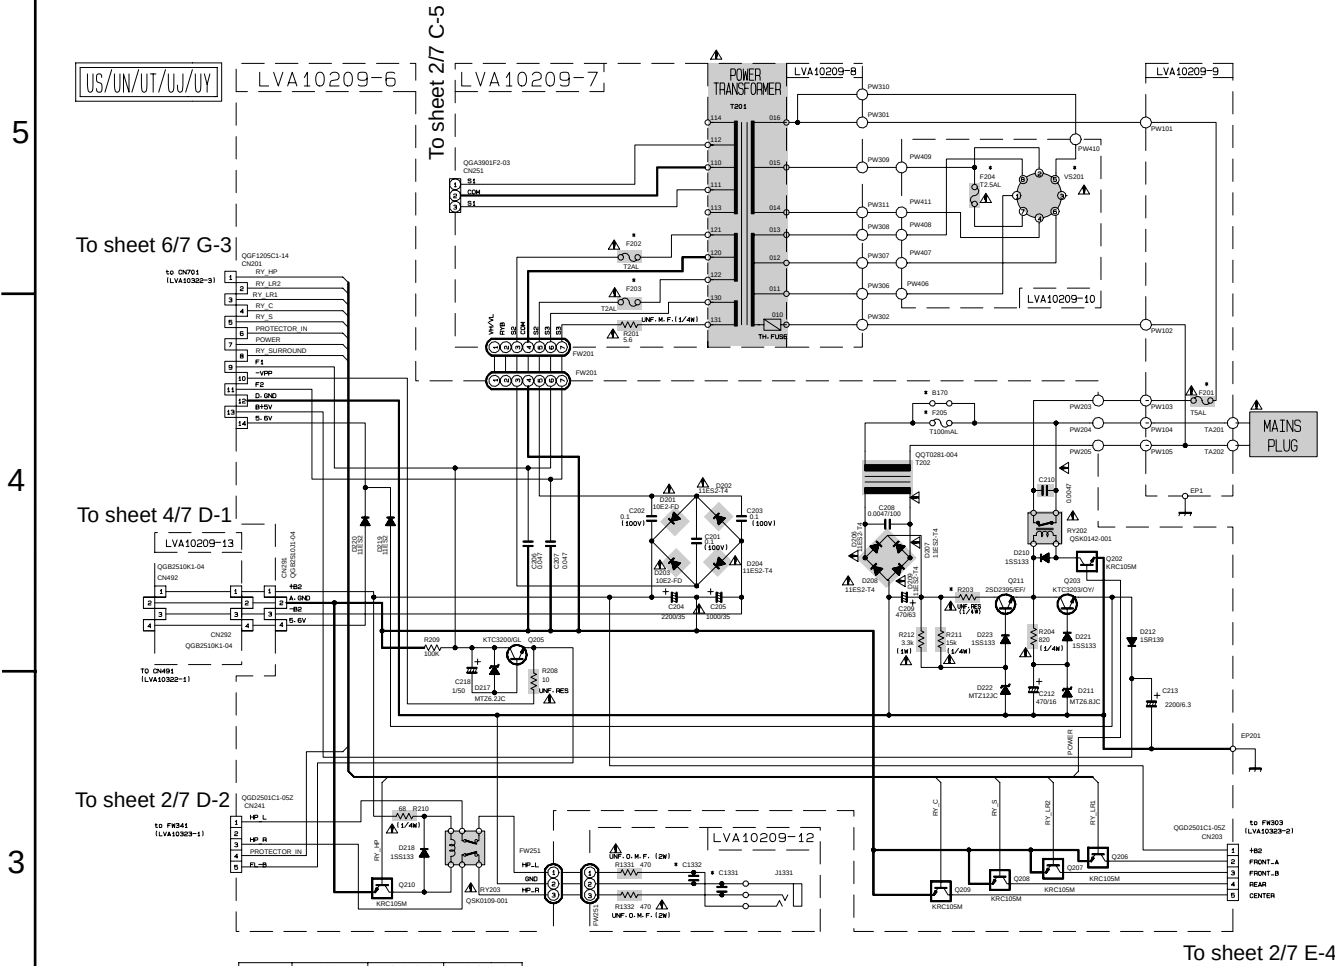


U/C	B/E/VEN/VP/A	US/A/N/A/U/Y
F201	QMP31U1-290-B (6.3A-125V)	QMP31A2-290-B (5A-250V)
F202-F203	QMP31U1-290-B (6A-125V)	QMP31A2-290-B (5A-250V)
F204	NONE	QMP31A2-290-B (5A-250V)
F205	NONE	QMP31E2-910-U1 (100mA-250V)
B170	USE	NONE
Y201	NONE	USE

U/C	B/E/VEN/VP/A	US/A/N/A/U/Y	VP/A
R11-R12	USE	NONE	NONE
R13-R14	USE	NONE	USE
R15-R16	USE	USE	NONE
R17	USE	USE	NONE
R18	USE	USE	NONE
R19	USE	USE	NONE
R20	USE	USE	NONE
R21	USE	USE	NONE
R22	USE	USE	NONE
R23	USE	USE	NONE
R24	USE	USE	NONE
R25	USE	USE	NONE
R26	USE	USE	NONE
R27	USE	USE	NONE
R28	USE	USE	NONE
R29	USE	USE	NONE
R30	USE	USE	NONE
R31	USE	USE	NONE
R32	USE	USE	NONE
R33	USE	USE	NONE
R34	USE	USE	NONE
R35	USE	USE	NONE
R36	USE	USE	NONE
R37	USE	USE	NONE
R38	USE	USE	NONE
R39	USE	USE	NONE
R40	USE	USE	NONE
R41	USE	USE	NONE
R42	USE	USE	NONE
R43	USE	USE	NONE
R44	USE	USE	NONE
R45	USE	USE	NONE
R46	USE	USE	NONE
R47	USE	USE	NONE
R48	USE	USE	NONE
R49	USE	USE	NONE
R50	USE	USE	NONE
R51	USE	USE	NONE
R52	USE	USE	NONE
R53	USE	USE	NONE
R54	USE	USE	NONE
R55	USE	USE	NONE
R56	USE	USE	NONE
R57	USE	USE	NONE
R58	USE	USE	NONE
R59	USE	USE	NONE
R60	USE	USE	NONE
R61	USE	USE	NONE
R62	USE	USE	NONE
R63	USE	USE	NONE
R64	USE	USE	NONE
R65	USE	USE	NONE
R66	USE	USE	NONE
R67	USE	USE	NONE
R68	USE	USE	NONE
R69	USE	USE	NONE
R70	USE	USE	NONE
R71	USE	USE	NONE
R72	USE	USE	NONE
R73	USE	USE	NONE
R74	USE	USE	NONE
R75	USE	USE	NONE
R76	USE	USE	NONE
R77	USE	USE	NONE
R78	USE	USE	NONE
R79	USE	USE	NONE
R80	USE	USE	NONE
R81	USE	USE	NONE
R82	USE	USE	NONE
R83	USE	USE	NONE
R84	USE	USE	NONE
R85	USE	USE	NONE
R86	USE	USE	NONE
R87	USE	USE	NONE
R88	USE	USE	NONE
R89	USE	USE	NONE
R90	USE	USE	NONE
R91	USE	USE	NONE
R92	USE	USE	NONE
R93	USE	USE	NONE
R94	USE	USE	NONE
R95	USE	USE	NONE
R96	USE	USE	NONE
R97	USE	USE	NONE
R98	USE	USE	NONE
R99	USE	USE	NONE
R100	USE	USE	NONE





SHEET No.	CIRCUIT DESCRIPTION
1 / 7	POWER SUPPLY / AUDIO VIDEO SIGNAL INPUT TERMINAL
2 / 7	SPEAKER TERMINAL
3 / 7	AUDIO AMP
4 / 7	VOLUME / REGULATOR / SOURCE SELECT IC
5 / 7	SURROUND IC / DIGITAL SIGNAL INPUT TERMINAL
6 / 7	USER CONTROL KEY / SYSTEM CONTROL LSI / FL DISPLAY
7 / 7	TUNER

Parts are safety assurance parts. When replacing those parts make sure to use the specified.

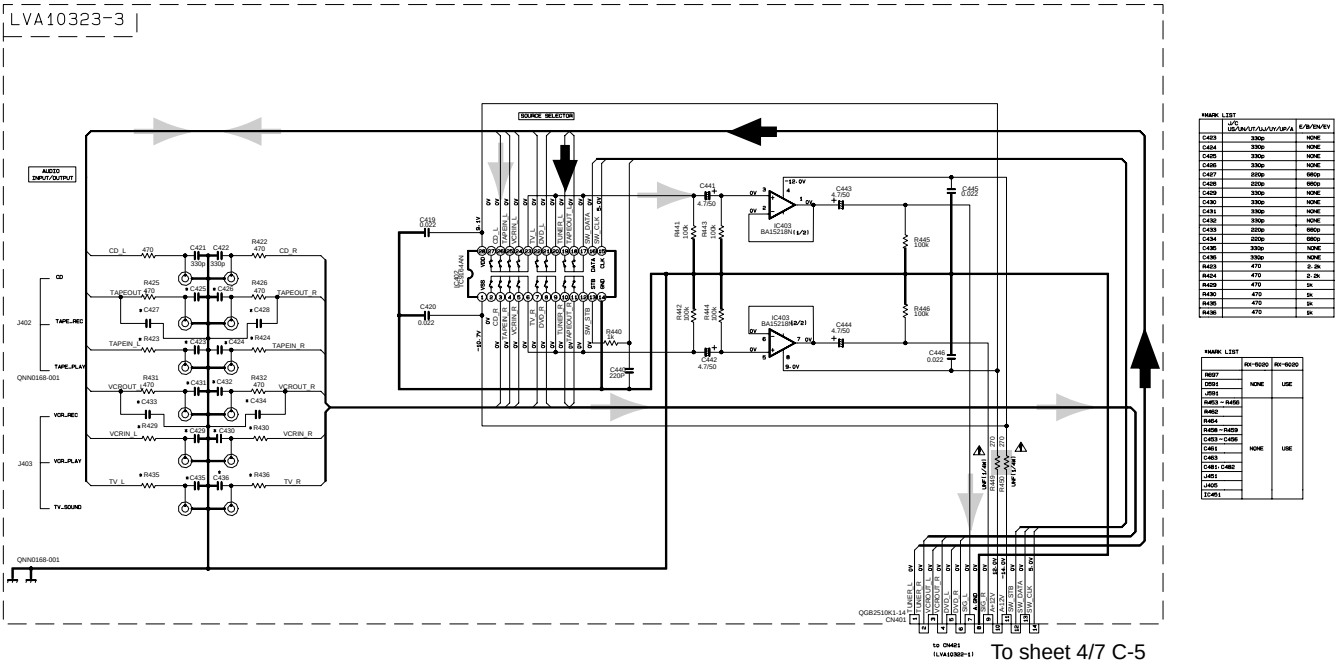


NAME	LIST	RY-REDO	RY-REDO
C401	3300	NONE	USE
C402	3300	NONE	USE
C403	3300	NONE	USE
C404	3300	NONE	USE
C405	3300	NONE	USE
C406	3300	NONE	USE
C407	3300	NONE	USE
C408	3300	NONE	USE
C409	3300	NONE	USE
C410	3300	NONE	USE
C411	3300	NONE	USE
C412	3300	NONE	USE
C413	3300	NONE	USE
C414	3300	NONE	USE
C415	3300	NONE	USE
C416	3300	NONE	USE
C417	3300	NONE	USE
C418	3300	NONE	USE
C419	3300	NONE	USE
C420	3300	NONE	USE
C421	3300	NONE	USE
C422	3300	NONE	USE
C423	3300	NONE	USE
C424	3300	NONE	USE
C425	3300	NONE	USE
C426	3300	NONE	USE
C427	3300	NONE	USE
C428	3300	NONE	USE
C429	3300	NONE	USE
C430	3300	NONE	USE
C431	3300	NONE	USE
C432	3300	NONE	USE
C433	3300	NONE	USE
C434	3300	NONE	USE
C435	3300	NONE	USE
C436	3300	NONE	USE
C437	3300	NONE	USE
C438	3300	NONE	USE
C439	3300	NONE	USE
C440	3300	NONE	USE
C441	3300	NONE	USE
C442	3300	NONE	USE
C443	3300	NONE	USE
C444	3300	NONE	USE
C445	3300	NONE	USE
C446	3300	NONE	USE
C447	3300	NONE	USE
C448	3300	NONE	USE
C449	3300	NONE	USE
C450	3300	NONE	USE
C451	3300	NONE	USE
C452	3300	NONE	USE
C453	3300	NONE	USE
C454	3300	NONE	USE
C455	3300	NONE	USE
C456	3300	NONE	USE
C457	3300	NONE	USE
C458	3300	NONE	USE
C459	3300	NONE	USE
C460	3300	NONE	USE
C461	3300	NONE	USE
C462	3300	NONE	USE
C463	3300	NONE	USE
C464	3300	NONE	USE
C465	3300	NONE	USE
C466	3300	NONE	USE
C467	3300	NONE	USE
C468	3300	NONE	USE
C469	3300	NONE	USE
C470	3300	NONE	USE
C471	3300	NONE	USE
C472	3300	NONE	USE
C473	3300	NONE	USE
C474	3300	NONE	USE
C475	3300	NONE	USE
C476	3300	NONE	USE
C477	3300	NONE	USE
C478	3300	NONE	USE
C479	3300	NONE	USE
C480	3300	NONE	USE
C481	3300	NONE	USE
C482	3300	NONE	USE
C483	3300	NONE	USE
C484	3300	NONE	USE
C485	3300	NONE	USE
C486	3300	NONE	USE
C487	3300	NONE	USE
C488	3300	NONE	USE
C489	3300	NONE	USE
C490	3300	NONE	USE
C491	3300	NONE	USE
C492	3300	NONE	USE
C493	3300	NONE	USE
C494	3300	NONE	USE
C495	3300	NONE	USE
C496	3300	NONE	USE
C497	3300	NONE	USE
C498	3300	NONE	USE
C499	3300	NONE	USE
C500	3300	NONE	USE

NAME	LIST	RY-REDO	RY-REDO
R401	3300	NONE	USE
R402	3300	NONE	USE
R403	3300	NONE	USE
R404	3300	NONE	USE
R405	3300	NONE	USE
R406	3300	NONE	USE
R407	3300	NONE	USE
R408	3300	NONE	USE
R409	3300	NONE	USE
R410	3300	NONE	USE
R411	3300	NONE	USE
R412	3300	NONE	USE
R413	3300	NONE	USE
R414	3300	NONE	USE
R415	3300	NONE	USE
R416	3300	NONE	USE
R417	3300	NONE	USE
R418	3300	NONE	USE
R419	3300	NONE	USE
R420	3300	NONE	USE
R421	3300	NONE	USE
R422	3300	NONE	USE
R423	3300	NONE	USE
R424	3300	NONE	USE
R425	3300	NONE	USE
R426	3300	NONE	USE
R427	3300	NONE	USE
R428	3300	NONE	USE
R429	3300	NONE	USE
R430	3300	NONE	USE
R431	3300	NONE	USE
R432	3300	NONE	USE
R433	3300	NONE	USE
R434	3300	NONE	USE
R435	3300	NONE	USE
R436	3300	NONE	USE
R437	3300	NONE	USE
R438	3300	NONE	USE
R439	3300	NONE	USE
R440	3300	NONE	USE
R441	3300	NONE	USE
R442	3300	NONE	USE
R443	3300	NONE	USE
R444	3300	NONE	USE
R445	3300	NONE	USE
R446	3300	NONE	USE
R447	3300	NONE	USE
R448	3300	NONE	USE
R449	3300	NONE	USE
R450	3300	NONE	USE
R451	3300	NONE	USE
R452	3300	NONE	USE
R453	3300	NONE	USE
R454	3300	NONE	USE
R455	3300	NONE	USE
R456	3300	NONE	USE
R457	3300	NONE	USE
R458	3300	NONE	USE
R459	3300	NONE	USE
R460	3300	NONE	USE
R461	3300	NONE	USE
R462	3300	NONE	USE
R463	3300	NONE	USE
R464	3300	NONE	USE
R465	3300	NONE	USE
R466	3300	NONE	USE
R467	3300	NONE	USE
R468	3300	NONE	USE
R469	3300	NONE	USE
R470	3300	NONE	USE
R471	3300	NONE	USE
R472	3300	NONE	USE
R473	3300	NONE	USE
R474	3300	NONE	USE
R475	3300	NONE	USE
R476	3300	NONE	USE
R477	3300	NONE	USE
R478	3300	NONE	USE
R479	3300	NONE	USE
R480	3300	NONE	USE
R481	3300	NONE	USE
R482	3300	NONE	USE
R483	3300	NONE	USE
R484	3300	NONE	USE
R485	3300	NONE	USE
R486	3300	NONE	USE
R487	3300	NONE	USE
R488	3300	NONE	USE
R489	3300	NONE	USE
R490	3300	NONE	USE
R491	3300	NONE	USE
R492	3300	NONE	USE
R493	3300	NONE	USE
R494	3300	NONE	USE
R495	3300	NONE	USE
R496	3300	NONE	USE
R497	3300	NONE	USE
R498	3300	NONE	USE
R499	3300	NONE	USE
R500	3300	NONE	USE

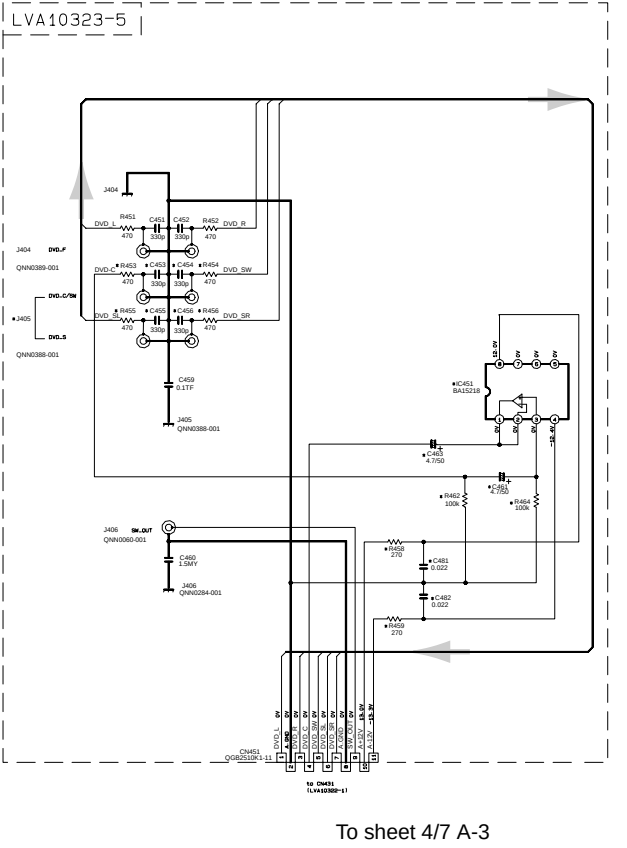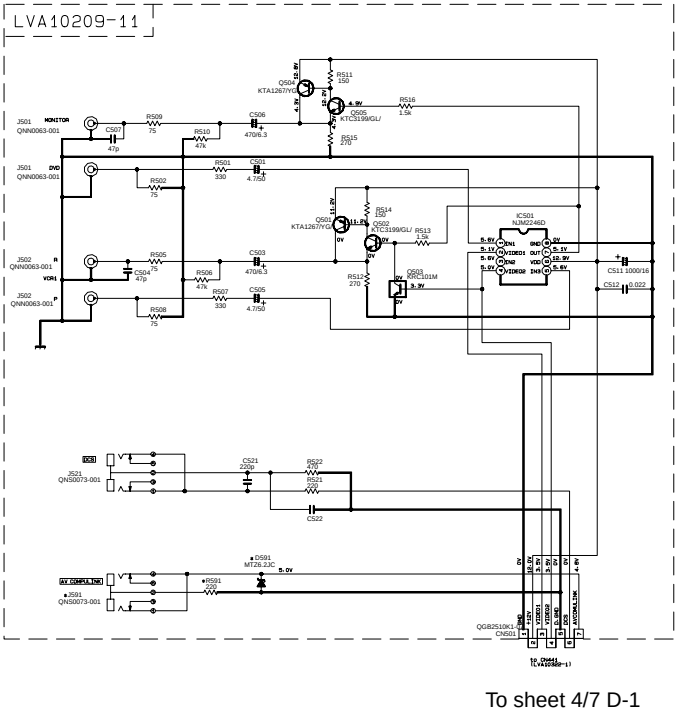


AUDIO signal
TUNER signal

■ Audio & Speaker terminal section

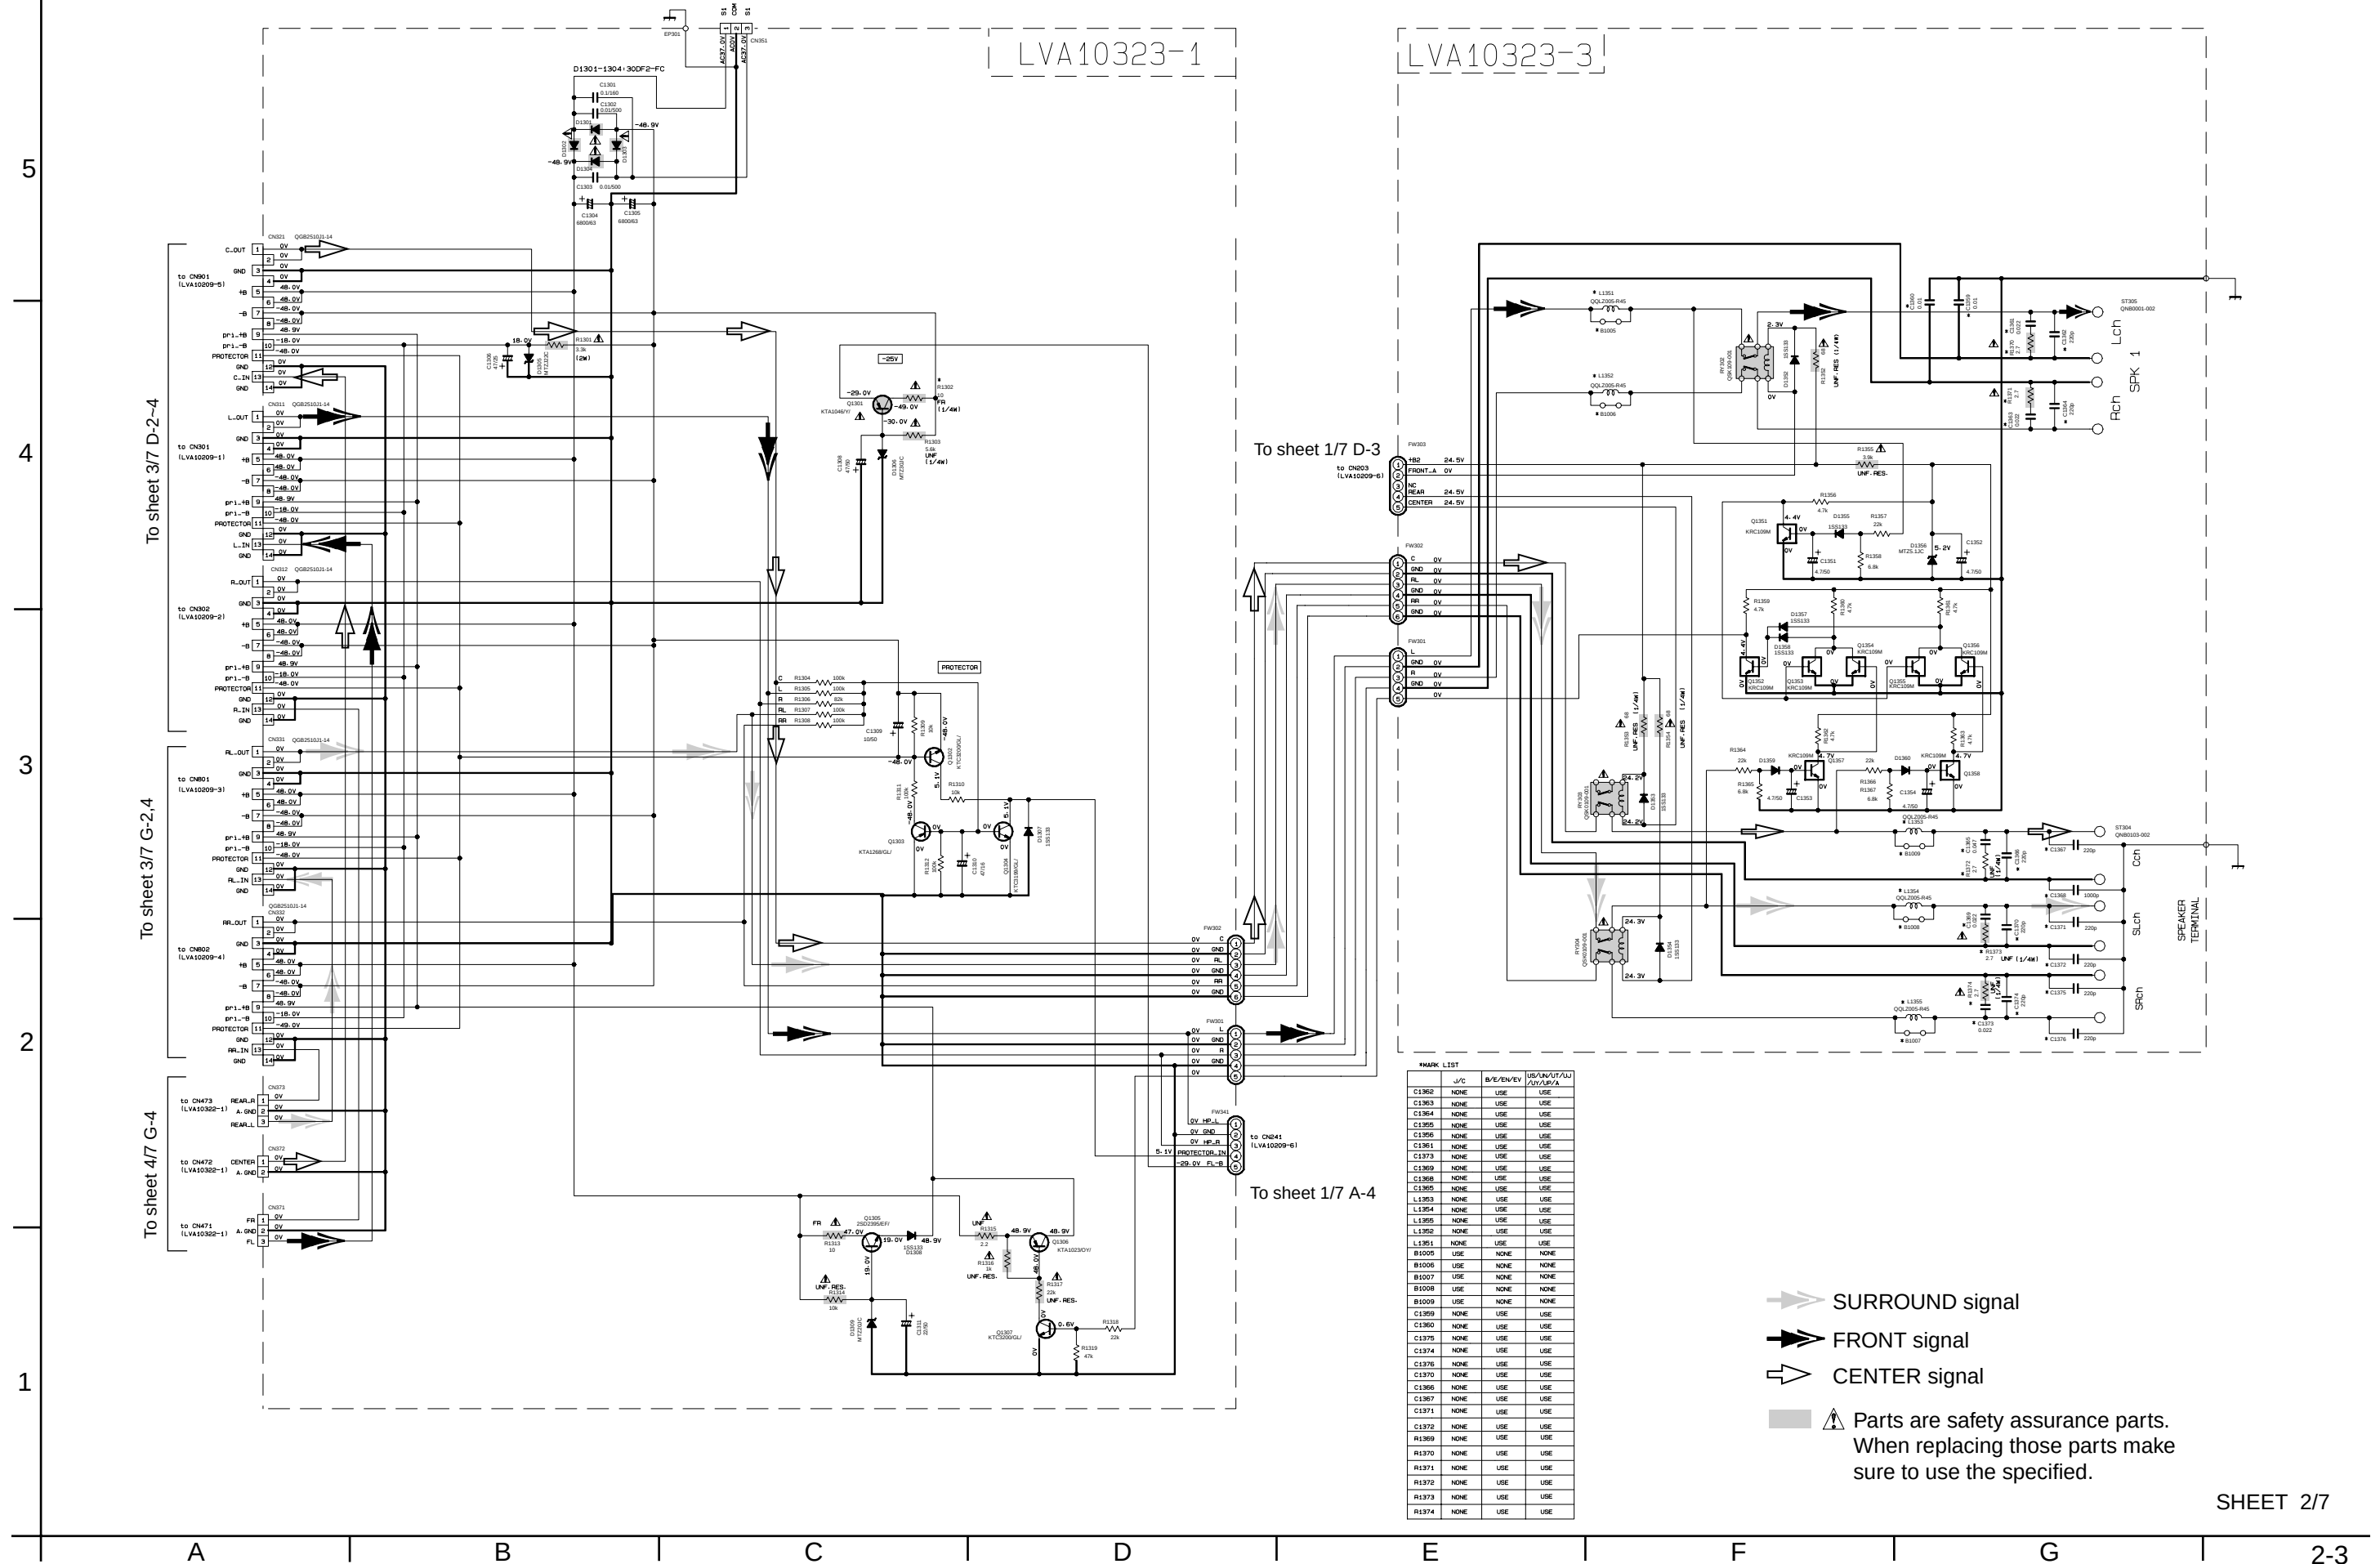



■ Main section
(Volume / Regulator / Source select)

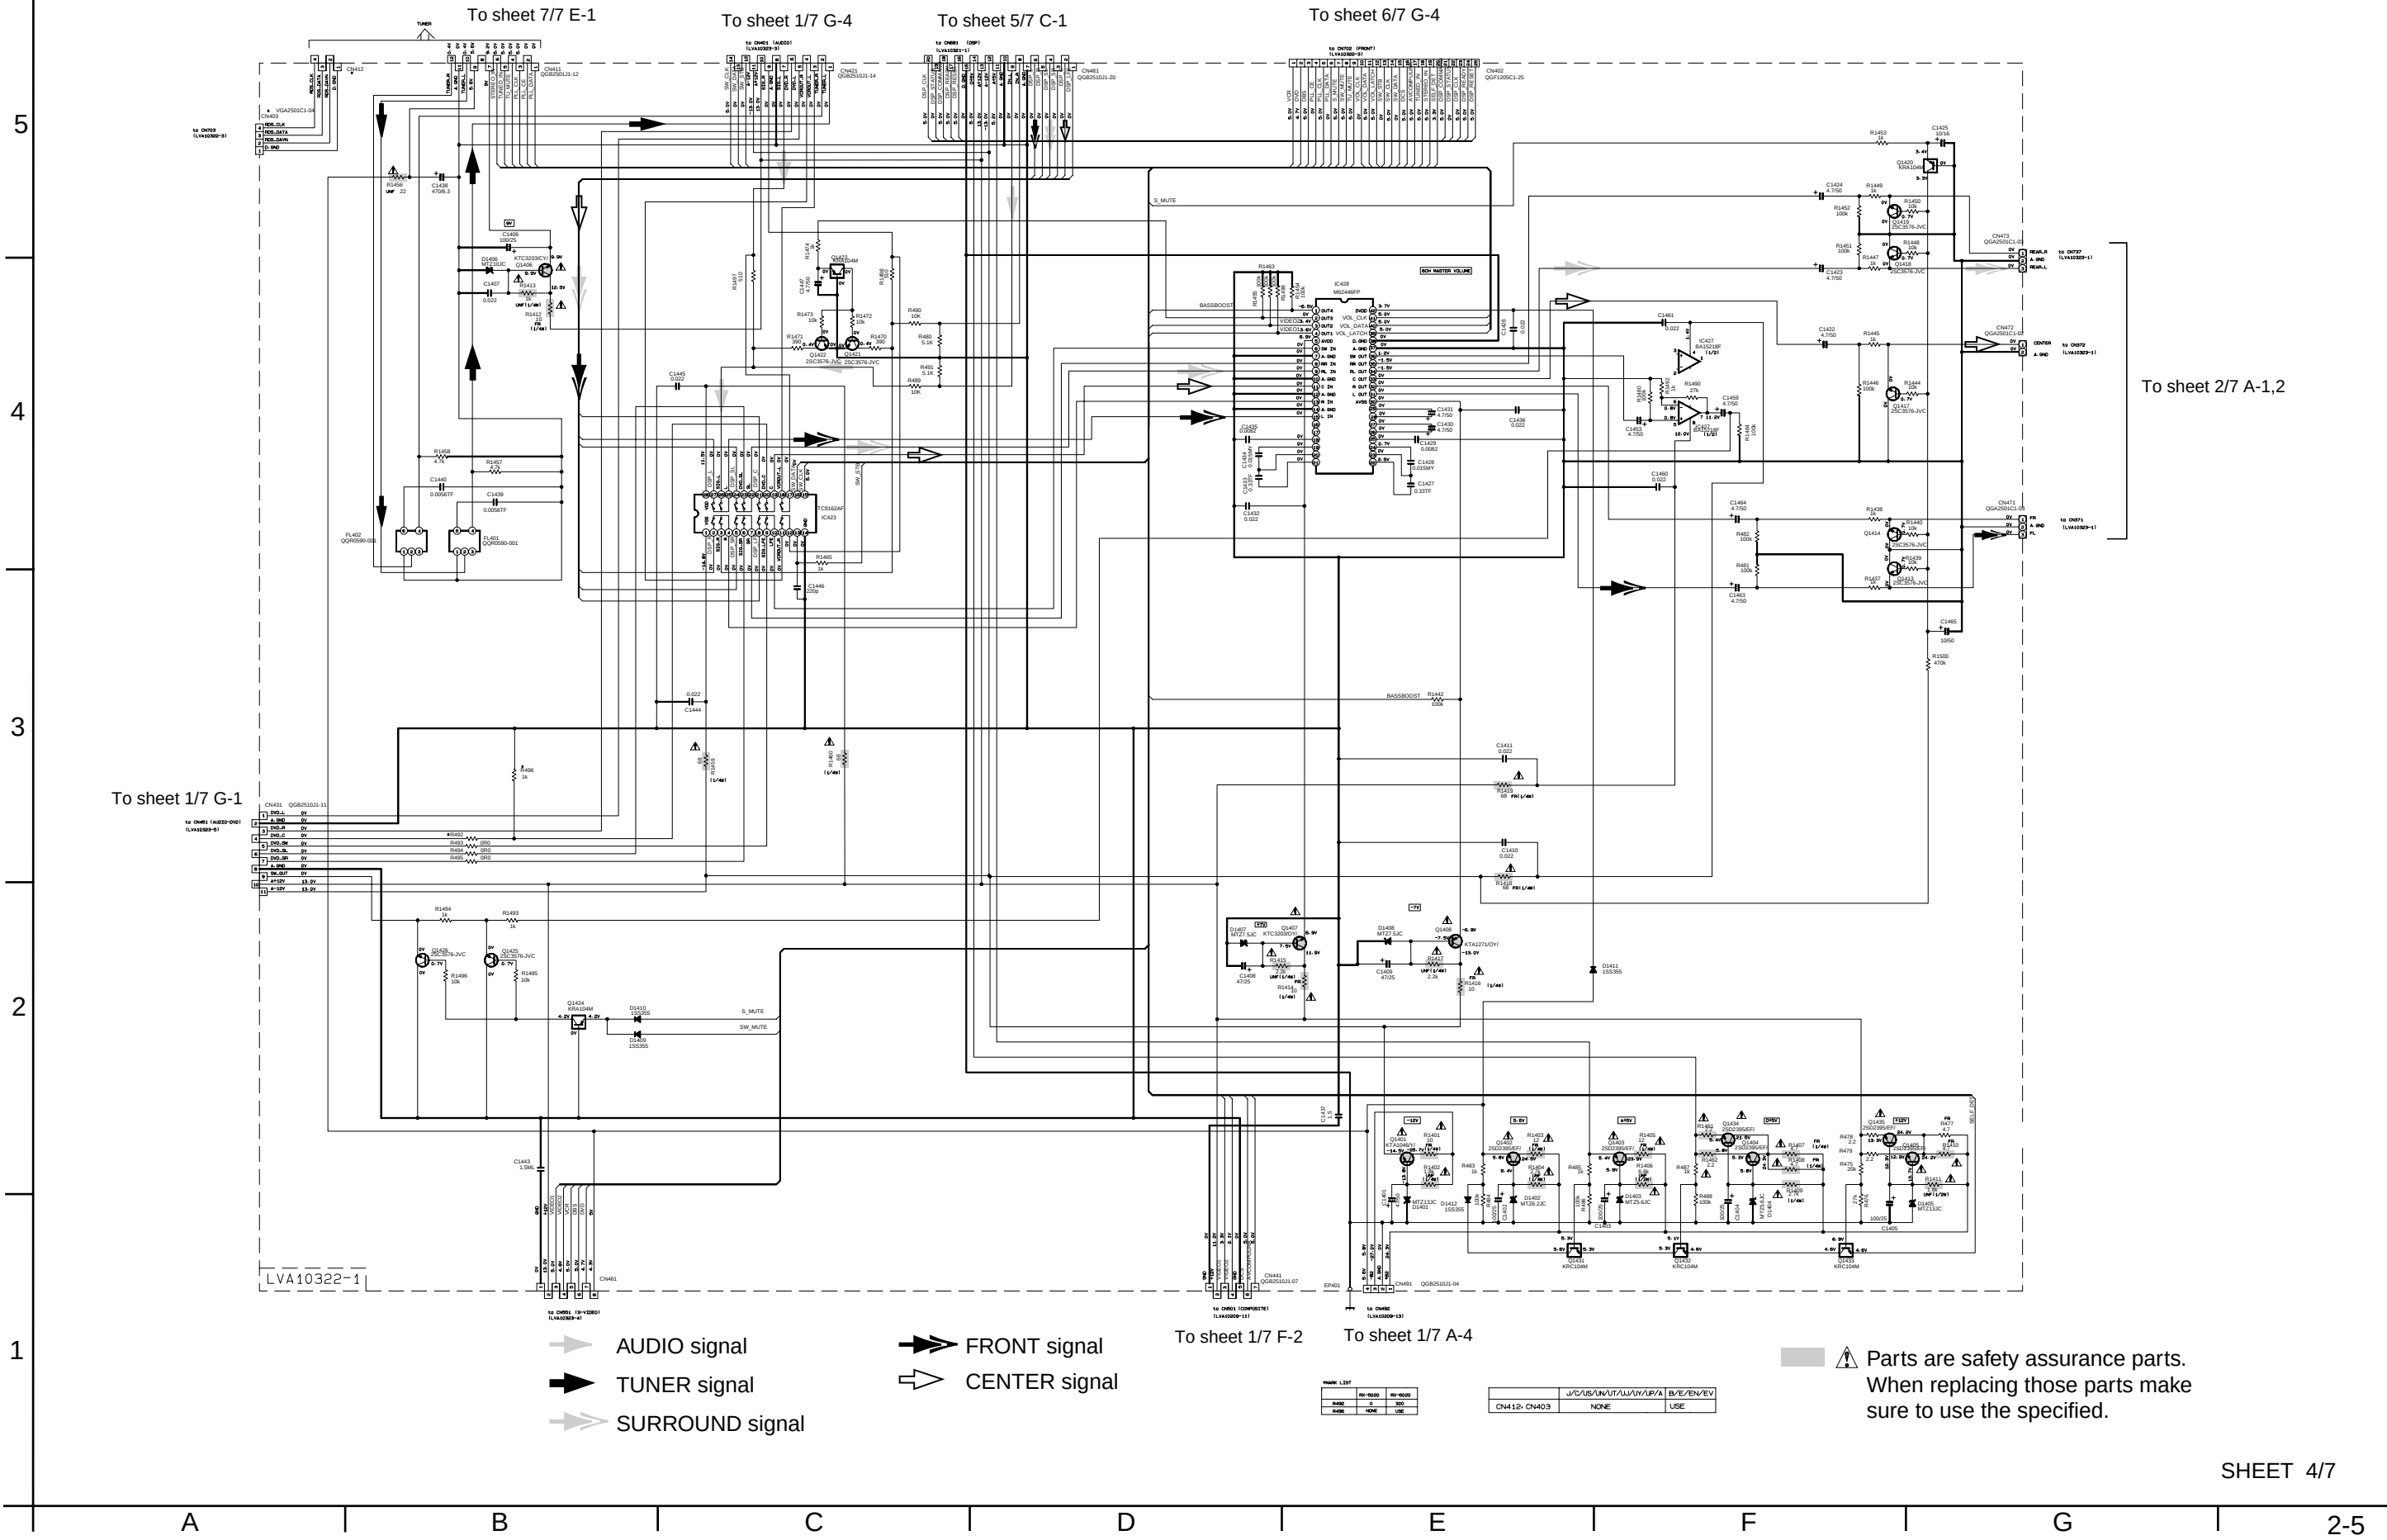



■ User control / System control / FL displaying section

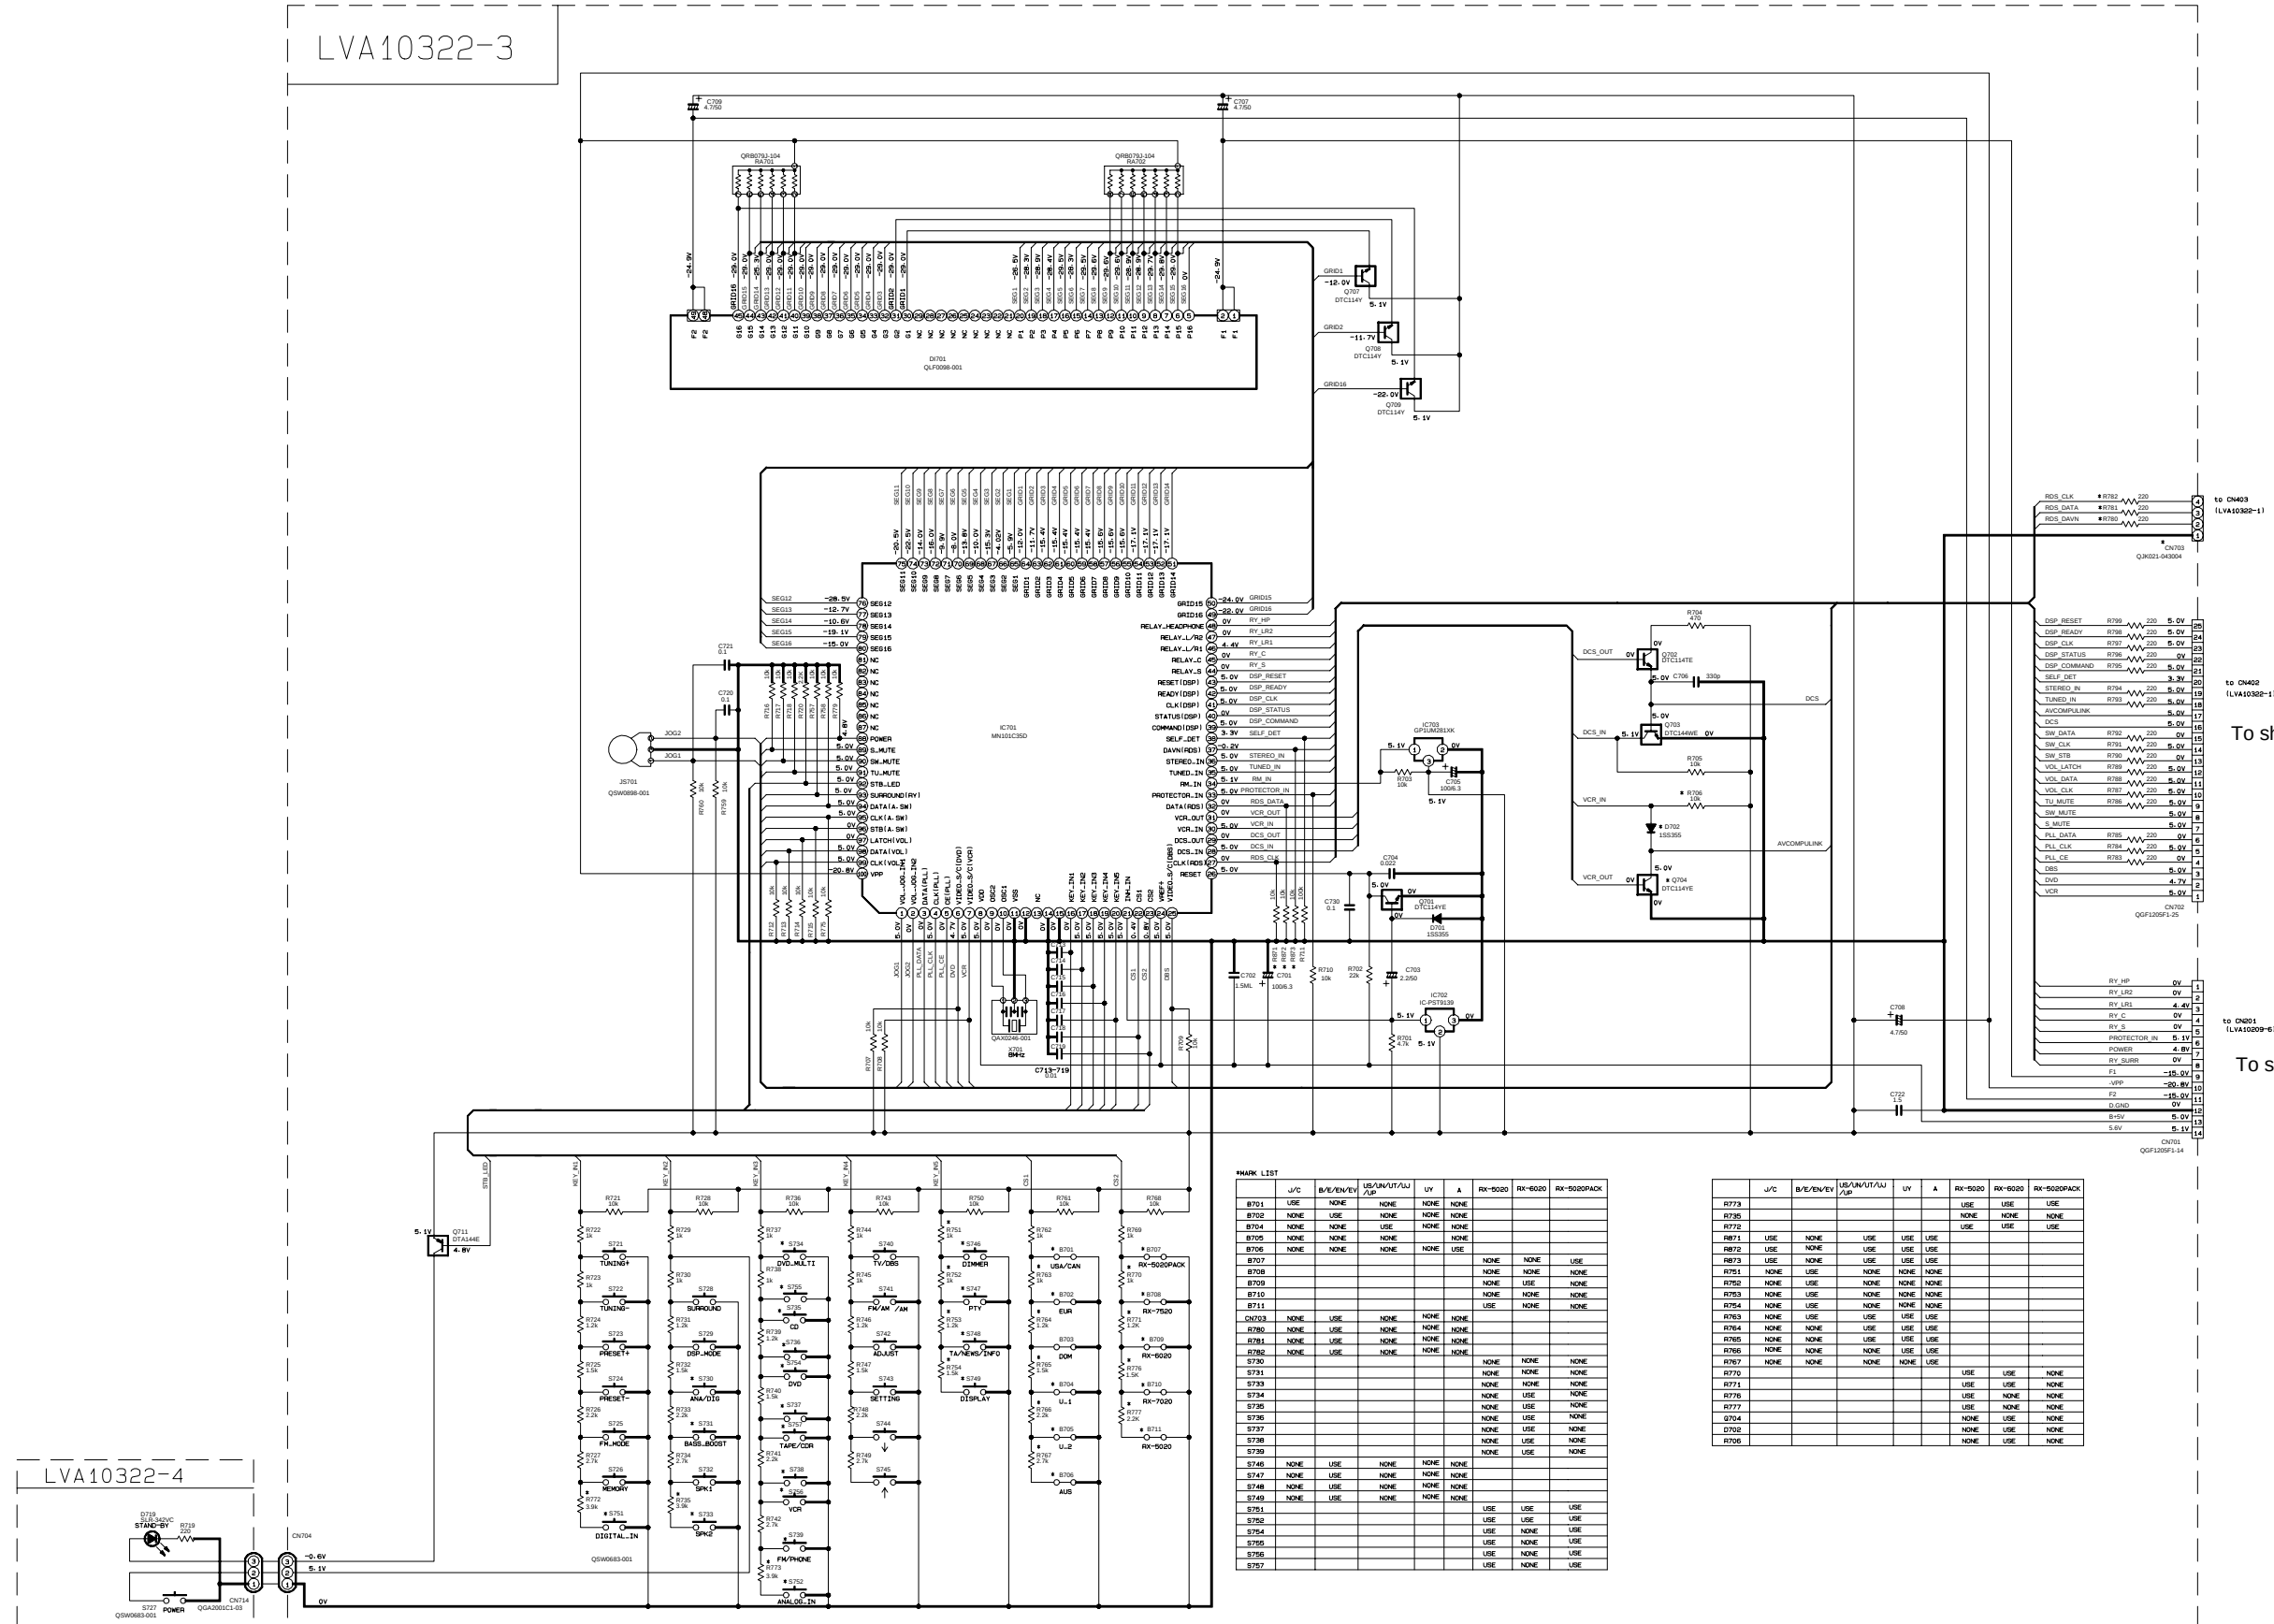

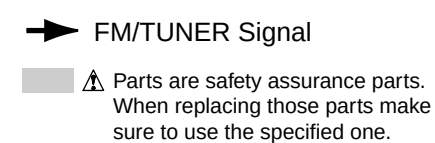


RX-5022VSL

RX-5022VSL

■ System control & Audio board


System control & displaying board

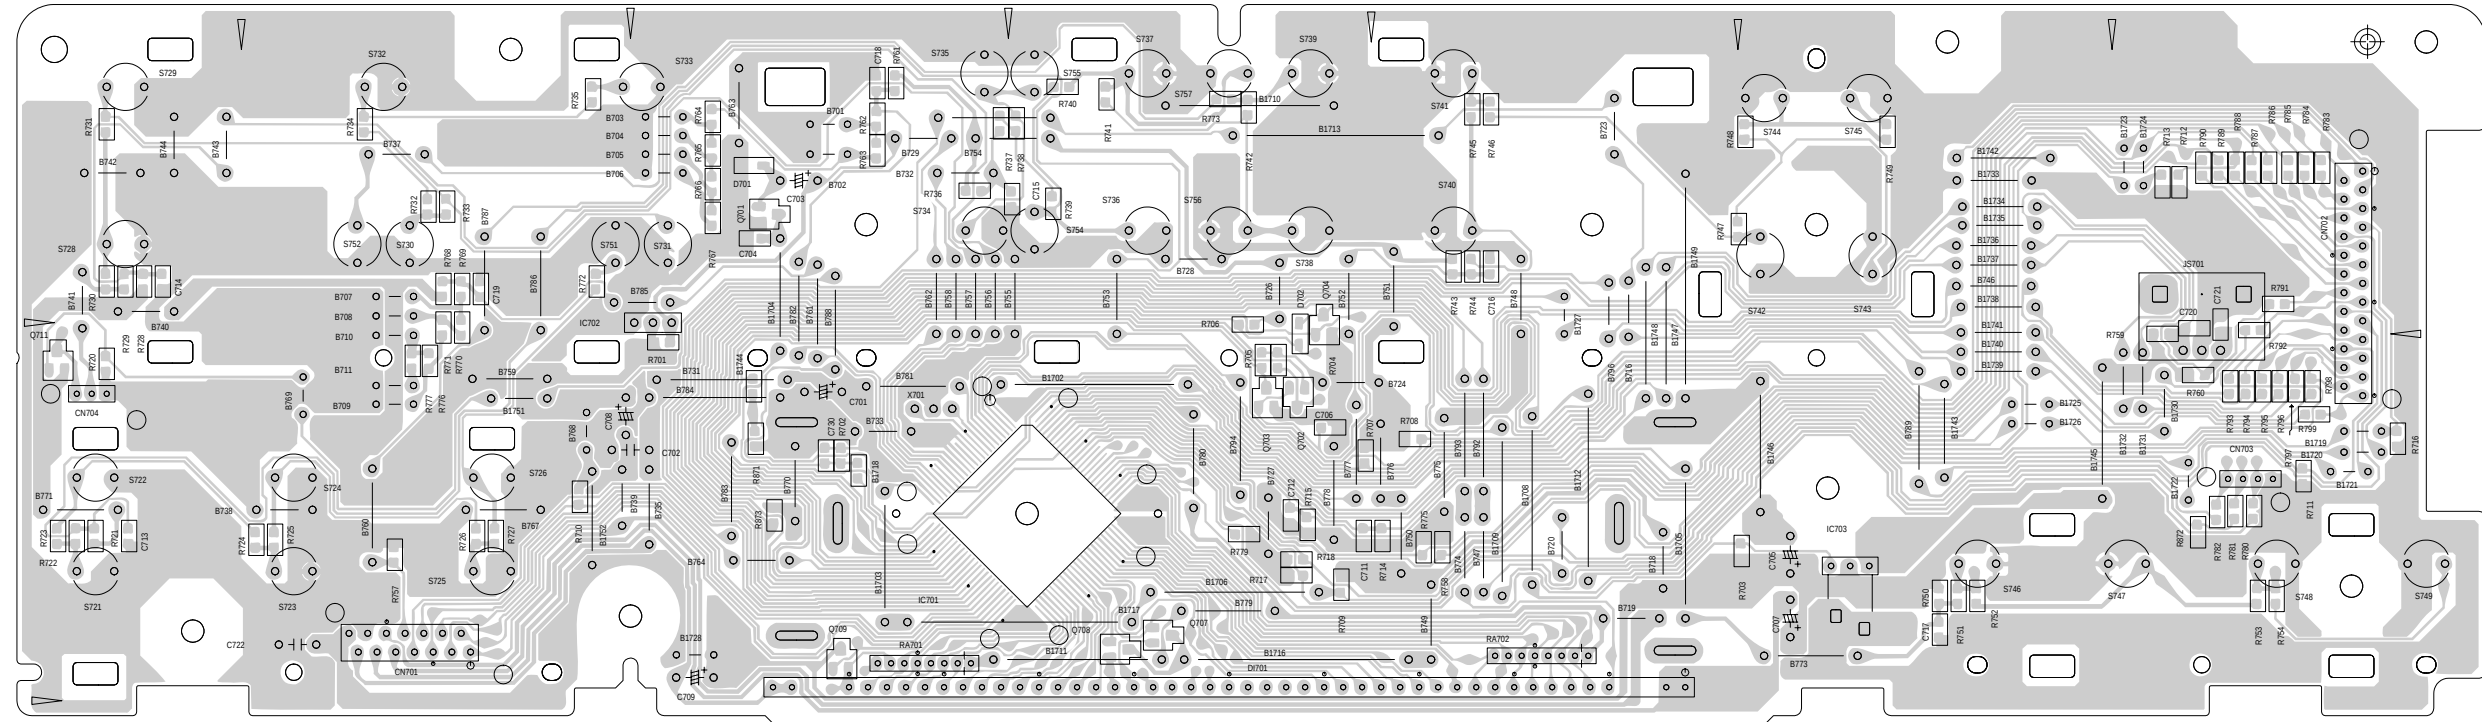


Audio board

Wire protection board

Power sw board

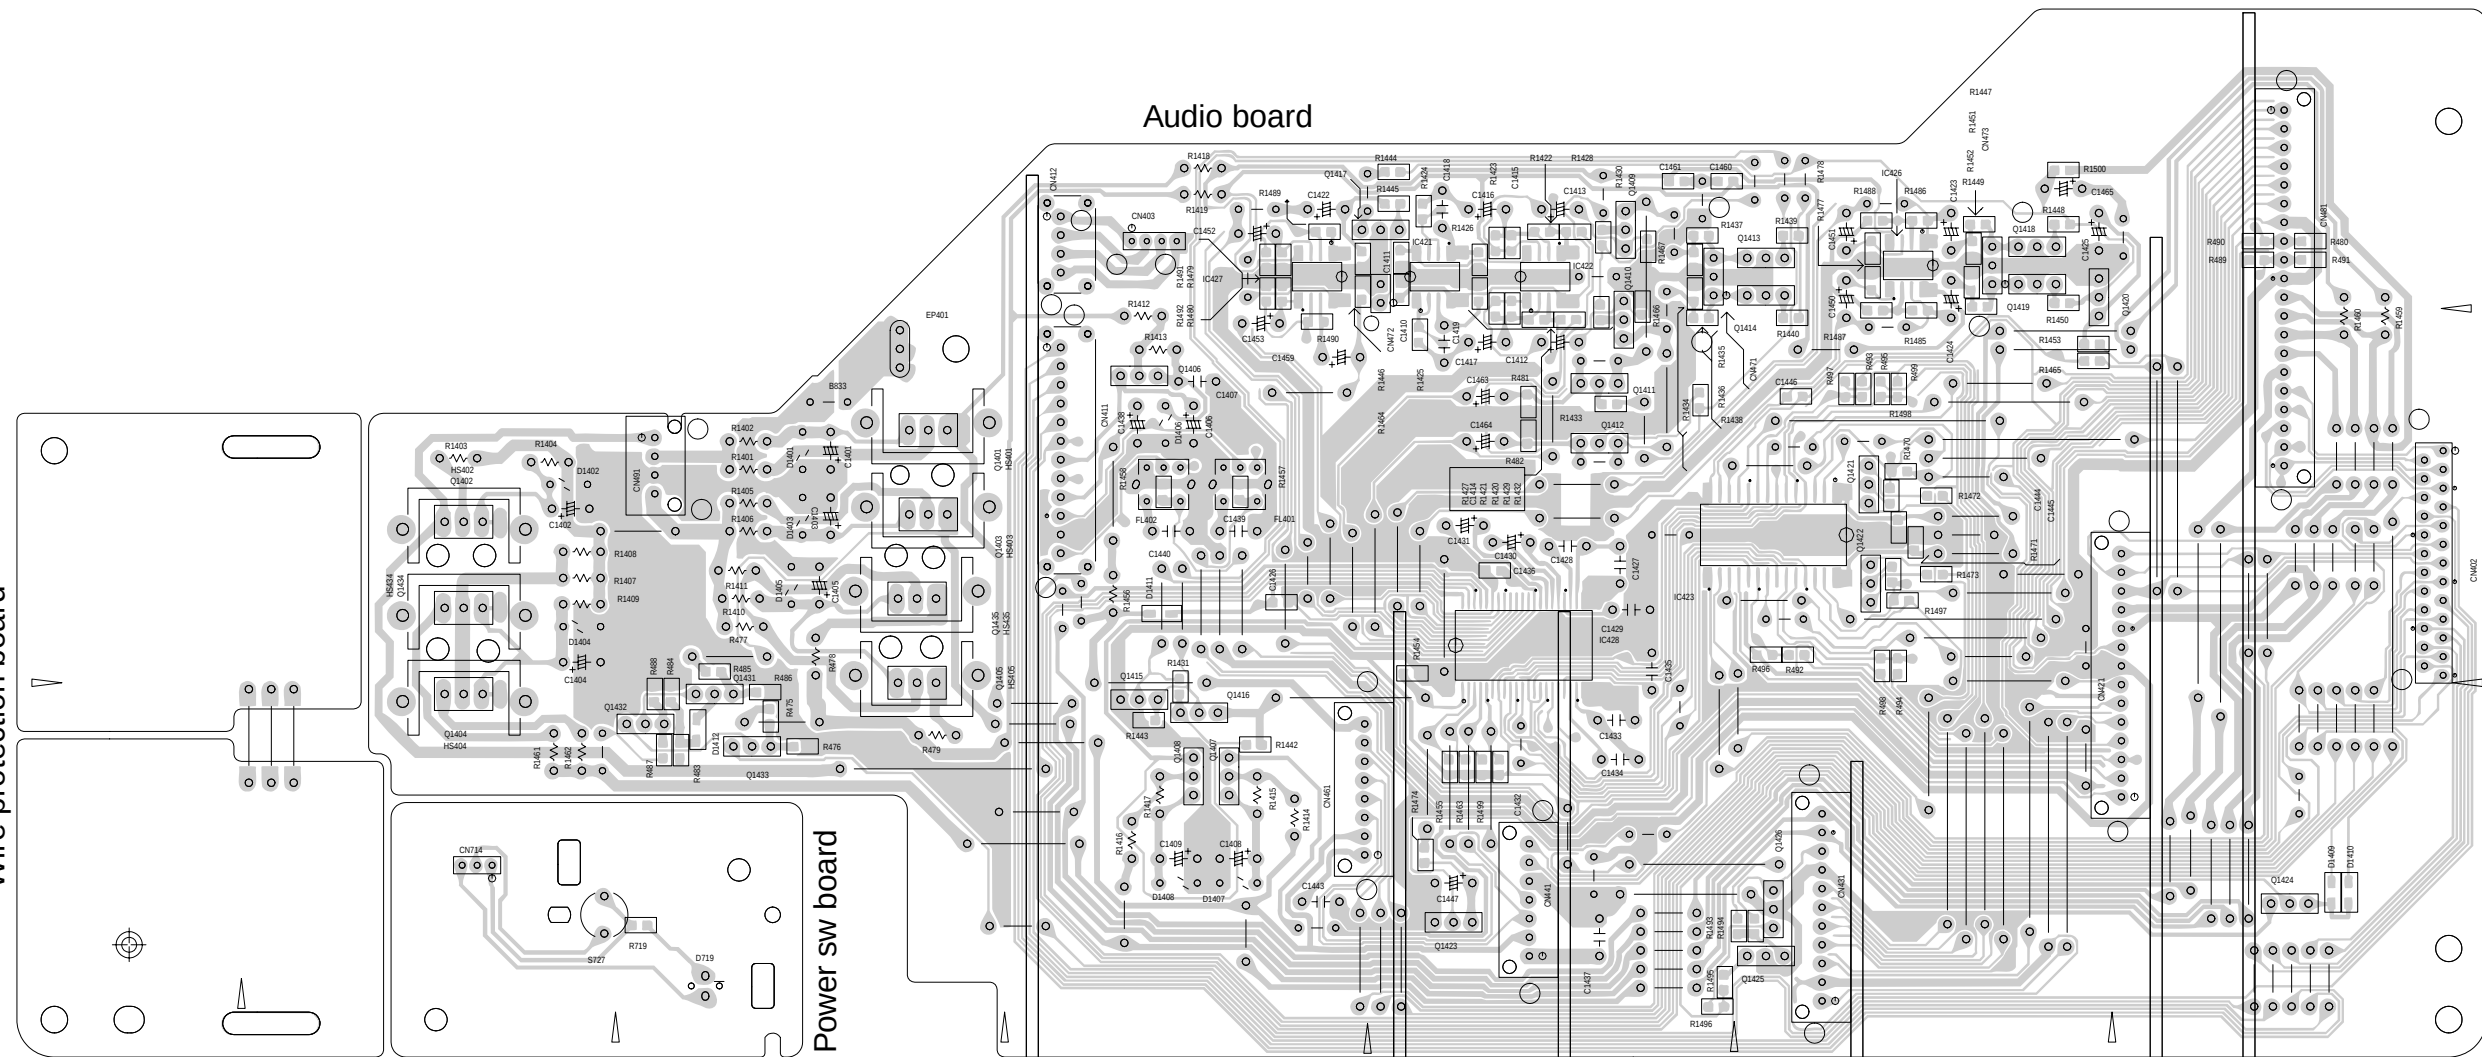

Power amplifier board

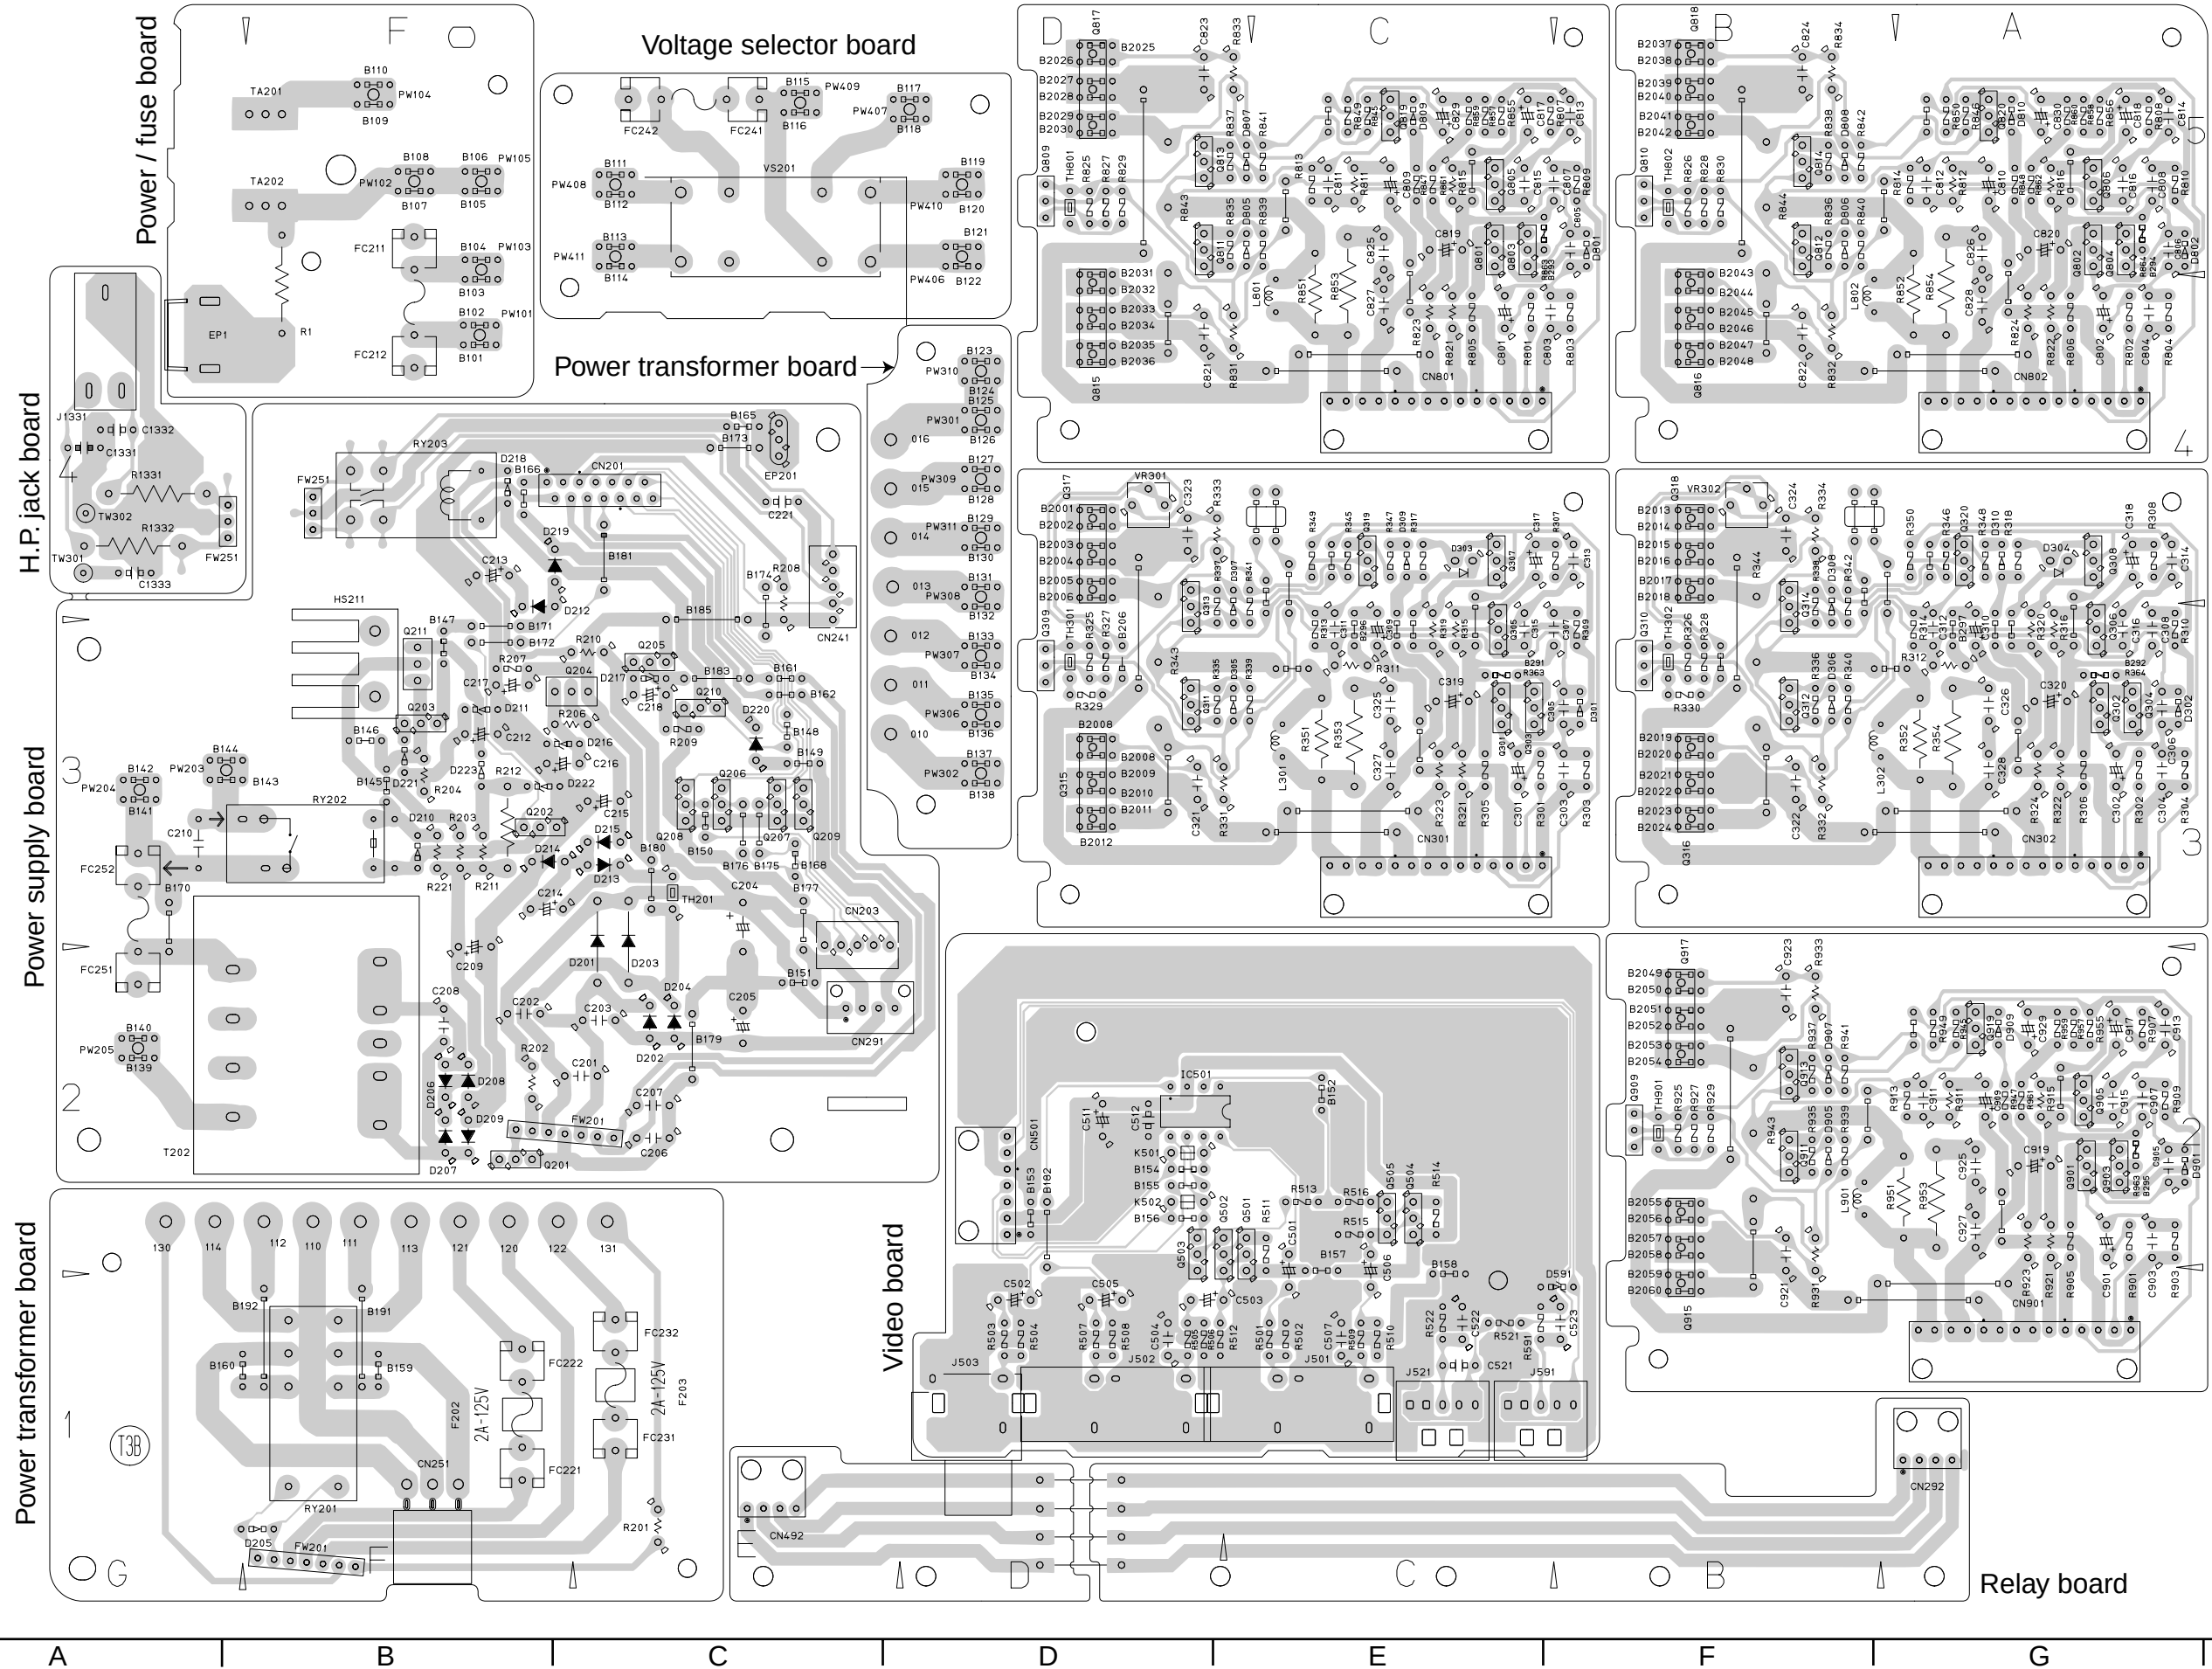

■ Tuner board